


PSC-E 18





de	Originalbetriebsanleitung	8
en	Original instructions	13
fr	Notice d'utilisation d'origine	18
es	Manual de instrucciones original	23
bg	Оригинална инструкция за експлоатация	28
cs	Původní návod k obsluze	34
da	Original brugsanvisning	39
el	Πρωτότυπο οδηγίων χρήσης	43
et	Originaalkasutusjuhend	49
fi	Alkuperäiset käyttöohjeet	53
hr	Originalne upute za uporabu	58
hu	Eredeti használati utasítás	63
it	Istruzioni d'esercizio originali	68

lv	Originālā lietošanas pamācība	73
lt	Originali naudojimo instrukcija	78
nb	Original bruksanvisning	83
nl	Originele gebruiksaanwijzing	88
pl	Oryginalna instrukcja obsługi	93
pt	Manual de instruções original	98
ro	Manualul de utilizare original	103
sk	Originálny návod na obsluhu	108
sl	Originalna navodila za uporabo	113
sv	Originalbruksanvisning	118
zh	原版使用说明书	123



1 PSC 18 E



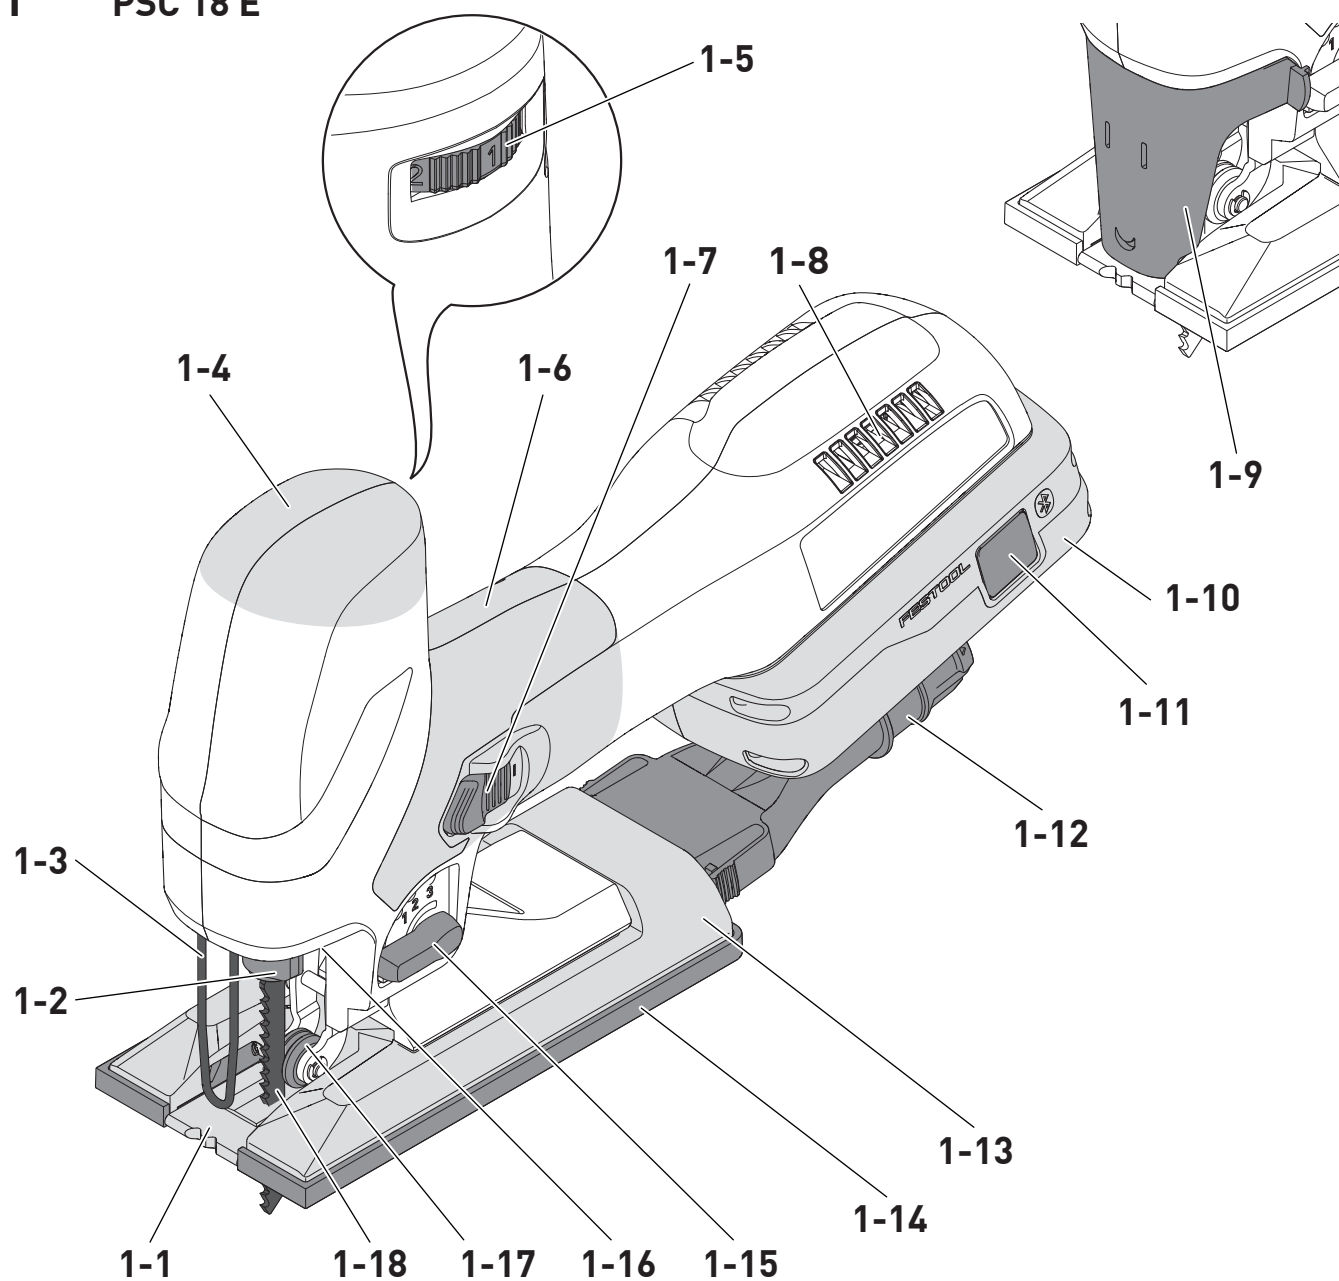


2A

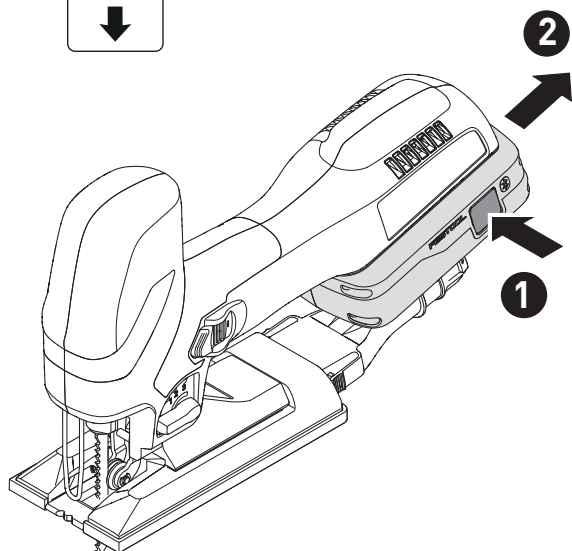 

2B

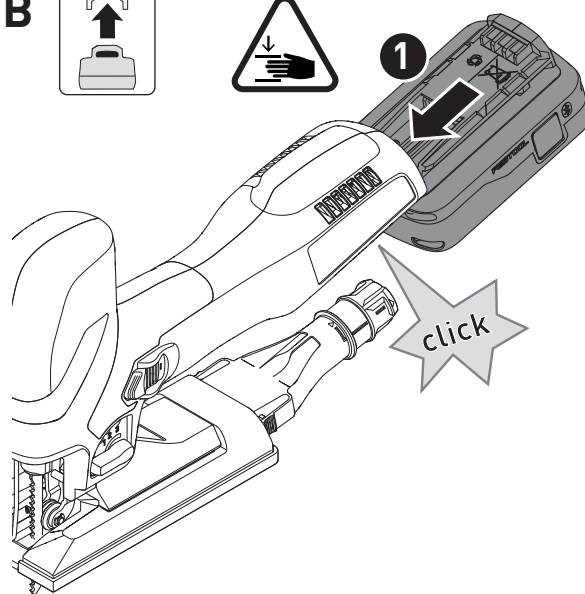 

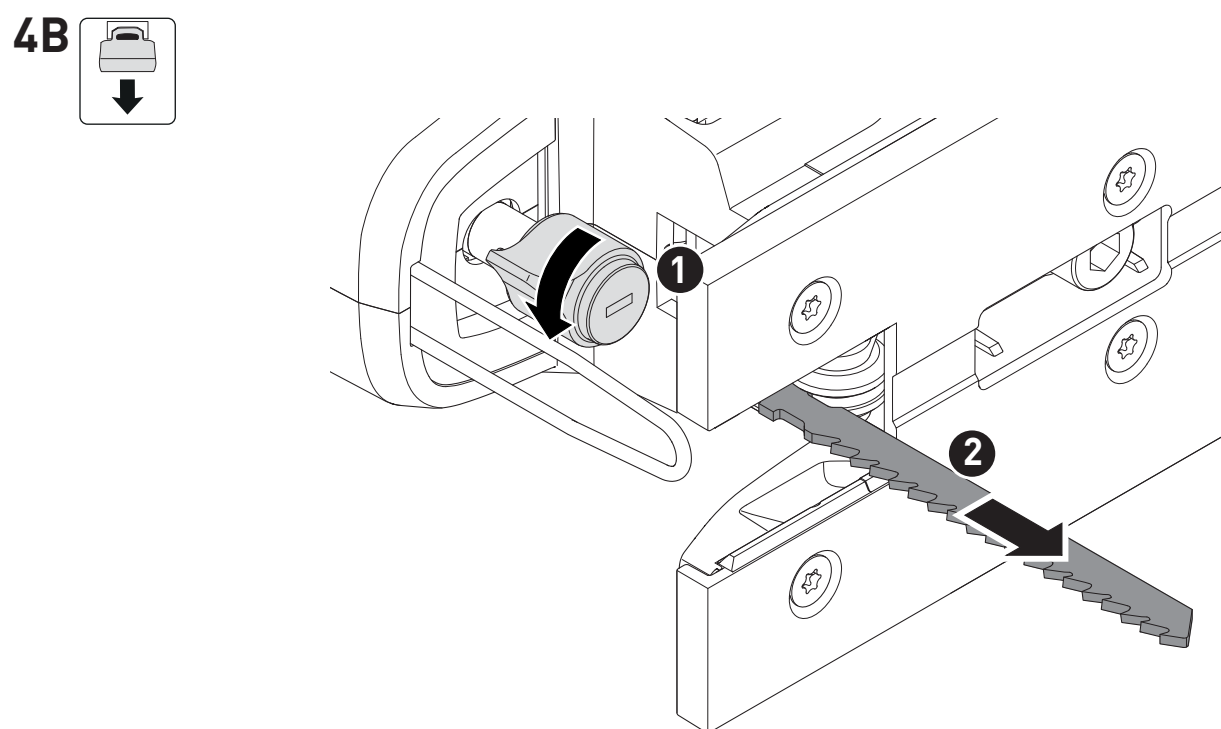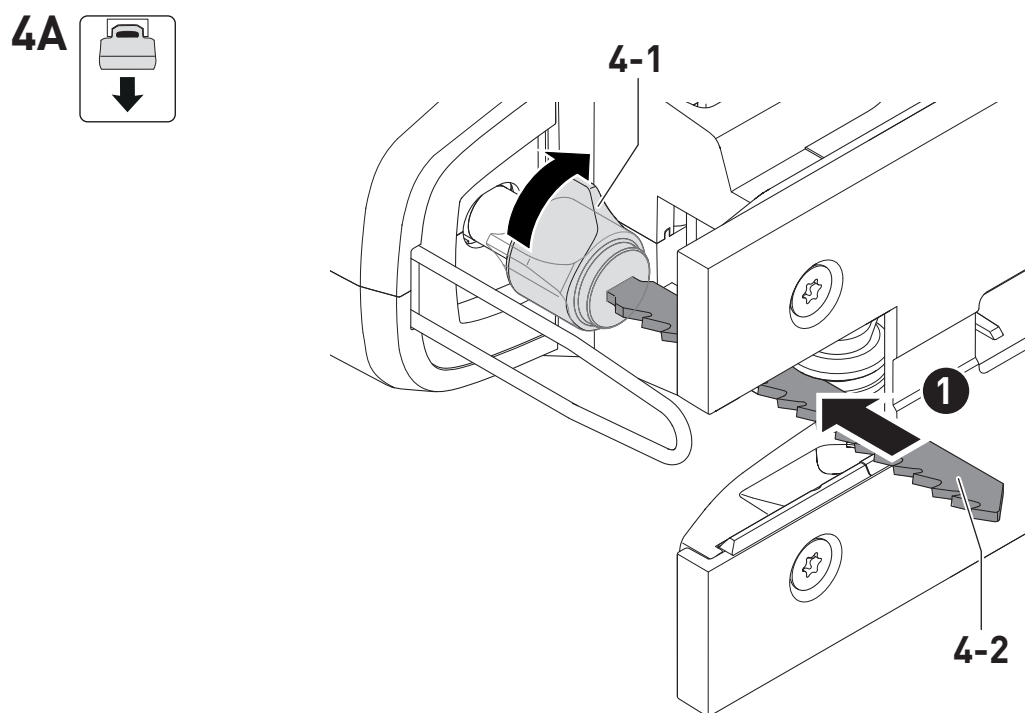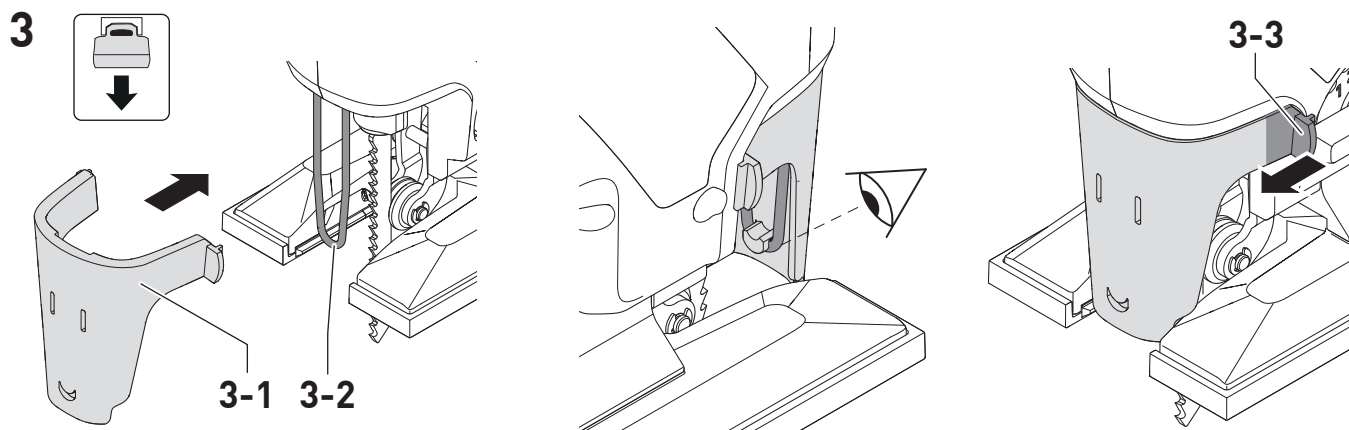

5





5-2




5-3

5-1



1

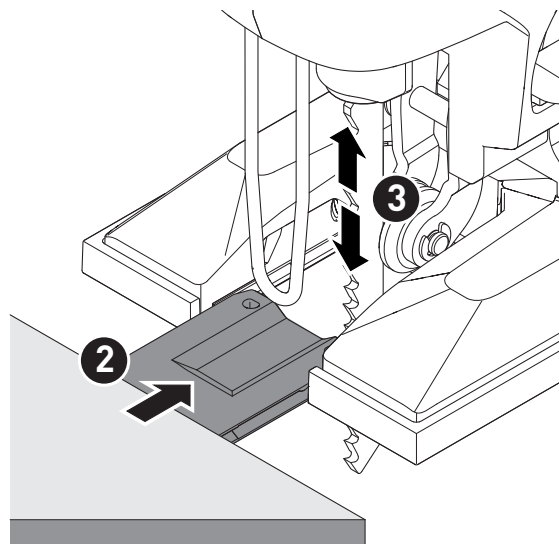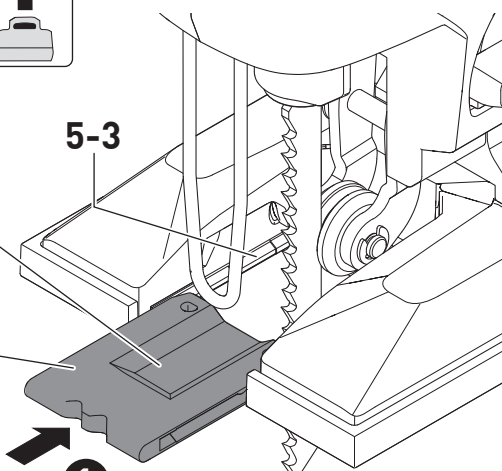


6

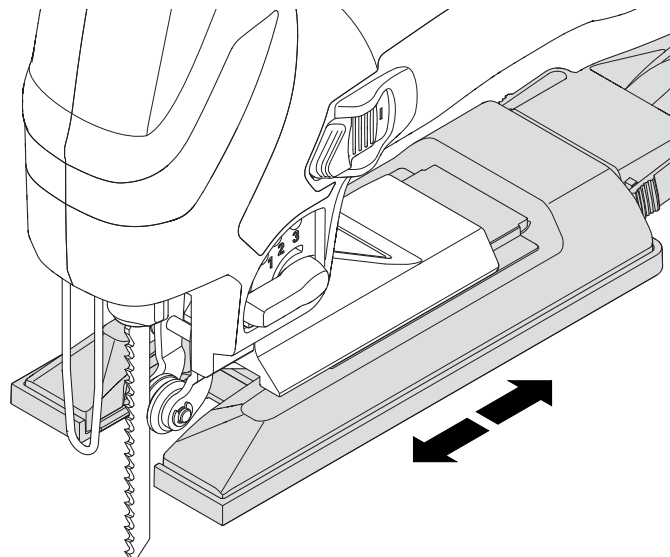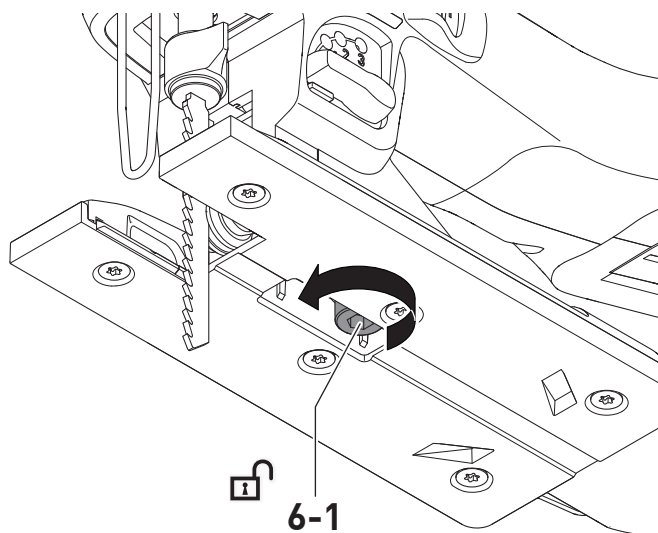 

7

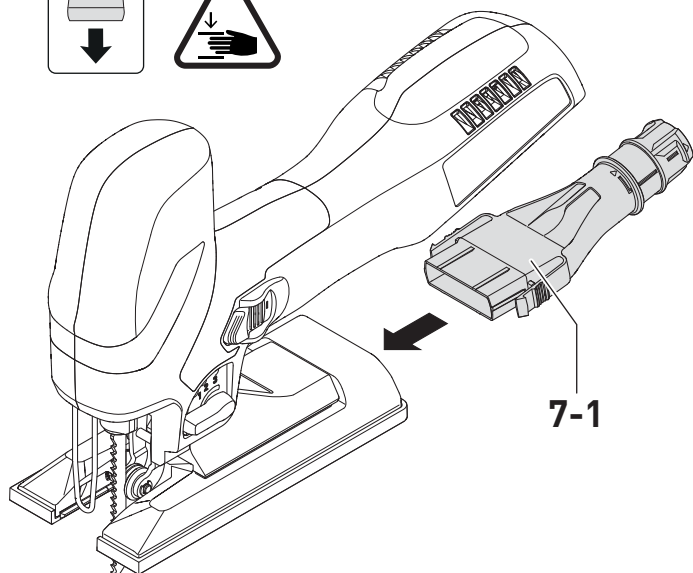 

7-1

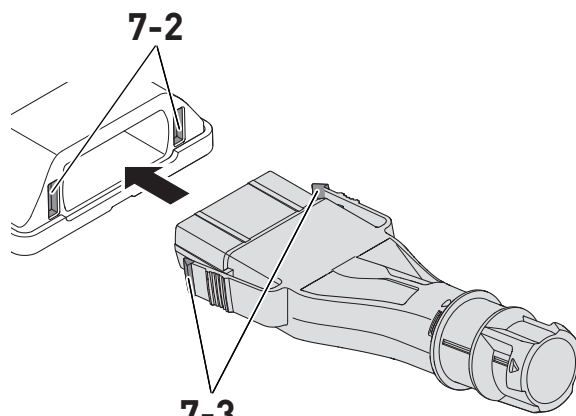

7-2

7-3

de: EU-Konformitätserklärung. Wir erklären in alleiniger Verantwortung, dass dieses Produkt mit allen relevanten Anforderungen folgender EU-Richtlinien übereinstimmt, und folgende Normen oder normative Dokumente zugrunde gelegt wurden:

en: EU Declaration of Conformity. We declare under sole responsibility that this product complies with all the relevant requirements in the following EU Directives, and following standards or normative documents were applied:

fr: Déclaration de conformité de l'UE. Nous déclarons, sous notre seule responsabilité, que ce produit satisfait à toutes les exigences pertinentes des directives UE suivantes et repose sur les normes ou documents normatifs suivants:

es: Declaración UE de conformidad. Declaramos bajo nuestra responsabilidad que este producto cumple todos los requisitos relevantes de las siguientes directivas de la UE y que se han tomado como base las siguientes normas o documentos normativos:

bg: ЕС декларация за съответствие. Ние заявяваме на собствена отговорност, че настоящият продукт съответства на всички релевантни изисквания на следните Директиви на ЕС и следните стандарти и нормативни документи са взети под внимание:

cs: Prohlášení o shodě EU. Prohlašujeme s veškerou odpovědností, že tento výrobek splňuje všechny příslušné požadavky následujících směrnic EU a že byly použity následující normy nebo normativní dokumenty:

da: EU-overensstemmelseserklæring. Vi erklærer med eneansvar, at dette produkt er i overensstemmelse med alle relevante krav i følgende EU-direktiver, og at følgende standarder eller normative dokumenter danner grundlag for det:

el: Δήλωση συμμόρφωσης ΕΕ. Δηλώνουμε με αποκλειστική μας ευθύνη, ότι αυτό το προϊόν συμμορφώνεται με όλες τις σχετικές απαιτήσεις των ακόλουθων οδηγιών της ΕΕ και ότι έχουν χρησιμοποιηθεί τα ακόλουθα πρότυπα ή κανονιστικά έγγραφα:

et: EL-vastavusdeklaratsioon. Kinnitame ainuvastutajatena, et käesolev toode vastab järgmistele Euroopa Liidu direktiivide nõuetele ning on kooskõlas järgmistele standardite ja normatiivsete dokumentidega:

fi: EU-vaatimustenmukaisuusvakuutus. Vakuutamme yksinomaisella vastuulla, että tämä tuote täyttää seuraavien EU-direktiivien kaikki olennaiset vaatimukset ja se on seuraavien standardien tai standardiasiakirjojen mukainen:

hr: EU izjava o skladnosti. Izjavljujemo pod vlastitom odgovornošću da je ovaj proizvod u skladu sa svim važnim zahtjevi- ma sljedećih Direktiva EU i da se polazilo od sljedećih normi ili normativnih dokumenata:

hu: EU megfelelősségi nyilatkozat. Kizárólagos felelősségünk tudatában kijelentjük, hogy ez a termék az alábbi EU-irányelvek minden vonatkozó követelményének megfelelően az alábbi szabványok vagy normatív dokumentumok alapul vételével:

it: Dichiarazione di conformità UE. Dichiariamo sotto nostra unica responsabilità che il presente prodotto sia conforme a tutti i requisiti di rilevanza definiti dalle seguenti Direttive UE e che siano stati applicati le seguenti norme o i seguenti documenti normativi:

lt: ES atitikties deklaracija. Prisiimdami visą atsakomybę pareiškiame, kad šis gaminyas tenkina visus svarbius toliau nurodytų ES direktyvų reikalavimus, ir kad jį projektuojant, buvo panaudotos toliau nurodytos normos arba normatyviniai dokumentai:

lv: ES atbilstības deklarācija. Mēs ar pilnu atbildību paziņojam, ka šis izstrādājums atbilst visām svarīgākajām šādu EK direktīvu prasībām un ir izgatavots atbilstoši šādiem standartiem vai normatīvajiem dokumentiem:

nb: EU-samsvarserklæring. Vi erklærer under eneansvar at dette produktet oppfyller alle relevante krav i følgende EU-di- rektiver og at følgende standarder eller normative dokumenter er blitt lagt til grunn:

nl: EU-conformiteitsverklaring. Wij verklaren en stellen ons ervoor verantwoordelijk dat dit product volledig voldoet aan alle volgende EU-richtlijnen en volgende normen of normatieve documenten daaraan ten grondslag gelegd werden:

pl: Deklaracja zgodności UE. Niniejszym oświadczamy naszą odpowiedzialność, że produkt ten spełnia wszystkie obowiązujące wymagania następujących dyrektyw UE, norm lub dokumentów normatywnych.

pt: Declaração de conformidade UE. Sob nossa inteira responsabilidade, declaramos que este produto está de acordo com todas as exigências relevantes das seguintes diretivas UE, tendo sido tomadas por base as seguintes normas ou documentos normativos:

ro: Declarație de conformitate UE. Declărăm pe proprie răspundere că acest produs este conform cu toate cerințele relevante din următoarele directive UE și că se bazează pe următoarele norme sau documente normative:

ru: Декларация о соответствии ЕС. Мы со всей ответственностью заявляем, что данная продукция соответствует всем применимым требованиям следующих Директив ЕС, стандартов и нормативных документов:

sk: EÚ vyhlásenie o zhode. Zodpovedne vyhlasujeme, že tento produkt súhlasí so všetkými relevantnými požiadavkami nasledujúcich smerníc EÚ a vychádza z nasledujúcich noriem alebo normatívnych dokumentov:

sl: EU izjava o skladnosti. S polno odgovornostjo izjavljamo, da je ta proizvod skladen z vsemi veljavnimi zahtevami naslednjih direktiv EU in da izpolnjuje zahteve naslednjih standardov ali normativnih dokumentov:

sv: EU-försäkran om överensstämmelse. Vi förklarar på eget ansvar att denna produkt uppfyller alla relevanta krav enligt följande EU-direktiv och baseras på följande normer eller normgivande dokument:

Akku-Stichsäge / Cordless jigsaw	Seriennummer / Serial number * T-Nr.
PSC-E 18	11023762



2006/42/EC, 2014/53/EU, 2011/65/EU



We as the manufacturer declare under our sole responsibility that the product(s) fulfill(s) all the relevant provisions of the following UK Regulations and are manufactured in accordance with the following designated standards:

S.I. 2008/1597, S.I. 2017/1206, S.I. 2012/3032

EN 62841-1:2015+A11:2022
EN 62841-2-11:2016+A1:2020+A11:2024
EN 300 330 V2.1.1
EN 301 489-1 V2.2.3
EN 301 489-3 V2.3.2
EN IEC 55014-1:2021
EN IEC 55014-2:2021
EN IEC 62311:2020
EN IEC 63000:2018

Unterzeichnet für und im Namen von/ Signed on behalf of and in name of:

Festool GmbH

Wertstr. 20, 73240 Wendlingen, GERMANY

Wendlingen, 2025-11-07

Markus Stark

Leiter Forschung & Entwicklung Produkte
Head of Research & Development Products

Tim Weber

Leiter Produktkonformität Head of Product Compliance

13 Umwelt



Elektrogeräte, Altbatterien und Akkupacks nicht in den Hausmüll werfen. Geräte, Zubehör und Verpackungen einer umweltgerechten Wiederverwertung zuführen. Geltende nationale Vorschriften beachten.

Vor der Entsorgung Altbatterien, Akkupacks und Lampen zerstörungsfrei vom Elektrogerät trennen. Verbrauchte oder defekte Altbatterien und Akkupacks nur entladen und gegen Kurzschluss gesichert zurückgeben (z. B. durch das Isolieren der Pole mit Klebestreifen). Dadurch können sie effizient recycelt werden.

Gemäß Europäischer Richtlinie über Elektro- und Elektronik-Altgeräte und Umsetzung in nationales Recht, müssen verbrauchte Elektrogeräte getrennt gesammelt und einer umweltgerechten Wiederverwertung zugeführt werden.

Informationen zu den Rücknahmestellen sind unter www.festool.de/recycling einsehbar.

Informationen zu kritischen Stoffen: www.festool.de/reach

English

Contents

1 Symbols.....	13
2 Safety warnings.....	13
3 Intended use.....	15
4 Technical data.....	15
5 Parts of the device.....	15
6 Battery pack.....	15
7 Transport and storage.....	15
8 Commissioning.....	15
9 Settings.....	15
10 Working with the electric power tool.....	17
11 Service and maintenance.....	17
12 Accessories.....	17
13 Environment.....	17
14 General information.....	17
15 Contact us.....	18

1 Symbols



Warning of general danger



Warning of electric shock



Read the operating manual and safety warnings.



Wear a dust mask.



Wear ear protection.



Wear protective goggles.



Wear protective gloves when changing tools.



Inserting the battery pack.

14 Allgemeine Hinweise

14.1 Lizenzhinweise

Lizenzhinweise zu den ggf. im Produkt verwendeten Open Source Lizenzen finden Sie in der Festool App* unter **Informationen > Open-Source-Lizenzen für Werkzeuge**.

* Nicht für jedes Land verfügbar.

14.2 Informationen zum Datenschutz

Das Elektrowerkzeug enthält einen Chip zur automatischen Speicherung von Maschinen- und Betriebsdaten. Die gespeicherten Daten enthalten keinen direkten Personenbezug.

Die Daten können mit speziellen Geräten kontaktlos ausgelesen werden, und werden von Festool ausschließlich zur Fehlerdiagnose, Reparatur- und Garantieabwicklung sowie zur Qualitätsverbesserung bzw. Weiterentwicklung des Elektrowerkzeugs verwendet. Eine darüber hinausgehende Nutzung der Daten – ohne ausdrückliche Einwilligung des Kunden – erfolgt nicht.



Remove the battery pack.



Risk of crushing fingers and hands.



CE conformity marking



UKCA marking: Confirms the conformity of the product with UK regulations.



Tool contains a chip which stores data. See section **14.2**



Do not dispose of it with domestic waste.



Tip or advice

2 Safety warnings

2.1 General power tool safety warnings



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference. Follow the operating manual for the charger and the battery pack.

2.2 Safety instructions for reciprocating saws

- **Hold the power tool by insulated gripping surfaces, when performing an operation where the cutting accessory may contact hidden wiring.** Cutting accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding

the workpiece by hand or against your body leaves it unstable and may lead to loss of control.

2.3 Further safety instructions

- Harmful dust may be created, e.g. when processing lead-containing paintwork, metals and certain types of wood. **Comply with the safety regulations that apply in your country.** Contact with or inhalation of this dust may pose a risk for the operating personnel or persons in the vicinity.
- **Wear suitable personal protective equipment:** Ear protection and safety glasses.
- **Use suitable breathing protection to protect your health.** In enclosed spaces, ensure that there is sufficient ventilation and connect a mobile dust extractor.
- **Do not install the power tool in a work bench.** The power tool may become unsafe and cause serious accidents if installed in work benches from other manufacturers or self-manufactured work benches.
- **Verwenden Sie geeignete Suchgeräte, um verborgene Versorgungsleitungen aufzuspüren, oder ziehen Sie die örtliche Versorgungsgesellschaft hinzu.** Der Kontakt des Einsatzwerkzeugs mit einer spannungsführenden Leitung kann zu Feuer und einem elektrischem Schlag führen. Beschädigung einer Gasleitung kann zur Explosion führen. Eindringen in eine Wasserleitung verursacht Sachbeschädigung.
- **Ensure that the on/off switch is working correctly.** A power tool that can no longer be switched on or off is dangerous and must be repaired by a specialist workshop.
- **Avoid unintentional operation. Ensure that the power tool is switched off before connecting it to the battery, picking it up or carrying it.** Carrying the power tool with your finger on the switch or connecting it to a power supply while it is switched on may lead to accidents.
- Always position the power tool on the workpiece with the saw blade running.
- Always switch off the power tool before you pull it out of the workpiece.
- **Wait until the power tool has come to a complete halt before placing the power tool down.** The insertion tool can get caught and lead to a loss of control of the power tool.
- Deformed or cracked saw blades and saw blades with blunt or broken cutting edges must not be used.
- **Warning of harmful light radiation. Do not look directly into the light beam. Do not direct the light beam towards other people or animals.** Optical radiation can damage the eyes.
- **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** Shorting the battery terminals together may cause burns or a fire.
- **Do not use power supply units to operate cordless power tools. Only use the intended battery packs. Do not use third-party chargers to charge the**

battery packs. The use of accessories not expressly authorised by the manufacturer can result in electric shocks and/or serious accidents.

- **Only for AS/NZS:** The tool shall always be supplied via residual current device with a rated residual current of 30 mA or less.

2.4 Metal processing

When processing metal, the following measures must be taken for safety reasons:

- Wear suitable protective goggles.
- Connect the power tool to a suitable dust extractor with an antistatic suction hose.
- Use a saw blade that is suitable for machining metal.
- When sawing panels, use petroleum for lubrication; thin-walled profiles (up to 3 mm) can be sawed without lubrication.

After machining metal

- Remove the battery pack.
- Extract any dust from the interior of the power tool through the vents. Otherwise, conductive dust deposits may build up inside the power tool and lead to a short-circuit.

2.5 Emission levels

The levels determined in accordance with EN 62841 are typically:

Sound pressure level $L_{PA} = 83 \text{ dB(A)}$

Sound power level $L_{WA} = 91 \text{ dB(A)}$

Uncertainty $K = 5 \text{ dB}$



CAUTION

Noise emissions created while working with the power tool may damage your hearing.

- Always use ear protection.

Vibration emission level a_h (vector sum for three directions) and uncertainty K measured in accordance with EN 62841:

Sawing chipboard	$a_{h,B}$	7.3 m/s^2
Sawing sheet metal	$a_{h,M}$	5.8 m/s^2
Uncertainty	K	1.5 m/s^2

The specified emission levels (vibration, noise)

- are used to compare machines.
- They are also used for making preliminary estimates regarding vibration and noise load during operation.
- They represent the primary applications of the power tool.



CAUTION

The emission values may deviate from the specified values. This is dependent on how the tool is used and the type of workpiece being machined.

- Assess the actual load during the entire operating cycle.
- Determine suitable safety measures depending on the actual load.

3 Intended use

The cordless pendulum jigsaws are designed for sawing cutouts, notches, contour cuts, longitudinal and cross cuts in materials such as wood, materials similar to

wood, sheet metal, plastics, mineral panel materials and insulating materials.

The user is liable for improper or non-intended use.

4 Technical data

Cordless pendulum jigsaw	PSC-E 18
Motor voltage	18 V $\overline{\text{---}}$
Stroke rate ^[2]	800-3500 rpm
Stroke length	23 mm
Pendulum stroke	4 Settings
Max. cutting depth (depending on saw blade):	
Wood	40 mm
Aluminium	20 mm
Steel	10 mm
Weight excl. battery pack	1.7 kg
Compatible battery packs	Festool series BP 18 ≥ 4 Ah

5 Parts of the device

- [1-1]** Splinter guard
- [1-2]** Saw blade mount
- [1-3]** Hoop guard
- [1-4]** Insulated gripping surface
- [1-5]** Adjusting wheel for stroke rate control
- [1-6]** Insulated handle
- [1-7]** On/off switch
- [1-8]** Cooling air openings
- [1-9]** Chip guard
- [1-10]** Battery pack
- [1-11]** Buttons to release the battery pack
- [1-12]** Extraction adapter
- [1-13]** Saw table
- [1-14]** Base runner
- [1-15]** Pendulum stroke switch
Lighting
- [1-16]** Guidance roller
- [1-17]** Saw blade

Accessories shown or described are not always included in the scope of delivery.

The specified illustrations appear at the beginning of the operating manual.

6 Battery pack

Before using the battery pack, check that the battery interface is clean. Any contamination of the battery interface may impair correct contact and lead to the contacts being damaged.

A faulty contact may result in the machine overheating or being damaged.

[2A] Remove the battery pack.

[2B]  Insert the battery pack until it clicks into place.

 Further information about the charger and battery pack can be found in the corresponding operating manual.

7 Transport and storage



CAUTION

Risk of fire due to short circuit

Risk of injury

- Transport and store the power tool with the saw blade ejected and disconnected from the battery pack.

8 Commissioning

8.1 Switching on/off

The power tool has an on/off switch **[1-7]** to switch it on and off (I= ON; 0= OFF).

9 Settings



WARNING

Risk of injury

- Remove the battery pack from the power tool before performing any work on the power tool.

9.1 Electronics

Stroke rate control

You can use the adjusting wheel to continuously adjust the stroke rate in the stroke rate range (see section **4.1**). This enables you to optimise the cutting speed to suit each material.

[2] Stroke rate values based on fully charged battery pack.

Material	Stroke rate level
Hard and soft wood, blockboard, plywood, chipboard	5/A
Fibreboard	4-5/A
Plastic	3-5/A
Ceramic, aluminium, non-ferrous metals	3-5
Mineral panel materials	1-3
Steel	2-4
Insulating materials	4-5/A

Stroke rate level A: The power tool runs at a reduced speed and then, under load, switches up to maximum speed.

Overload safety device

The power supply is disconnected completely if the power tool is overloaded to extremes. You will need to switch off the power tool before you can use it again.

Temperature cut-out

The power tool switches off to prevent overheating. It can be switched on again once it has cooled down.

Brake

The saw blade is stopped electronically within two seconds of switching off the machine.

9.2 Changing the saw blade



CAUTION

Risk of injury from hot and sharp tool.

- ▶ Do not use blunt or faulty tools.
- ▶ Wear protective gloves when handling the tool.

Selecting the saw blade

Festool jigsaw blades are colour-coded. Each colour represents the material for which the saw blade is suited.

Colour	Material
Yellow	Hard and soft wood, blockboard, plywood, chipboard, wood fibreboard
Red	Plastic
Blue	Aluminium, non-ferrous metals, steel
Green	Ceramics, insulating materials, mineral panel materials

Only saw materials for which the saw blade in question has been designed.

CAUTION! The saw blade falls out. Damage to the workpiece

- Only use saw blades with a T-shank.

Inserting the saw blade

- ▶ Insert the saw blade **[4-2]** into the saw blade mount **[4-1]** as far as the stop with its teeth in the cutting direction.
- ▶ The saw blade mount locks automatically.

CAUTION! Whenever you replace a saw blade, always check that it is securely in place.

Ejecting the saw blade

CAUTION! When ejecting the saw blade, do not aim it persons standing in the vicinity.

- ▶ Turn the saw blade mount **[4-1]** as far as the stop.
- ☑ The saw blade **[4-2]** is ejected.
- ▶ Release the saw blade mount.

9.3 Inserting the splinter guard [5]

The splinter guard enables cuts with splinter-free cutting edges.

- ▶ With the power tool switched off, push the splinter guard **[5-1]** with the recess **[5-2]** facing upwards onto the guide **[5-3]** as far as the saw blade.
- ▶ Switch on the power tool (see section **8.1**).
- ▶ **Risk of slipping!** Make sure that the surface used for counterpressure is sufficiently wide and stable to ensure safe force transmission. With the power tool running with the splinter guard protruding, push onto an even surface and cut into the splinter guard (stroke rate level 5).

- ☑ The splinter guard is cut into.

i To guarantee reliable operation of the splinter guard, it must seal tightly on both sides of the saw blade. A new splinter guard should therefore be used after every saw blade change to guarantee splinter-free cuts.

9.4 Adjusting the pendulum stroke

The pendulum stroke on the cordless pendulum jigsaw can be adjusted to machine different materials with the correct rate of advance. Select the required setting using the pendulum stroke switch **[1-15]**:

Position 0 = pendulum stroke off

Position 3 = maximum pendulum stroke

Recommended pendulum stroke setting

Wood, chipboard, wood fibreboard, mineral panel materials	1-3
Blockboard, plywood, plastic	1-2
Aluminium, non-ferrous metals, steel, ceramic	0

9.5 Adjusting the saw table [6]

To saw close to the edges, the saw table can be shifted backwards.

- ▶ Remove the chip guard **[3-1]** and the splinter guard **[5-1]**.
- ▶ Loosen the clamping screw **[6-1]** with a hex key.
- ▶ Push the saw table back into the rear position as far as the stop.
- ▶ Tighten the clamping screw **[6-1]**.

9.6 Chip guard [3]

Fitting the chip guard

- ▶ Place the chip guard **[3-1]** onto the hoop guard **[3-2]** from the front using the hook and press on the housing until the chip guard engages.

Removing the chip guard

- ▶ Pull the chip guard **[3-1]** away from the housing using the tab **[3-3]**.

9.7 Lighting

A light is built in to illuminate the work area.

The lighting switches on automatically when the power tool is switched on.

If the power tool is switched off, the lighting switches off after a few seconds.

9.8 Dust extraction [7]



WARNING

Health hazard posed by dust

- ▶ Never work without dust extraction.
- ▶ Observe the national regulations.
- ▶ Wear a dust mask.

The extraction adapter [7-1] allows the cordless pendulum jigsaw to be connected to a dust extractor (hose diameter 27 mm).

Fitting the extraction adapter

- ▶ Insert the extraction adapter [7-1] in the rear opening of the saw table so that the hooks [7-3] engage in the recesses [7-2].

Removing the extraction adapter

- ▶ To remove the extraction adapter, press both hooks and pull it out of the saw table.

10 Working with the electric power tool

Observe the following safety warnings when working:

- Always secure the workpiece in such a way that it cannot move during machining.
- Never hold the workpiece with your hand when sawing.
- Select the saw blade length so that the saw blade does not protrude from the top of the workpiece and always remains plunged in the workpiece.
- Do not work with materials which produce a lot of dust overhead.
- When working on small or thin workpieces, always use a stable base.
- When working, **always hold the power tool with both hands** by the handles and guide the power tool along the scribe mark. This is the prerequisite for precision work.

10.1 Free saw guidance along a scribe mark

The triangular pointer on the splinter guard [5-1] facilitates sawing along a scribe mark.

10.2 Acoustic warning signals

Acoustic warning signals sound if the following operating states arise:

Signal	Cause	Action
Beeps once. 	The battery pack is empty/incompatible.	Charge/change the battery pack.
	The power tool has overloaded.	Reduce the load on the power tool.
	When pressing the on/off switch: The power tool has overheated.	Once it has cooled down, restart the power tool.
Beeps continuously. 	The power tool is faulty.	Contact the manufacturer to rectify the fault.

11 Service and maintenance



WARNING

Risk of injury, electric shock

- ▶ Always remove the battery pack from the power tool before performing any maintenance or service work.
- ▶ Have all maintenance and repair work that requires the motor housing to be opened carried out by an authorised service workshop.

Customer service and repairs must only be carried out by the manufacturer or service workshops. You must only use **original Festool spare parts**.

Further information: www.festool.co.uk/service

11.1 Observe the following information

- ▶ Check the saw blade guide [1-17] regularly for wear.
- ▶ Regularly clean the base runner [1-16] to prevent scratches and grooves on the surface.
- ▶ Damaged safety devices and components must be repaired or replaced in a recognised specialist workshop, unless otherwise indicated in the operating instructions.
- ▶ To ensure constant air circulation, always keep the cooling air openings in the motor housing clean and free of blockages.
- ▶ Keep the contacts on the power tool and battery pack clean.

11.2 Cleaning the chip space

Clean the chip space regularly to prevent blockages:

- ▶ Clean the chip space with a brush or using suction.

12 Accessories

You can find the PO numbers for accessories and tools under www.festool.co.uk.

13 Environment



Do not dispose of electrical devices, used batteries and battery packs in the household waste.

Recycle devices, accessories and packaging. Observe applicable national regulations. Before disposing of used batteries, battery packs and lamps, separate them from the electrical device without destroying them. Used or defective batteries and battery packs may only be returned if they are discharged and protected against short-circuiting (e.g. by insulating the terminals with adhesive tape). This means they can be recycled efficiently.

In accordance with the European Directive on waste electrical and electronic equipment and implementation in national law, used electrical devices must be collected separately and handed in for environmentally friendly recycling.

Information on the collection points can be viewed at

www.festool.co.uk/recycling.

Information on critical materials: www.festool.co.uk/reach

14 General information

Imported into the UK by

Festool UK Ltd
1 Anglo Saxon Way