

|           |                           |                                                    |     |
|-----------|---------------------------|----------------------------------------------------|-----|
| <b>de</b> | Zimmereihobel             | Originalbetriebsanleitung                          | 6   |
| <b>en</b> | Carpenter's plane         | Translation of the original operating instructions | 14  |
| <b>fr</b> | Rabot de charpente        | Traduction de la notice d'emploi originale         | 22  |
| <b>it</b> | Piallatrice               | Traduzione delle istruzioni d'uso originali        | 30  |
| <b>nl</b> | Timmersschaaf             | Vertaling van de originele gebruiksaanwijzing      | 38  |
| <b>es</b> | Cepilladora de carpintero | Traducción del manual de instrucciones original    | 46  |
| <b>fi</b> | Ammattilais-höylä         | Käännös alkuperäiskäyttöohjeesta                   | 55  |
| <b>sv</b> | Elhyvel                   | Översättning av originalbruksanvisningen           | 63  |
| <b>da</b> | Tømrerhøvl                | Oversættelse af den originale betjeningsvejledning | 71  |
| <b>ru</b> | Плотничный рубанок        | Перевод оригинальной инструкции по эксплуатации    | 79  |
| <b>cs</b> | Tesařský hoblík           | Překlad původního provozního návodu                | 88  |
| <b>pl</b> | Strug ciesielski          | Tłumaczenie oryginalnej instrukcji obsługi         | 96  |
| <b>sl</b> | Tesarski oblič            | Prevod izvirnih navodil za uporabo                 | 104 |



MAF01582/a

**WARNING**

**Lesen Sie alle Sicherheitshinweise und Anweisungen.** Versäumnisse bei der Einhaltung der Sicherheitshinweise und Anweisungen können elektrischen Schlag, Brand und/oder schwere Verletzungen verursachen. **Bewahren Sie alle Sicherheitshinweise und Anweisungen für die Zukunft auf.**

**WARNING**

**Please read all safety instructions and directions.** Failure to comply with the safety instructions and directions can cause electric shock, fire and/or serious injuries. **Please retain all safety instructions and directions for future reference.**

**AVERTISSEMENT**

**Veillez lire toutes les consignes de sécurité et instructions.** Tout non-respect des consignes de sécurité et instructions risque d'être à l'origine de décharges électriques, d'incendies et/ou de blessures graves. **Conservez toutes les consignes et instructions pour pouvoir les relire à tout moment.**

**AVVERTENZA**

**Leggere tutte le avvertenze di sicurezza e le istruzioni.** La mancanza del rispetto delle avvertenze di sicurezza e delle istruzioni possono causare scossa elettrica, incendio e/o gravi lesioni. **Conservare tutte le avvertenze di sicurezza e le istruzioni per il futuro.**

**WAARSCHUWING**

**Lees alle veiligheidsaanwijzingen en instructies.** Nalatigheid bij het naleven van de veiligheidsinstructies en aanwijzingen kan elektrische schok, brand en/of ernstige letsels veroorzaken. **Bewaar alle veiligheidsaanwijzingen en instructies voor later gebruik.**

**ADVERTENCIA**

**Lea todas las indicaciones de seguridad e instrucciones.** Si no se cumplen las indicaciones de seguridad e instrucciones, se pueden producir descargas eléctricas, incendios y/o lesiones graves. **Guardé todas las indicaciones de seguridad e instrucciones para el futuro.**

## VAROITUS

Lue kaikki turvaohjeet ja käyttöohjeet. Laiminlyönti turvaohjeiden ja käyttöohjeiden noudattamisessa voi aiheuttaa sähköiskun, tulipalon ja/tai vakavia vammoja. Säilytä kaikki turvaohjeet ja käyttöohjeet tulevaisuuden varalle.

## WARNING

Läs alla säkerhetsanvisningar och anvisningar. Underlåtenhet att följa säkerhetsanvisningar och anvisningar kan orsaka elstöt, brand och/eller allvarliga personskador. Behåll alla säkerhetsanvisningar och anvisning för framtida användning.

## ADVARSEL

Læs alle sikkerhedshenvisninger og instruktioner. En manglende overholdelse af sikkerhedshenvisningerne og instruktionerne kan føre til elektrisk stød, brand og/eller alvorlige kvæstelser. Opbevar alle sikkerhedshenvisninger og instruktioner til fremtidig brug.

## ПРЕДУПРЕЖДЕНИЕ

Прочитайте все правила и инструкции по технике безопасности. Несоблюдение этих правил и инструкций по технике безопасности может привести к поражению электрическим током, возгоранию и/или другим серьезным травмам. Сохраните все правила и инструкции по технике безопасности для дальнейшего использования.

## OSTRZEŻENIE

Przeczytać wszystkie przepisy bezpieczeństwa i wskazówki. Zaniedbanie przestrzegania przepisów bezpieczeństwa i wskazówek może prowadzić do porażenia prądem, pożaru i/lub ciężkich zranień. Zachować wszystkie przepisy bezpieczeństwa i wskazówki na przyszłość.

## UPOZORNĚNÍ


Přečtěte si všechna bezpečnostní upozornění a pokyny. Zanedbání bezpečnostních upozornění a pokynů může způsobit zásah elektrickým proudem, požár a/nebo vážná zranění. Všechna bezpečnostní upozornění a pokyny si ponechejte pro pozdější použití.

## OPOZORILO


Preberite vsa varnostna opozorila in napotke. Neupoštevanje varnostnih opozoril in napotkov lahko povzroči udar električnega toka, požar in/ali hude telesne poškodbe. Vsa varnostna opozorila in napotke shranite za prihodnjo uporabo.



MAF01579/a

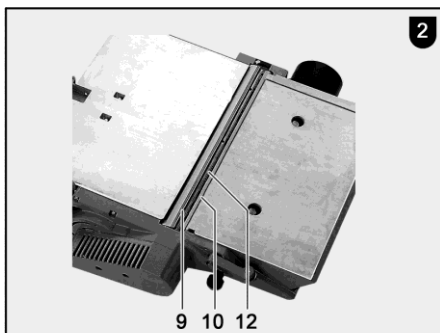

MAF00835/a

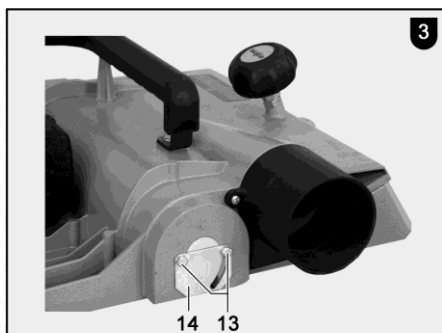

MAF01580/a



MAF01581/a

#### D - EG Konformitätserklärung

Wir bescheinigen hiermit, dass die Maschine ZH 320 Ec den angeführten EU-Richtlinien entspricht. Bei Konstruktion und Bau wurden die gelisteten Normen angewendet. Bevollmächtigter für die Zusammenstellung der technischen Unterlagen: Mafell AG

#### GB - EC Declaration of Conformity

We herewith confirm that the machine ZH 320 Ec complies with the EU directives quoted. The standards listed were used for design and construction. Empowered person for the configuration of the technical documents: Mafell AG

#### F - Déclaration CE de conformité

Nous déclarons par la présente que la machine ZH 320 Ec est conforme aux directives CE applicables comme suit. Lors de la construction, les règlements suivants ont été utilisés. Plénipotentiaires pour l'assemblage des documentations techniques: Mafell AG

#### I - Dichiarazione di conformità CE

Con la presente certifichiamo che la macchina ZH 320 Ec è conforme alle seguenti direttive CE applicabili. Nella progettazione e la costruzione sono state applicate le seguenti norme. Responsabile per la composizione della documentazione tecnica: Mafell AG

#### NL - EG conformiteitsverklaring

Wij bevestigen hiermede dat de machine ZH 320 Ec aan de vermelde EU-richtlijnen beantwoord. Bij constructie en bouw werden de vermelde normen toegepast. Gemachtigde voor de samenstelling van de technische documenten: Mafell AG

#### E - Declaración de conformidad CE

Con la presente se certifica que la máquina ZH 320 Ec cumple las directivas europeas mencionadas, las cuales forman la base tanto del diseño constructivo como de los procesos de fabricación. Apoderado legal para la compilación de la documentación técnica: Mafell AG

#### FIN - EY-vaatimusten mukaisuusvakuutus

Vakuutamme täten, että kone ZH 320 Ec vastaa mainittujen EU-direktiivien vaatimuksia. Sen suunnittelussa ja valmistuksessa on sovellettu luettelossa ilmoitettuja standardeja. Teknisten asiakirjojen laatimiseen valtuutettu henkilö: Mafell AG

#### S - EG Konformitetsförklaring

Vi intygar härmed att maskinen ZH 320 Ec uppfyller angivna EU direktiv. De angivna normerna användes vid konstruktion och tillverkning. Befullmäktigad för sammanställningen av den tekniska dokumentationen: Mafell AG

#### DK - EU overensstemmelseserklæring

Vi attesterer hermed, at maskinen ZH 320 Ec opfylder de angivene EU-direktiver. Konstruktion og bygning er udført iht. de angivene standarder. Person, der er befuldmægtiget til at sammenstille det tekniske materiale: Mafell AG

#### RUS - Сертификат соответствия ЕС

Настоящим подтверждаем, что машина ZH 320 Ec отвечает требованиям указанных директив ЕС. При проектировании и изготовлении применялись перечисленные нормы. Уполномоченный представитель по составлению технической документации: Mafell AG

#### PL - Deklaracja zgodności UE

Niniejszym potwierdzamy, że maszyna ZH 320 Ec spełnia wymagania wyszczególnionych dyrektyw UE. W trakcie konstrukcji urządzenia zastosowano przedstawione normy. Pełnomocnik odpowiedzialny za zestawienie dokumentacji technicznej: Mafell AG

#### CZ - PROHLÁŠENÍ O SHODĚ

Tímto prohlašujeme, že stroj ZH 320 Ec splňuje pokyny uvedených směrnic EU. Při plánování a sestavení byly využity uvedené normy. Za sestavení technických podkladů zodpovídá: Mafell AG

#### SLO - ES izjava o skladnosti

S tem izjavljamo, da stroj ZH 320 Ec ustreza navedenim direktivam EU. Pri konstrukciji in izdelavi so uporabljeni našeti standardi. Za sestavo tehnične dokumentacije je pooblaščen o podjetje: Mafell AG



2006/42/EG  
2014/30/EU  
2011/65/EU


EN 62841-1, EN 62841-2-14, EN 55014-1, EN 55014-2,  
EN 61000-3, EN 847-1

ZH 320 Ec

Art.-Nr. 924401, 924420, 924425

Mafell AG

 D - 78727 Oberndorf, den 17.05.2019

  
Dipl.-Ing. Matthias Krauss  
Vorstandsvorsitzender / CEO

  
i. V. Dipl.-Ing. Harald Schmid, MBA  
Leitung Entwicklung und Konstruktion

## Table of Contents

|     |                                             |    |
|-----|---------------------------------------------|----|
| 1   | Signs and symbols .....                     | 15 |
| 2   | Product information .....                   | 15 |
| 2.1 | Manufacturer's data .....                   | 15 |
| 2.2 | Machine identification .....                | 15 |
| 2.3 | Technical data .....                        | 16 |
| 2.4 | Emissions .....                             | 16 |
| 2.5 | Scope of supply .....                       | 16 |
| 2.6 | Safety devices .....                        | 17 |
| 2.7 | Use according to intended purpose .....     | 17 |
| 2.8 | Residual risks .....                        | 17 |
| 3   | Safety instructions .....                   | 17 |
| 4   | Setting / Adjustment .....                  | 18 |
| 4.1 | Mains connection .....                      | 18 |
| 4.2 | Dust extraction .....                       | 18 |
| 4.3 | Blade change .....                          | 19 |
| 5   | Operation .....                             | 19 |
| 5.1 | Initial operation .....                     | 19 |
| 5.2 | Switching on and off .....                  | 19 |
| 5.3 | Depth of cut adjustment .....               | 19 |
| 5.4 | Work instructions .....                     | 19 |
| 5.5 | Chip ejection .....                         | 20 |
| 6   | Service and maintenance .....               | 20 |
| 6.1 | Tool .....                                  | 20 |
| 6.2 | Storage .....                               | 20 |
| 7   | Troubleshooting .....                       | 21 |
| 8   | Optional accessories .....                  | 21 |
| 9   | Exploded drawing and spare parts list ..... | 21 |

## 1 Signs and symbols



**This symbol appears at places where you will find instructions for your own safety.**

Non-compliance with these instructions may result in very serious injuries.



**This symbol indicates a potentially hazardous situation.**

If this situation is not avoided, the product or objects in its vicinity may get damaged.



This symbol indicates tips for the user and other useful information.

## 2 Product information

for machines with product no. 924401, 924420, 924422 or 924425

### 2.1 Manufacturer's data

MAFELL AG, Beffendorfer Straße 4, D-78727 Oberndorf / Neckar, Phone +49 (0)7423/812-0, Fax +49 (0)7423/812-218

### 2.2 Machine identification

All details required for machine identification are available on the attached rating plate.



CE symbol to document compliance with the basic safety and health requirements according to Appendix I of the Machinery Directive.



For EU countries only

Do not dispose of electric tools together with household waste material!

In accordance with the European directive 2002/96/EC on waste electrical and electronic equipment and transposition into national law, obsolete electrical tools must be collected separately and recycled in an environmentally-compatible manner.



To reduce the risk of injury, please read the operating instructions.



Always wear ear protectors during work.

## 2.3 Technical data

|                                                       |                  |                                |
|-------------------------------------------------------|------------------|--------------------------------|
| Universal motor, radio and TV interference suppressed |                  | 230 V~, 50 Hz                  |
| Power input (permanent operation)                     |                  | 2700 W                         |
| Speed of planing shaft                                | while idling     | 8500 rpm                       |
|                                                       | at normal load   | 8500 rpm                       |
| Planing width                                         |                  | 320 mm (12 5/8 in.)            |
| Chip removal                                          |                  | 0 - 3 mm (0 - 1/8 in.)         |
| Cutting speed at normal load                          |                  | 32.9 m/s (108 ft/sec.)         |
| Weight without mains cable                            |                  | 14 kg (30.8 lbs)               |
| Extractor connection diameter                         | Inside / outside | 75/80 mm (2 15/16 – 3 1/8 in.) |

## 2.4 Emissions

The values stated are emission levels. Although there is a correlation between emission and imission level, it cannot be reliably derived from this whether additional precautions are necessary. Factors influencing the current imission level existing at the workplace comprise the duration of exposure, the room characteristic, other sources of noise, etc. such as e.g. the number of machines and other adjacent machining operations. In addition, the permissible imission level may differ from country to country. This information is nevertheless suitable for providing the machine user with an improved assessment of the hazard and risk.

### 2.4.1 Noise emission specifications

Noise emission values determined according to EN 62841:

|                      |                               |
|----------------------|-------------------------------|
| Sound pressure level | $L_{PA} = 99 \text{ dB (A)}$  |
| Uncertainty          | $K_{PA} = 1,5 \text{ dB (A)}$ |
| Sound power level    | $L_{PA} = 110 \text{ dB (A)}$ |
| Uncertainty          | $K_{PA} = 1,5 \text{ dB (A)}$ |

The noise measurement is recorded using the planing shaft included in the standard equipment.

### 2.4.2 Vibration specifications

The typical hand-arm vibration is  $2.7 \text{ m/s}^2$ .

## 2.5 Scope of supply

Carpenter's plane ZH 320 Ec complete with:

- 1 set reversible blades
- 1 operating tool
- 1 operating manual
- 1 folder "Safety Instructions"

## 2.6 Safety devices



### **Danger**

These devices are required for the machine's safe operation and may not be removed or rendered inoperative.

The machine is equipped with the following safety devices:

- Large base plate
- Handles
- Index mechanisms
- Hose connector

## 2.7 Use according to intended purpose

The carpenter's plane is exclusively intended for processing solid wood using HL-reversible blades.

Dimension and quality of the spacer blocks, blade carriers and reversible blades used must correspond to the parts listed in the spare parts list. The order numbers can be found in the spare parts list.

Any other use than described above is not permissible. The manufacturer cannot be held liable for any damage arising from such other use.

So as to use the machine as intended, comply with the operating, maintenance and repair instructions specified by Mafell.

## 2.8 Residual risks



### **Danger**

Even if used in accordance with its intended purpose and despite conforming with the safety instructions, residual risks caused by the intended use will always remain.

- Touching the running planing shaft below the base plate.
- Touching the sharp planing blades with stationary planing shaft.
- Touching the sharp planing blade edges when changing the blades.
- Touching the running planing shaft through the chip ejector.

- Ejection of incorrectly fitted planing blades.
- Breakage and ejection of parts of the planing blades.
- Machine or workpiece get flung off when planing from within the workpiece.
- Touching live parts with the housing open and the mains plug not removed.
- Hearing can be impaired when working for long periods without ear protectors.
- Emission of harmful wood dusts during longer operation without extraction.

## 3 Safety instructions



### **Danger**

Always observe the following safety instructions and the safety regulations applicable in the respective country of use!

### **General instructions:**

- Children and adolescents must not operate this machine. This rule does not apply to young persons receiving training and being supervised by an expert.
- Never work without the protection devices prescribed for the respective operating sequence and do not make any changes to the machine that could impair safety.
- When operating the machine outdoors, use of an earth-leakage circuit-breaker is recommended.
- Damaged cables or plugs must be immediately replaced.
- Always check before beginning work whether the protection and work devices are safely attached and not damaged. Damaged protection devices and parts must be repaired or exchanged appropriately.
- Consider environmental influences. Do not expose the machine to rain and avoid working in a damp or wet environment as well as near to combustible liquids and gases.
- Do not carry the machine by its cable and do not use the cable to pull the plug out of the socket outlet.
- Pay attention that the cable is protected against oil and heat and is not pulled across sharp edges.

- Avoid sharp bends in the cable. Especially when transporting and storing the machine, do not wind the cable around the machine.
- Only allow an electrician to carry out work on the electrical parts of the machine.
- Store the machine in a dry, locked place outside the reach of children.
- Planing blades must be reversed or replaced in good time, as blunt blades do not only increase the danger of backlash, but also place an unnecessary strain on the motor.
- Never reach into the planing shaft or into the chip ejector while the machine is running.
- The wood dust arising during planing impairs the necessary view and is partly injurious to health. If the machine is used for longer periods, it must therefore be connected to a chip extractor, e.g. a portable small extractor, if the work is not carried out outdoors or in a sufficiently ventilated room. The air velocity must be at least 20 m/s (65.6 ft/sec.).

#### **Instructions on the use of personal protective equipment:**

- Always wear ear protectors during work.
- Always wear a dust mask during work.

#### **Instructions on operation:**

- **Wait for the cutter to stop before setting the tool down.** An exposed rotating cutter may engage the surface leading to possible loss of control and serious injury.
- **Hold the power tool by insulated gripping surfaces, because the cutter may contact its own cord.** Cutting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.
- **Use clamps or another practical way to secure and support the workpiece to a stable platform.** Holding the workpiece by your hand or against the body leaves it unstable and may lead to loss of control.
- Provide for an unobstructed and slip-proof location with adequate lighting.
- The power plug must be pulled before replacing tools, making adjustments and repairing malfunctions (this also comprises removing jammed chips).
- Do not work on workpieces which are too small or too large for the capability of the machine.
- The switch may not be wedged.
- Only begin planing the workpiece when the planing shaft has achieved its full speed.
- Examine the workpiece for foreign objects. Never attempt to plane over nails or other metal objects.
- During planing, always lead the connecting cable away from the machine to the side (Fig. 1).
- An even feed during planing increases the life time of blades and machine and reduces the risk of accidents. Do not reverse plane or plunge plane!

#### **Instructions on service and maintenance:**

- Regularly cleaning the machine, especially the adjusting devices and guides, constitutes an important safety factor.
- Only original MAFELL spare parts and accessories may be used. Otherwise the manufacturer will not accept any warranty claims and cannot be held liable.
- Use a suitable tool, e.g. a piece of wood to clean a clogged ejection nozzle. Do not reach into the ejection nozzle.

## **4 Setting / Adjustment**

### **4.1 Mains connection**

The carpenter's plane is equipped with protective insulation according to Class I and may therefore only be connected to socket outlets with protective earth conductor.

Prior to commissioning make sure that the mains voltage complies with the operating voltage stated on the machine's rating plate.

### **4.2 Dust extraction**

Connect the machine to a suitable external dust extractor during all work generating a considerable amount of dust. The air velocity must be at least 20 m/s (65.6 ft / sec.).

The internal diameter of hose connector is 75 mm ( 2 15/16 in.).

### 4.3 Blade change



#### **Danger**

Pull the power plug during all service work.

Sharp planing blades guarantee a regular planing pattern and put less strain on the motor. Blunt planing blades must therefore be reversed or exchanged.

Prior to the blade exchange, release screws 13 (Fig. 3) at the lateral cover and tilt away the cover 14. Screw the hexagon head screws 10 (Fig. 2) approx. 1 - 2 turns into the spacer blocks 12 using the open-ended spanner (width across flats 8). Pull the spacer blocks with blade and blade carrier 9 laterally from the planing shaft.

Clean all parts and the blade chamber inside the planing shaft.

Always reverse both blades or fit new blades. Pay attention that the blades are fitted on the pins in the spacer block first and only then the blade carriers. Afterwards, insert the blades including the carrier system laterally into the planing shaft and pay attention that blade carrier and blades do not laterally protrude beyond the shaft body. First only lightly, then firmly tighten the clamping screws from the centre outwards using the open-ended spanner (width across flats 8) included in the supply (8.4 Nm). Tilt the cover back again and tighten the screws. The planing shaft has been preset at the factory. An adjustment of the fitted blades is therefore not necessary and may not be carried out, as otherwise the permissible projection of the blades beyond the shaft body may be exceeded.

## 5 Operation

### 5.1 Initial operation

Personnel entrusted to work with the machine must be made aware of the operating instructions, calling particular attention to the chapter "Safety instructions".

### 5.2 Switching on and off

Before switching on, pay attention that the machine's planing shaft does not rest on the support or on the workpiece. For this purpose, lift the carpenter's plane with both hands by the handles 1 and 4 (Fig. 4).

- **Switching on:** First unlock the switch-on lock by pressing the locking lever 15 (Fig. 4) to the front. Then actuate the control lever 2. As this is a switch without locking device, the machine will only run for as long as this switch is pressed.

The built-in electronic system provides for jerk-free acceleration when the machine is switched on and under load readjusts the speed to the fixed setting.

In addition, this electronic system adjusts the motor down in case of overload, i.e. the planing shaft will stop. The load on the machine must then be reduced until the planing shaft has reached its full speed. After that, continue to plane at reduced feed speed.

- **Switching off:** To switch off, release the switch trigger 2. The switch-on lock automatically takes effect again and secures the machine against accidental switch-on.

On switching off the machine, the automatic brake takes effect simultaneously. This shortens the slowing time of the machine to approx. 1 - 3 seconds.

### 5.3 Depth of cut adjustment

The chip removal can be set to between 0 and 3 mm (0 – 1/8 in.). This is done with the handle 5 (Fig. 4) for depth of cut adjustment. The set planing depth can be read off scale 6.

During normal operation, the chip removal should remain restricted to approx. 2 mm (1/16 in.). To avoid overloading the motor, the maximum chip removal should only be used in extreme cases.

### 5.4 Work instructions

Thanks to its balanced weight distribution, the carpenter's plane has a good grip. It can be guided using the handles 1 and 4 (Fig. 4).

For planing, the machine's front contact area is placed onto the workpiece such that the planing shaft does not engage. After switching on and as soon as the planing shaft has reached its full speed, the carpenter's plane is guided over the timber applying an even pressure. An even feed results in a regular planing pattern and reduces the strain on the machine.

When the carpenter's plane is overloaded, the speed of the planing shaft drops. It is then necessary to wait until the planing shaft has reached its full speed

again. Afterwards, it is possible to continue working with reduced feed.

When working with a full planing width, the lever with guide roller 7 is tilted downwards and tensioned with the knurled knob 8. This provides the plane with a lateral guide.

After planing, immediately switch off the machine by releasing the switch and do not put down with running planing shaft. When resetting the chip removal to 0, the plane may be put down on a flat surface without damaging the support, even if the blades are in an unfavourable position.

### 5.5 Chip ejection

The carpenter's plane is designed such that during planing with appropriate feed speed and fully utilised planing width, an efficient chip ejection is ensured. In the process, the chips are ejected to the side so that the view onto the workpiece is not obstructed.

## 6 Service and maintenance



### **Danger**

Pull the power plug during all service work.

MAFELL machines are designed to be low in maintenance.

The ball bearings used are greased for life. When the machine has been in operation for a longer period of time, we recommend to hand the machine in at an authorised MAFELL customer service shop for inspection.

Only use our special grease, order No. 049040 (1 kg tin) for all greasing points.

### 6.1 Tool

The planing shaft, spacer blocks, blade carriers and blades used on the machine should be regularly deresinified as a clean tool improves the cutting quality. Deresinification is carried out by placing the spacer blocks, blade carriers and reversible blades for 24 hours in petroleum or a commercial deresinification agent.



Aluminium tools may only be deresinified with solvents which do not corrode the aluminium.

### 6.2 Storage

If the machine is not used for a longer period of time, it has to be carefully cleaned. Spray bright metal parts with a rust inhibitor.

## 7 Troubleshooting



### Danger

Determining the causes for existing defects and eliminating these always requires increased attention and caution. Pull the mains plug beforehand!

Some of the most frequent defects and their causes are listed in the following chart. In case of other defects, contact your dealer or the Mafell customer service.

| Defect                                                                   | Cause                               | Elimination                                                     |
|--------------------------------------------------------------------------|-------------------------------------|-----------------------------------------------------------------|
| Machine cannot be switched on                                            | No mains voltage                    | Check power supply                                              |
|                                                                          | Mains fuse defective                | Replace fuse                                                    |
|                                                                          | Carbon brushes worn                 | Take the machine to a Mafell customer service shop              |
| Machine switches off automatically during idling or stops during planing | Mains failure                       | Check mains back-up fuses                                       |
|                                                                          | Machine overloaded                  | Reduce feed speed                                               |
| Speed decreases during planing                                           | Excessive chip removal              | Reduce chip removal                                             |
|                                                                          | Feed rate too fast                  | Reduce feed speed                                               |
|                                                                          | Blunt blades                        | Reverse or exchange blades                                      |
| Irregular planing pattern                                                | Blunt blades                        | Reverse or exchange blades                                      |
|                                                                          | Uneven feed                         | Plane with constant pressure and reduced feed                   |
| Chip ejection blocked                                                    | Excessive chip removal              |                                                                 |
|                                                                          | Feed rate too fast                  |                                                                 |
|                                                                          | Blunt blades                        |                                                                 |
|                                                                          | Wood is too damp                    |                                                                 |
|                                                                          | Extended planing without extraction | Connect to an external extraction, e.g. portable dust extractor |

## 8 Optional accessories

|                               |                  |
|-------------------------------|------------------|
| - Reversible blades (1 pair)  | Order No. 091791 |
| - Reversible blades (3 pairs) | Order No. 091889 |
| - Clamping jaws               | Order No. 202295 |
| - Blade holder (1 pair)       | Order No. 091790 |
| - Reducing socket ZH-RS       | Order No. 207877 |

## 9 Exploded drawing and spare parts list

The corresponding information in respect of spare parts can be found on our homepage: [www.mafell.com](http://www.mafell.com)