

NOVA 10 CONNECT

03 61 02 0

Bluetooth Light control app





//Powerbank Built-in power bank with USB outlet to charge mobile devices

years warranty*



JUST CONNECT

your battery pack

BOSCH BOSCH GREEN DEWALT EINHELL

FEIN **FESTOOL**

FLEX H₄7FT

нікокі

INGERSOLL MAKITA MILWAUKEE

RIDGID SNAP-ON

WÜRTH



* go to scangrip.com to register



High efficiency COB LED





10000 lm @ 100% 7500 lm @ 75% 5000 lm @ 50% 2500 lm @ 25% 1000 lm @ 10%



1600-16000 lux @0.5m



Compatible with METABO / CAS battery system 12V 4.0 Ah - 18V 5.2 Ah and 15 other 18V battery packs by using the SCANGRIP CONNECTOR











304x292x131 mm



3.72 kg



USB power bank: 5V DC / 1A



IP54 with battery cover

BATTERY, CHARGER, CONNECTORS AND POWER SUPPLY ARE SOLD SEPARATELY

SCANGRIP CONNECTORS for 18V battery packs



BOSCH - 03.6140C BOSCH GREEN - 03.6141C

DEWALT - 03.6142C

EINHELL - 03.6143C

FEIN - 03.6144C

FESTOOL - 03.6153C

FLEX - 03.6145C

HAZET - 03.6146C

HIKOKI - 03.61470

INGERSOLL - 03.6152C

MAKITA - 03.6148C

MILWAUKEE - 03.6149C

RIDGID - 03.6154C

SNAP-ON - 03.6151C

WÜRTH - 03.6150C

Accessories





CAS BATTERY 12V 4.0 Ah 03.6120



CAS BATTERY 18V 5.2 Ah 03.6121



CAS CHARGER 03.6122

Minimum distance from lighted objects 0.1m

WARNING

- Always respect applicable legislation for working with electrical equipment in order to reduce the risk of accidents.
- Avoid looking directly into the beam of light, as this will result in dazzling.
- Do not use the lamp near a naked flame.
- Protect the mains cable from oil, heat and sharp edges.
- Internal backup battery must be replaced with an original SCANGRIP battery.
- Do not leave the battery flat, as this could render it INCAPABLE of being charged again.
- The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.
 - Luminaire is only suitable for direct mounting on non-combustible surfaces.
- The luminaire is designed to work with all Metabo CAS battery packs.
 - If the lamp is disconnected from mains and the battery is discharged, push the power button to enable internal back up battery. 10% LED will blink to indicate back up mode.

THE PROCESS TO DELETE THE PIN CODE IS:

- Turn on the Bluetooth function
- Press the Bluetooth button for 10 second.
- The pin code is reset.

INTEGRATED BLUETOOTH LIGHT CONTROL:

- Turn lamp on/off or adjust lamp output.
- Connect, up to 4 lamps together.
 - Assign a pincode to prevent other users from controlling the lamp.

Compliant with iOS 10.3 or higher and Android 5.0 or higher.

Go to iTunes App Store, Google Play or download the app from our website.

USE:

- To turn the lamp on or off, press the A button.
- To increase the brightness, press the B button.
- To decrease the brightness, press the C button.
 - When the brightness level is changed, the new value is saved, and the lamp will start at that level the next time it is turned on.
- To enable/disable Bluetooth, press the D button.



THE LAMP HAS THREE DIFFERENT IP RATINGS DEPENDING ON THE USE:

- IP65 when used with a Scangrip power supply.
 - IP54 When the battery cover is mounted and closed.
 - IP30 When the battery cover is removed and using an external battery.

BATTERY COMPLIANCE:

- The work light is designed to be used with Metabo CAS batteries.
- The lamp is also compatible with 3rd party 18V batteries by using the SCANGRIP CONNECT system.
- It will accept the following battery voltages: 12V and 18V.
 - It is possible to use a Scangrip power supply instead of a battery.
- When using a Scangrip power supply the battery cover must be removed.

USB POWER OUTLET:

- Built-in USB power outlet to charge mobile devices.
 - Output: 5V. 1A
- The USB outlet is disabled when the lamp is in backup mode.

Discarded electrical products must not be disposed of together with household waste. Please use recycling facilities.

Ask your local authority or retailer for advice on recycling.

- The battery must be removed from the device before it is broken up
- The device must be removed from the device before it is broken up
 The device must be disconnected from the mains when the battery is removed
- Please dispose of the battery safely