

AUTO EXTRACT (CONTACTOR CONTROLLER) WIRING INSTRUCTIONS

These instructions are intended for guidance purposes only. We recommend installation by a qualified electrician

L=Live N=Neutral E=PE=Protective Earth C=Control (Switched Live)

STEP1(Existing Connection)


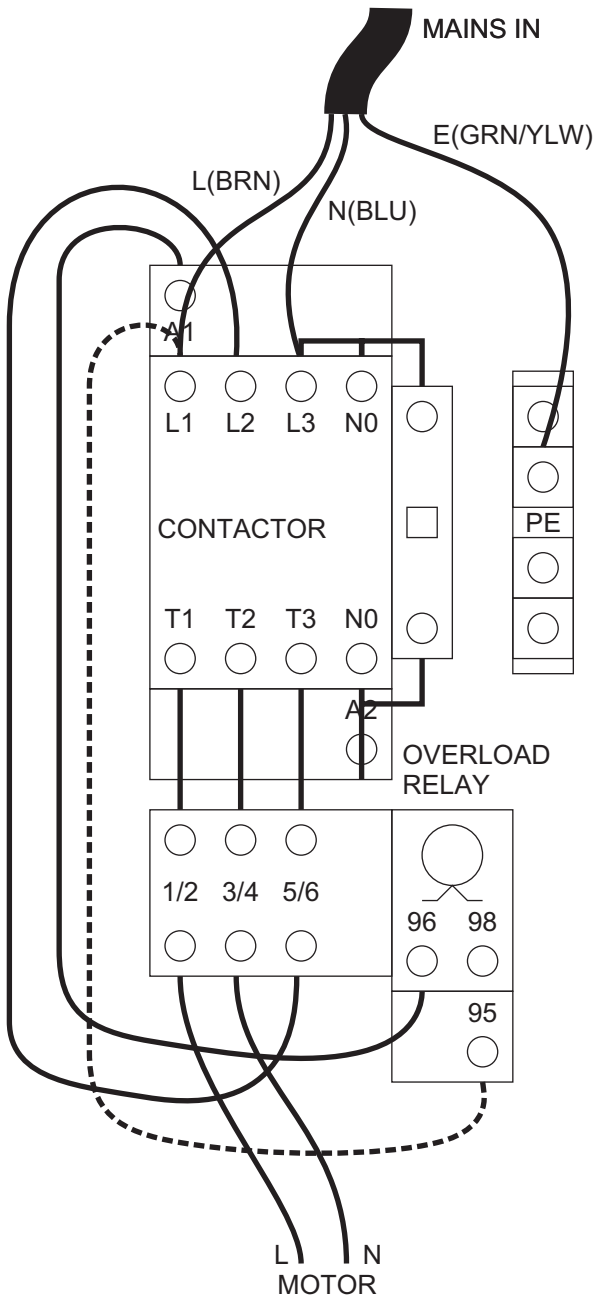



Diagram shows existing connections
Remove Link wire joining L1 (Live) and the
overload relay (marked on diagram with
dotted line) -----

STEP2 (Modified Connections)

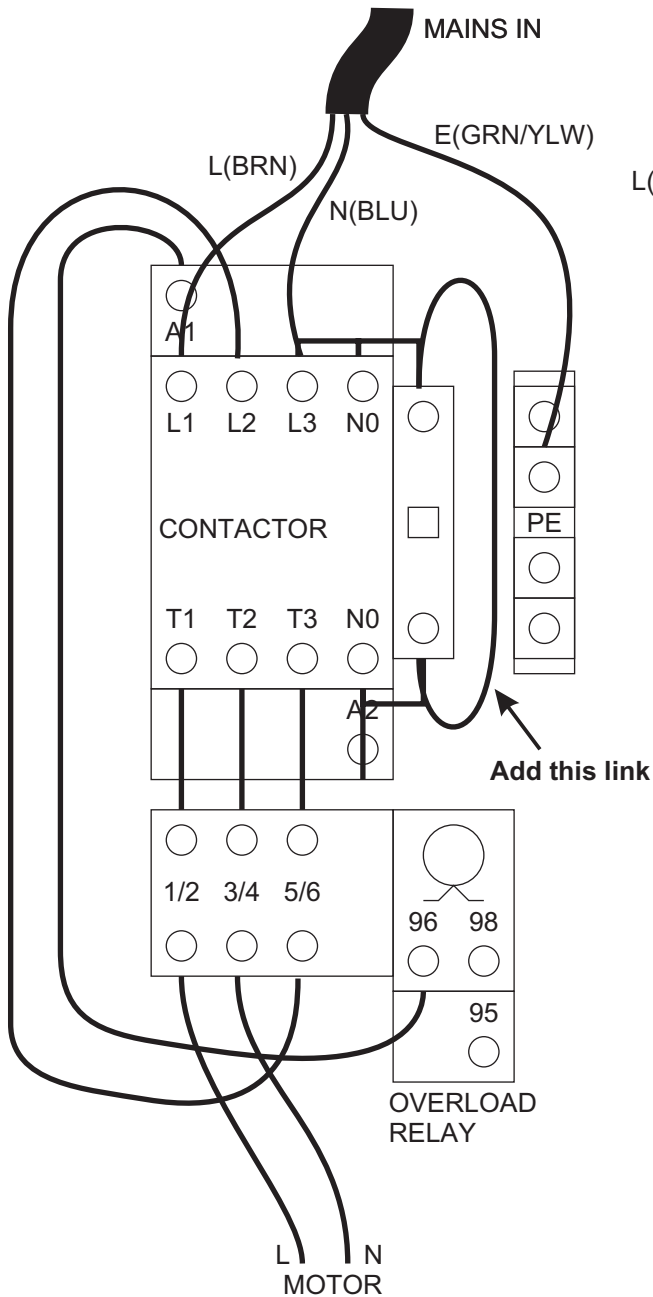

Add link across start switch.

STEP3 (Finished Connections)

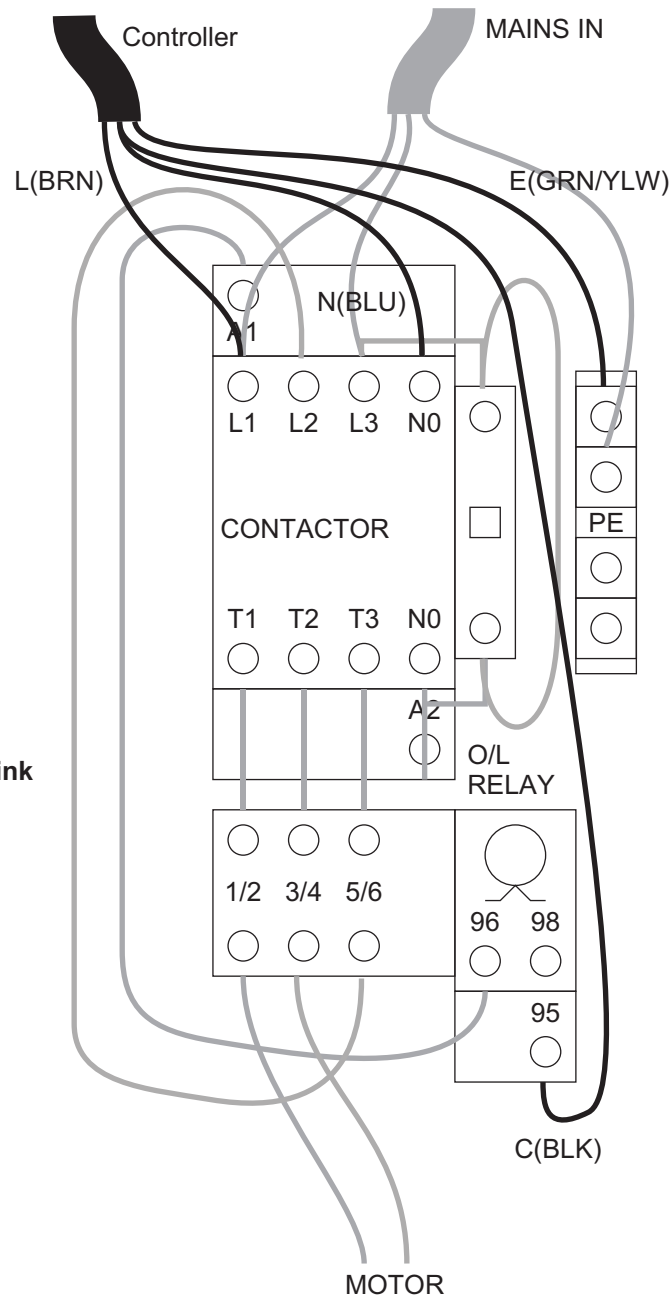

Add Brown From Controller to L1
Add Blue From Controller to N0
Add Black From Controller to O/L Relay
Add Green / Yellow From Controller to PE