


de	Originalbetriebsanleitung	10	lv	Orīģinālā lietošanas pamācība	164
en	Original instructions	20	lt	Originali naudojimo instrukcija	174
fr	Notice d'utilisation d'origine	29	et	Originaalkasutusjuhend	183
es	Manual de instrucciones original	39	sk	Originálny návod na obsluhu	192
it	Istruzioni d'esercizio originali	49	sl	Originalna navodila za uporabo	201
nl	Originele gebruiksaanwijzing	59	el	Πρωτότυπο οδηγιών χρήσης	210
sv	Originalbruksanvisning	69	hr	Originalne upute za uporabu	220
fi	Alkuperäiset käyttöohjeet	78			
da	Original brugsanvisning	87			
nb	Original bruksanvisning	96			
pt	Manual de instruções original	105			
cs	Původní návod k obsluze	115			
pl	Oryginalna instrukcja obsługi	124			
hu	Eredeti használati utasítás	134			
bg	Оригинална инструкция за експлоатация	144			
ro	Manualul de utilizare original	154			


CTL MINI I CTL MIDI I CTL MIDI I AC

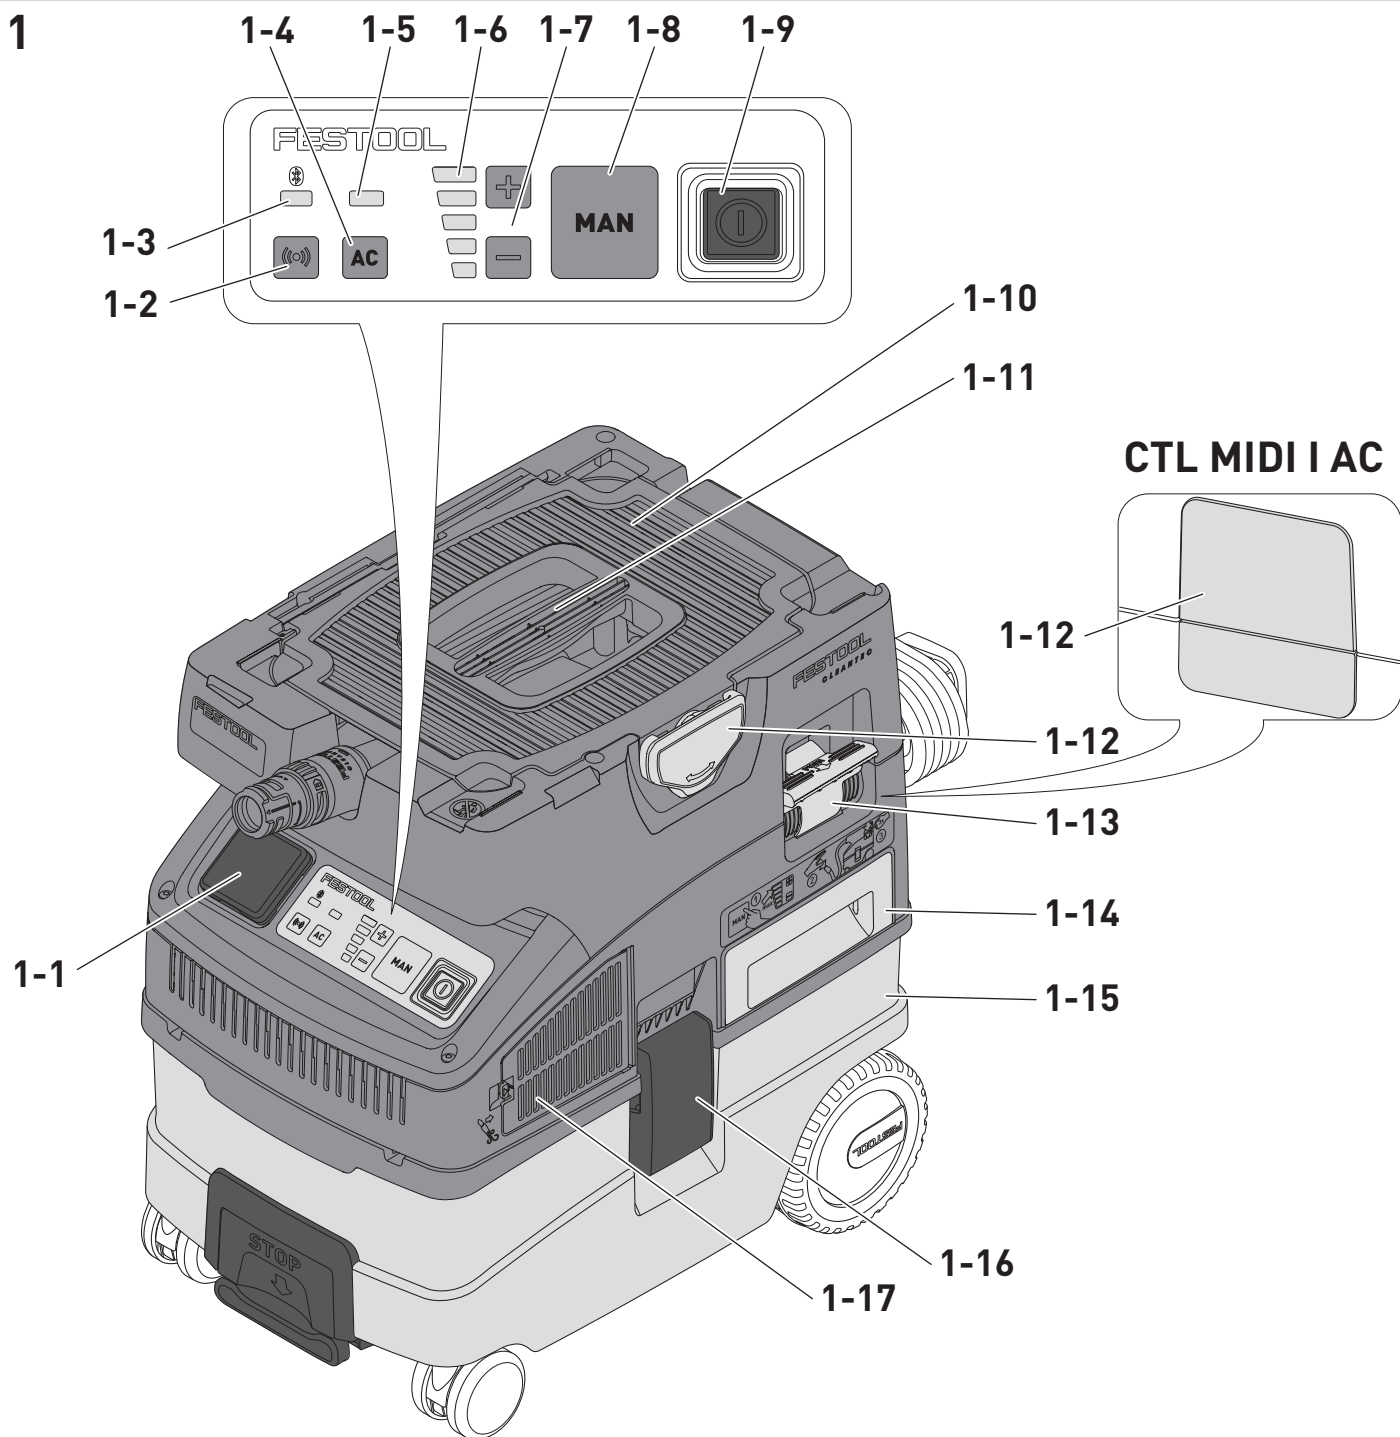



1




1A

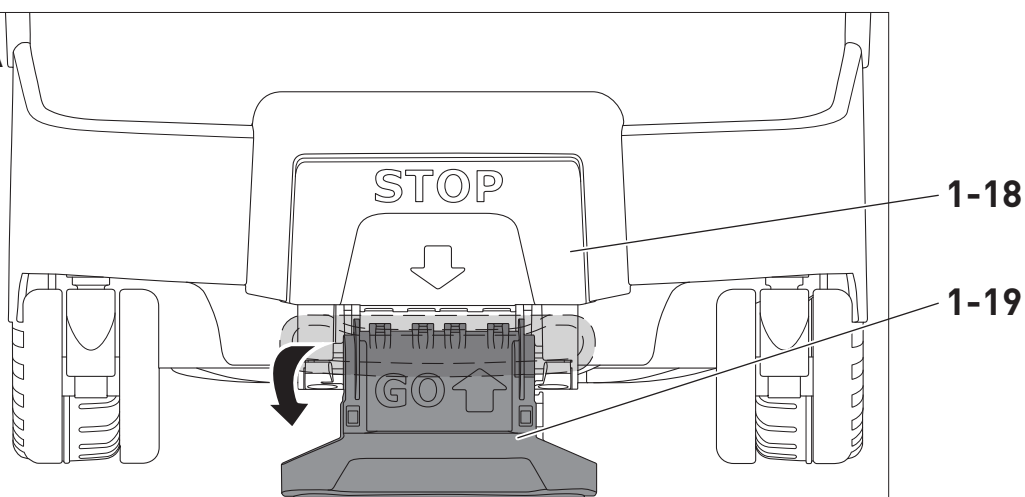


2

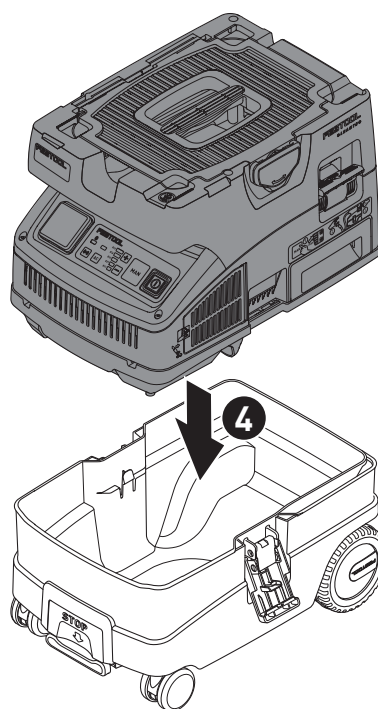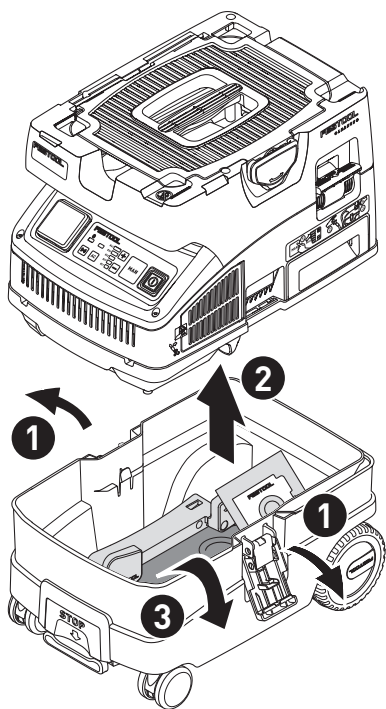


3A

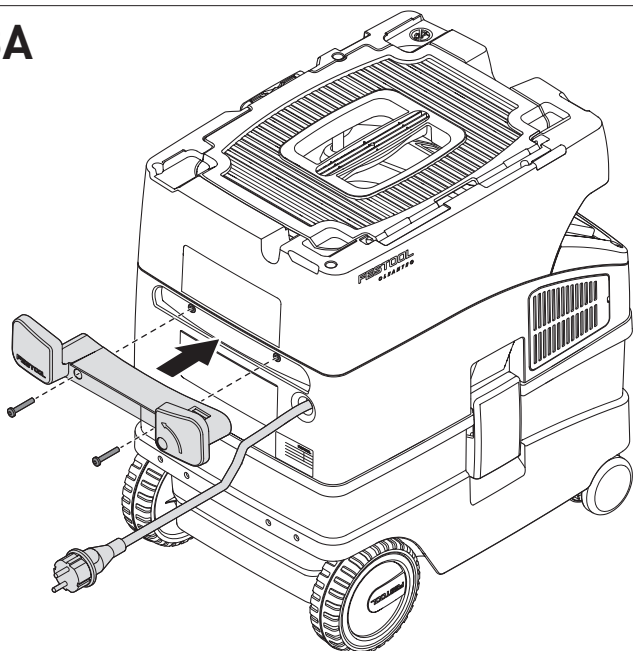


3B

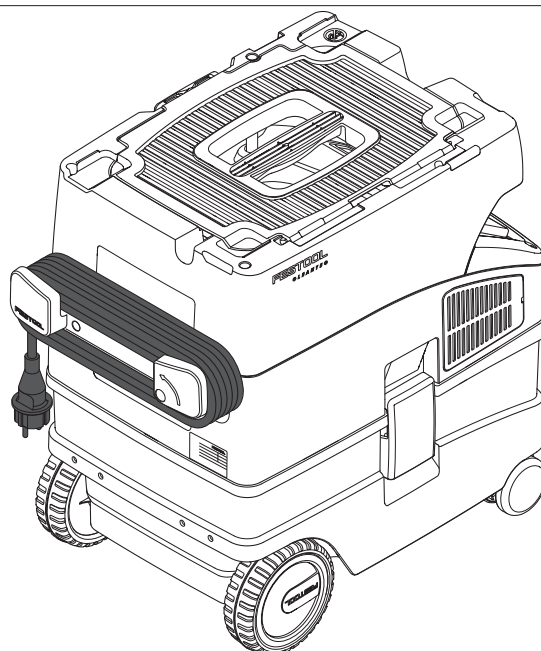


3C

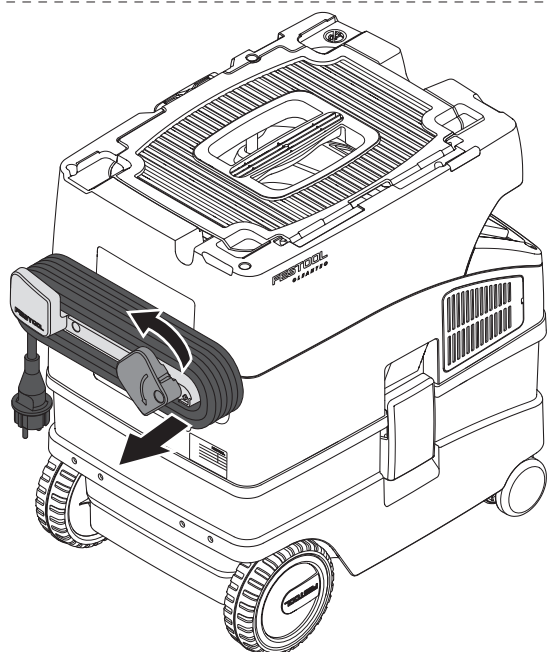


4

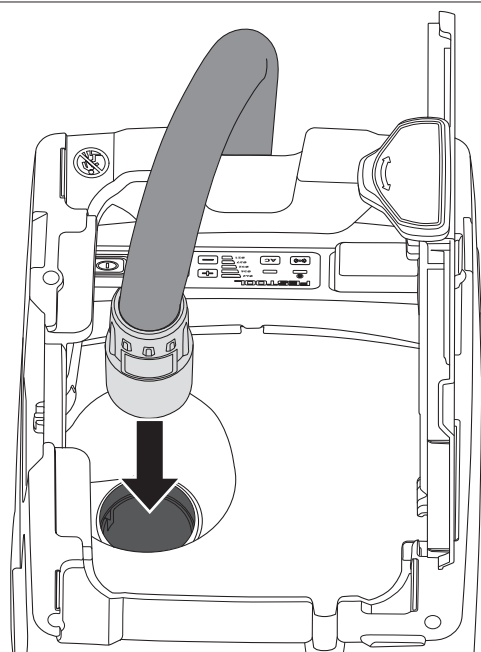


5

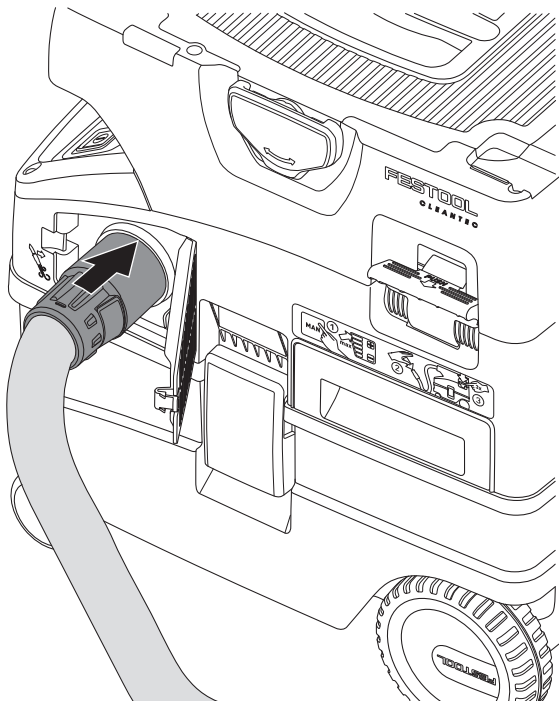


6

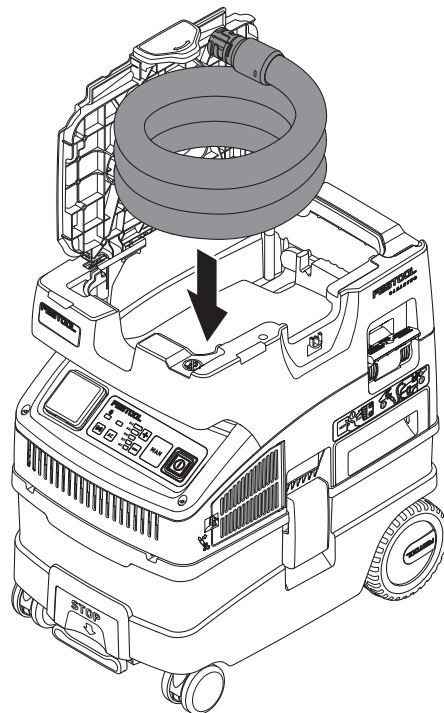


7









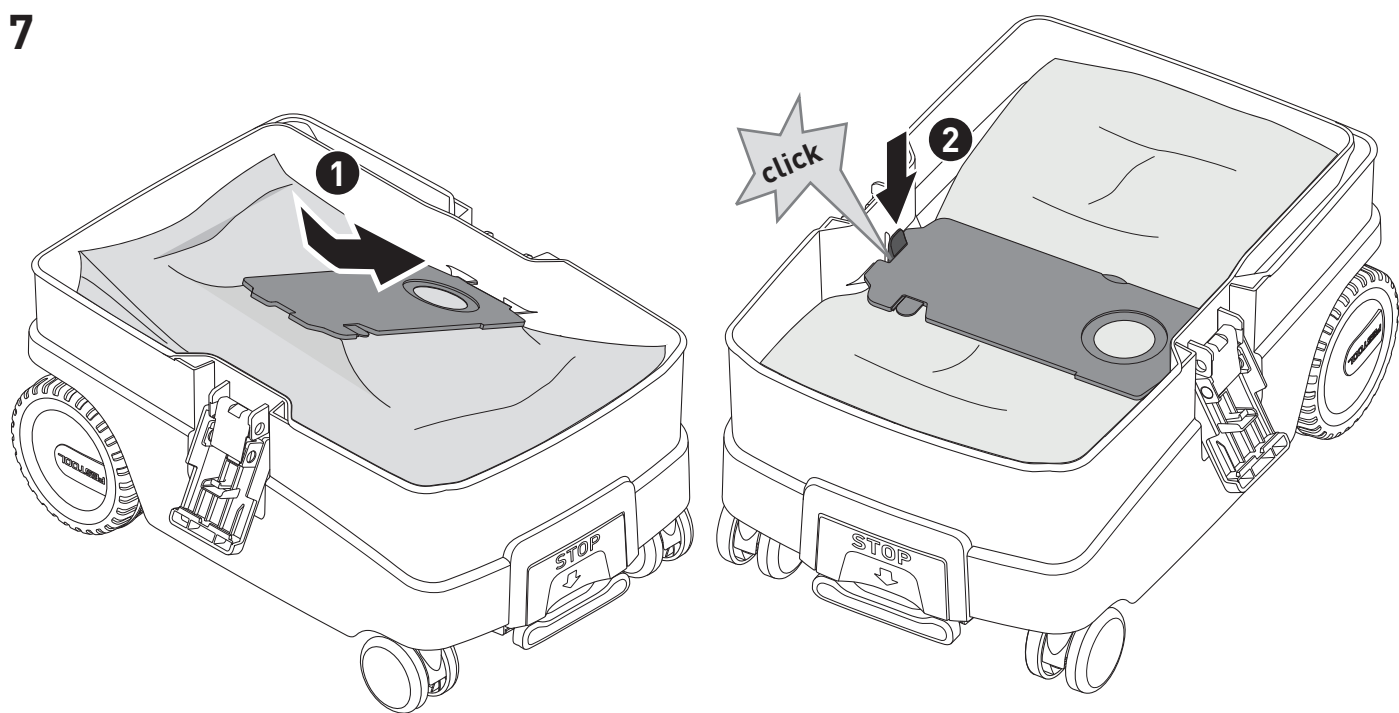


8


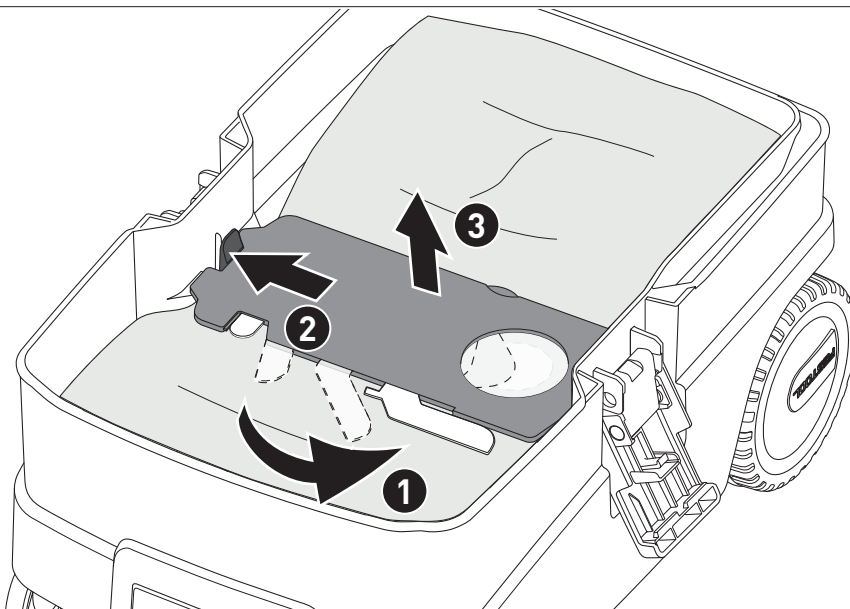


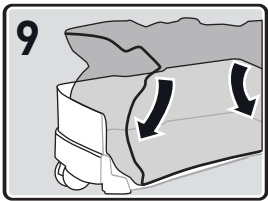


— **ENS-CT MIDI AC/5**

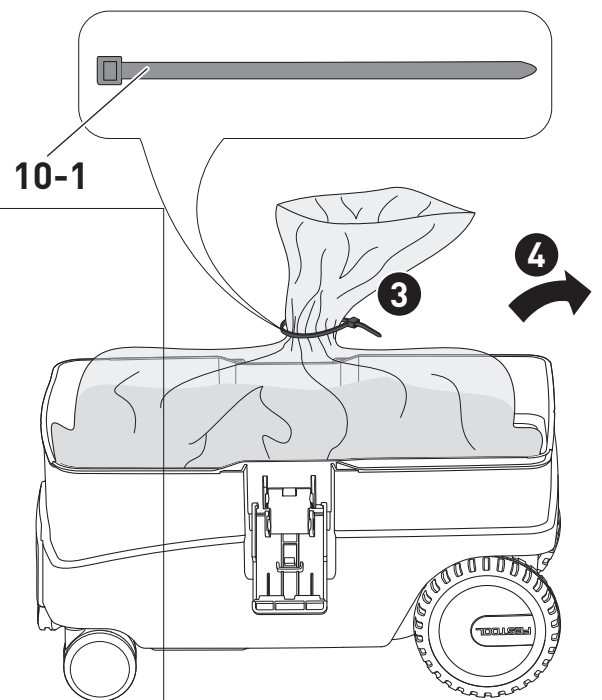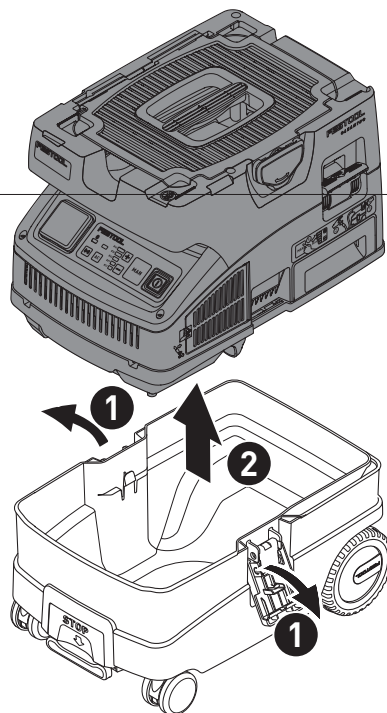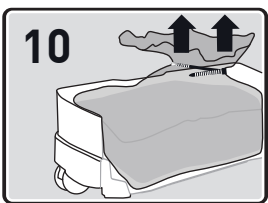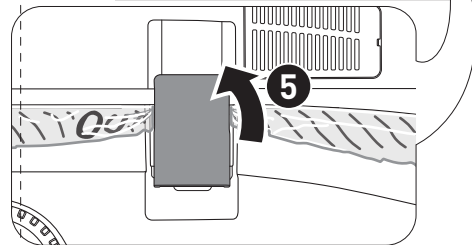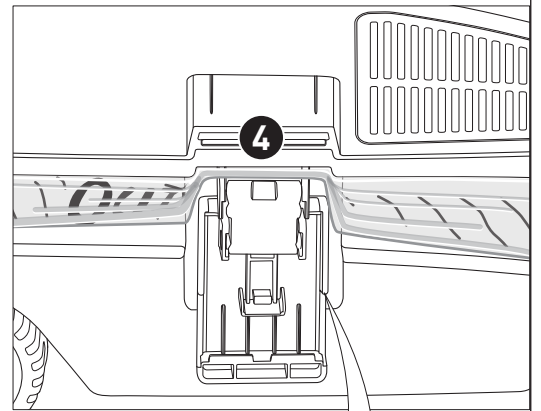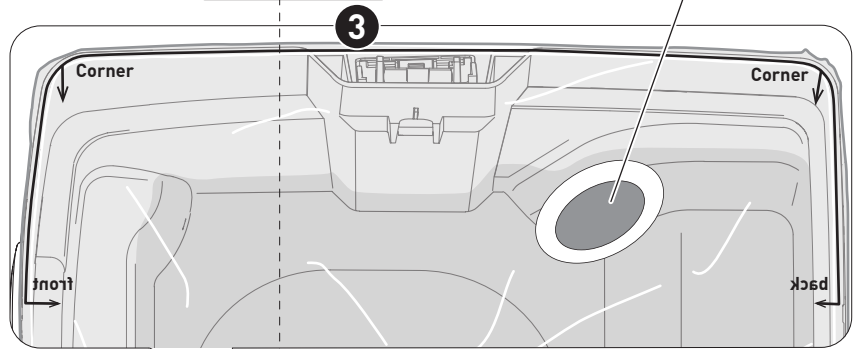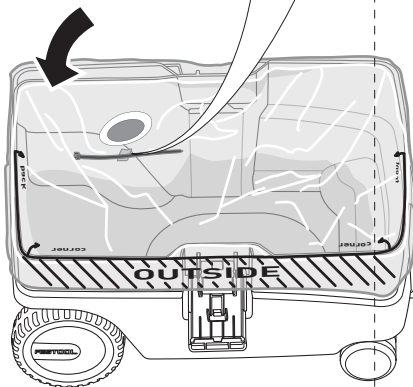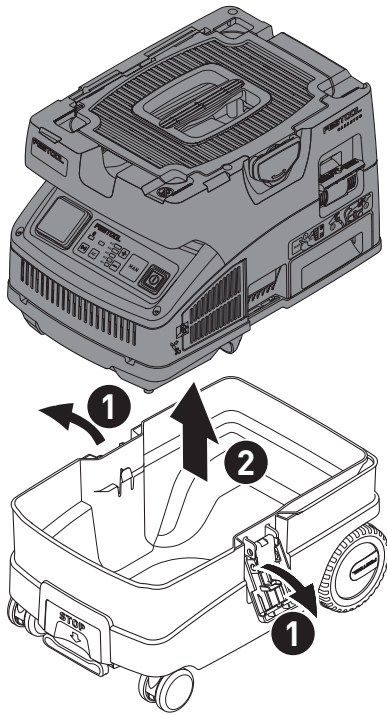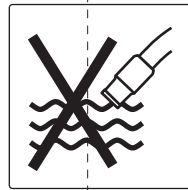


11

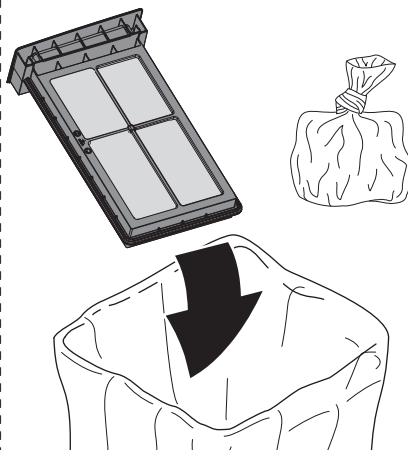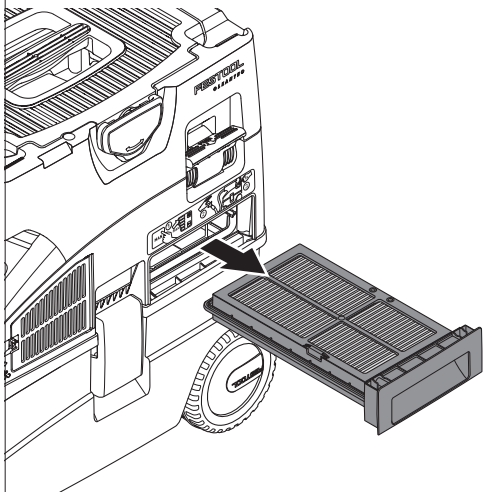



HF-CT COMP

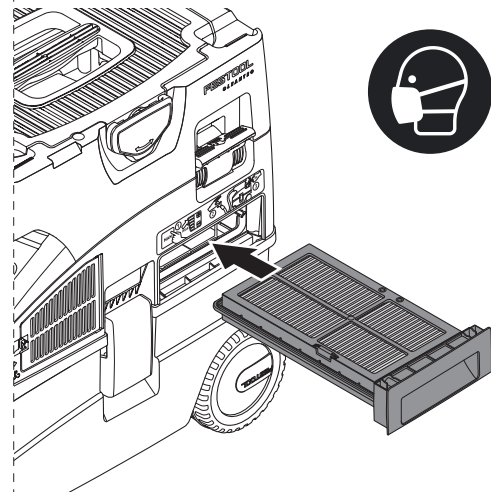

12

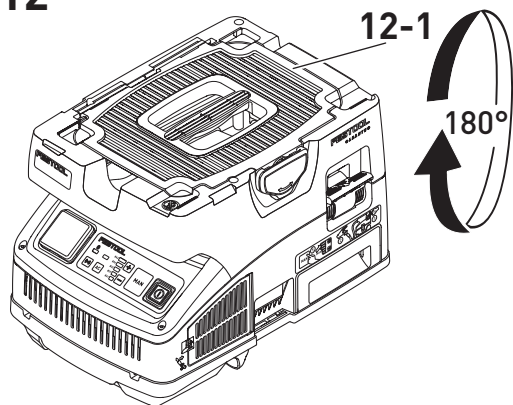

12-2

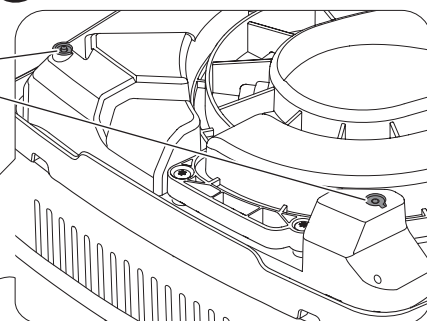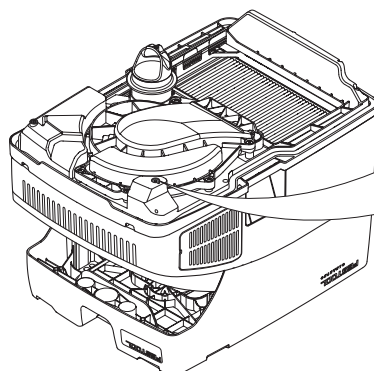

de: EU-Konformitätserklärung. Wir erklären in alleiniger Verantwortung, dass dieses Produkt mit allen relevanten Anforderungen folgender EU-Richtlinien übereinstimmt, und folgende Normen oder normative Dokumente zugrunde gelegt wurden:

en: EU Declaration of Conformity. We declare under sole responsibility that this product complies with all the relevant requirements in the following EU Directives, and following standards or normative documents were applied:

fr: Déclaration de conformité de l'UE. Nous déclarons, sous notre seule responsabilité, que ce produit satisfait à toutes les exigences pertinentes des directives UE suivantes et repose sur les normes ou documents normatifs suivants:

es: Declaración UE de conformidad. Declaramos bajo nuestra responsabilidad que este producto cumple todos los requisitos relevantes de las siguientes directivas de la UE y que se han tomado como base las siguientes normas o documentos normativos:

bg: ЕС декларация за съответствие. Ние заявяваме на собствена отговорност, че настоящият продукт съответства на всички релевантни изисквания на следните Директиви на ЕС и следните стандарти и нормативни документи са взети под внимание:

cs: Prohlášení o shodě EU. Prohlašujeme s veškerou odpovědností, že tento výrobek splňuje všechny příslušné požadavky následujících směrnic EU a že byly použity následující normy nebo normativní dokumenty:

da: EU-overensstemmelseserklæring. Vi erklærer med eneansvar, at dette produkt er i overensstemmelse med alle relevante krav i følgende EU-direktiver, og at følgende standarder eller normative dokumenter danner grundlag for det:

el: Δήλωση συμμόρφωσης ΕΕ. Δηλώνουμε με αποκλειστική μας ευθύνη, ότι αυτό το προϊόν συμμορφώνεται με όλες τις σχετικές απαιτήσεις των ακόλουθων οδηγιών της ΕΕ και ότι έχουν χρησιμοποιηθεί τα ακόλουθα πρότυπα ή κανονιστικά έγγραφα:

et: EL-vastavusdeklaratsioon. Kinnitame ainuvastutajatena, et käesolev toode vastab järgmiste Euroopa Liidu direktiivide nõuetele ning on kooskõlas järgmiste standardite ja normatiivsete dokumentidega:

fi: EU-vaatimustenmukaisuusvakuutus. Vakuutamme yksinomaisella vastuulla, että tämä tuote täyttää seuraavien EU-direktiivien kaikki olennaiset vaatimukset ja se on seuraavien standardien tai standardiasiakirjojen mukainen:

hr: EU izjava o skladnosti. Izjavljujemo pod vlastitom odgovornošću da je ovaj proizvod u skladu sa svim važnim zahtjevi- ma sljedećih Direktiva EU i da se polazilo od sljedećih normi ili normativnih dokumenata:

hu: EU megfelelőségi nyilatkozat. Kizárólagos felelősségünk tudatában kijelentjük, hogy ez a termék az alábbi EU-irányelvek minden vonatkozó követelményének megfelel az alábbi szabványok vagy normatív dokumentumok alapul vételével:

it: Dichiarazione di conformità UE. Dichiariamo sotto nostra unica responsabilità che il presente prodotto sia conforme a tutti i requisiti di rilevanza definiti dalle seguenti Direttive UE e che siano stati applicati le seguenti norme o i seguenti documenti normativi:

lt: ES atitikties deklaracija. Prisiimdami visą atsakomybę pareiškiamo, kad šis gaminys tenkina visus svarbius toliau nurodytų ES direktyvų reikalavimus, ir kad jį projektuojant, buvo panaudotos toliau nurodytos normos arba normatyviniai dokumentai:

lv: ES atbilstības deklarācija. Mēs ar pilnu atbildību paziņojam, ka šis izstrādājums atbilst visām svarīgākajām šādu EK direktīvu prasībām un ir izgatavots atbilstoši šādiem standartiem vai normatīvajiem dokumentiem:

nb: EU-samsvarserklæring. Vi erklærer under eneansvar at dette produktet oppfyller alle relevante krav i følgende EU-direktiver og at følgende standarder eller normative dokumenter er blitt lagt til grunn:

nl: EU-conformiteitsverklaring. Wij verklaren en stellen ons ervoor verantwoordelijk dat dit product volledig voldoet aan alle volgende EU-richtlijnen en volgende normen of normatieve documenten daaraan ten grondslag gelegd werden:

pl: Deklaracja zgodności UE. Niniejszym oświadczamy naszą odpowiedzialność, że produkt ten spełnia wszystkie obowiązujące wymagania następujących dyrektyw UE, norm lub dokumentów normatywnych.

pt: Declaração de conformidade UE. Sob nossa inteira responsabilidade, declaramos que este produto está de acordo com todas as exigências relevantes das seguintes diretivas UE, tendo sido tomadas por base as seguintes normas ou documentos normativos:

ro: Declarație de conformitate UE. Declarăm pe proprie răspundere că acest produs este conform cu toate cerințele relevante din următoarele directive UE și că se bazează pe următoarele norme sau documente normative:

ru: Декларация о соответствии ЕС. Мы со всей ответственностью заявляем, что данная продукция соответствует всем применимым требованиям следующих Директив ЕС, стандартов и нормативных документов:

sk: EÚ vyhlásenie o zhode. Zodpovedne vyhlasujeme, že tento produkt súhlasí so všetkými relevantnými požiadavkami nasledujúcich smerníc EÚ a vychádza z nasledujúcich noriem alebo normatívnych dokumentov:

sl: EU izjava o skladnosti. S polno odgovornostjo izjavljamo, da je ta proizvod skladen z vsemi veljavnimi zahtevami naslednjih direktiv EU in da izpolnjuje zahteve naslednjih standardov ali normativnih dokumentov:

sv: EU-försäkran om överensstämmelse. Vi förklarar på eget ansvar att denna produkt uppfyller alla relevanta krav enligt följande EU-direktiv och baseras på följande normer eller normgivande dokument:

Absaugmobile / Mobile dust extractors	Seriennummer / Serial number * T-Nr.
CT 15	10830309, 10830310, 10830311
CT 25	10830316, 10830317, 10830318
CTL MINI I	10830351, 10830352, 10830353, 10830354, 10830355
CTL MIDI I	10830356, 10830607, 10830608, 10830609, 10830610
CTL MIDI I AC	10966595, 10966596, 10966597, 11088984



2006/42/EC, 2014/53/EU, 2014/30/EU, 2011/65/EU

EN 60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021

EN 60335-2-69:2012,

EN 300 328 V2.2.2,

EN 301 489-1 V1.9.2,

EN 301 489-17 V3.2.4,

EN 303 446-1 V1.2.1,

EN 55032:2015 + A11:2020,

EN 55014-1:2017 + A11:2020,

EN 55014-2:1997 + A1:2001 + A2:2008 + AC:1997,

EN 61000-3-2:2014,

EN 61000-3-3:2013,

EN 62233:2008 + AC:2008,

EN 62311:2008,

EN IEC 63000:2018

We as the manufacturer declare under our sole responsibility that the product(s) fulfill(s) all the relevant provisions of the following UK Regulations and are manufactured in accordance with the following designated standards:



S.I. 2008/1597 Supply of Machinery [Safety] Regulations 2008

S.I. 2017/1206 Radio Equipment Regulations 2017

S.I. 2016/1091 Electromagnetic Compatibility Regulations 2016

S.I. 2021/422 Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012

BS EN 60335-1:2012 + AC:2014 + A11:2014 + A13:2017 + A15:2021,

BS EN 60335-2-69:2012,

BS EN 300 328 V2.2.2,

BS EN 301 489-1 V1.9.2,

BS EN 301 489-17 V3.2.4,

BS EN 303 446-1 V1.2.1,

BS EN 55032:2015 + A11:2020,

BS EN 55014-1:2017 + A11:2020,

BS EN 55014-2:1997 + A1:2001 + A2:2008 + AC:1997,

BS EN 61000-3-2:2014,

BS EN 61000-3-3:2013,

BS EN 62233:2008 + AC:2008,

BS EN 62311:2008,

BS EN IEC 63000:2018

Unterzeichnet für und im Namen von/ Signed on behalf of and in name of Festool GmbH, Wertstr. 20, 73240 Wendlingen, GERMANY, Wendlingen, 2025-04-08:

ppa.

Markus Stark
Leiter Forschung & Entwicklung Produkte
Head of Research & Development Products

i.V.

Tim Weber
Leiter Produktkonformität
Head of Product Compliance

Contents		
1	Safety warnings.....	20
2	Symbols.....	22
3	Parts of the device.....	22
4	Technical data.....	22
5	Intended use.....	23
6	Commissioning.....	23
7	Connecting a device.....	24
8	Settings.....	25
9	Working.....	25
10	Service and maintenance.....	27
11	Transportation.....	28
12	Environment.....	28
13	General information.....	28

1 Safety warnings



WARNING! Read all safety warnings and instructions. Failure to follow the safety warnings and instructions may result in electric shock, fire and/or serious injury.

Save all safety warnings and instructions for future reference.

- This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. **Children** should be supervised to ensure that they do not play with the appliance.
- This machine must not be used by people who might have a particularly adverse reaction to an electric shock (e.g. **people with cardiac pace-makers**), because the possibility of the machine building up a static charge cannot be excluded.
- **Ensure you are on a firm base.** The effects of a shock moment, e.g. due to antistatic discharge, may lead to accidents.
- This machine must only be operated under constant supervision. To prevent potential hazards, never let it run unsupervised.
- Always use suitable protective equipment!



- **WARNING** The machine may contain hazardous dust. Only have the machine maintained and emptied, and only have the filter replaced by an authorised specialist using suitable protective equipment.
- Always operate with the filter system installed!
- **NOTE**
This machine is only intended for indoor use.
This machine must only be stored indoors.

- **WARNING** Only use the socket outlet on the machine for purposes specified in the instructions.
- **WARNING** If foam or liquid escapes from the machine, switch off immediately.
- **CAUTION** Clean the water level limiting device regularly and examine it for signs of damage.
- **WARNING** Operators shall be adequately instructed on the use of these machines.
- **WARNING:** When extracting dust that exceeds the limit value or large volumes of oak or beechwood dust, only extract from one dust source (power or compressed-air tool).
- **Risk of explosion and fire! Do not extract:**
 - Sparks, glowing particles or hot dust;
 - combustible or explosive materials (e.g. magnesium, aluminium, petrol, diluting agents);
 - aggressive materials (e.g. acid, alkaline solutions, solvents);
 - chemically reactive materials which lead to the generation of heat, acids/bases, gases, etc. (e.g. reactive two-component materials, aluminium and water).
- Observe all national safety regulations as well as the material manufacturer's specifications!
- The mains plug must always be disconnected from the socket before performing cleaning or maintenance tasks, when replacing consumables or when converting the machine.
- If intact following a visual inspection, work in a dry environment according to instructions!
- Check the plug, the electrical outlet module, the cable and the filter regularly in order to prevent a hazard. Damaged electrical components must be replaced by an authorised service workshop only.
- Use only the original Festool suction hose.
- **Pay attention to the work environment and watch out for your own safety and the safety of others when transporting or working with the machine.**

In this way, you can for example prevent tripping hazards caused by the suction hose or mains cable.
- Only carry the machine using the handle provided.
- Do not lift or transport using a crane hook or lifting gear.

– Keep packaging film away from children.

There is a risk of suffocation.

2 Symbols



Warning of general danger



Warning of electric shock



Read the operating manual and safety warnings.



Wear a dust mask.



Tip or advice



WARNING! The machine may contain hazardous dust!



Dust class L (low risk) suitable for separation of dust with an exposure limit value greater than 1 mg/m³



CE conformity marking



UKCA marking: Confirms the conformity of the product with UK regulations.



Do not dispose of it with domestic waste.



Do not climb on the unit



Machine contains a chip which stores data. See section 13.3.

[1-3] Connection display

[1-4] AC button
(variants with AUTOCLEAN only)

[1-5] AC indicator
(variants with AUTOCLEAN only)

[1-6] Status indicator (suction power adjustment)

[1-7] Buttons for suction power adjustment

[1-8] MAN button

[1-9] On/off switch

[1-10] Hose holder

[1-11] Handle

[1-12] T-LOC lock for Systainers

[1-13] Dedusting lever
(variants without AUTOCLEAN only)

[1-14] Main filter

[1-15] Dirt trap

[1-16] Locking clip

[1-17] Exhaust air opening

[1-18] Release button (brake)

[1-19] Brake

The specified illustrations appear at the beginning of the Operating Instructions.

Accessories shown or described are not always included in the scope of delivery.

3 Parts of the device

[1-1] Electrical outlet module

[1-2] Connection button

4 Technical data

Mobile dust extractors		CTL MINI I CTL MIDI I CTL MIDI I AC
Power consumption		350–1200 W
Max. electrical outlet module connected load	EU	2400 W
	CH, DK	1100 W
	GB 230 V/110 V	1800 W/230 W
	KR	2300 W

Mobile dust extractors		CTL MINI I CTL MIDI I CTL MIDI I AC
Max. volume flow (air), extractor/turbine		130 m³/h/222 m³/h
Max. vacuum, turbine		240 hPa
Suction hose		D 27/32x3.5 m AS/CTR
Mains power cable length		7.5 m
Sound pressure level as per EN 60335-2-69/uncertainty K		72 dB(A)/3 dB
Hand-arm vibrations in accordance with EN 60335-2-69		< 2.5 m/s²
Protection class		IP X4
Frequency		2402–2480 MHz
Effective isotropic radiated power (EIRP)		< 10 dBm
Container capacity	CT MINI I	10 l
	CT MIDI I	15 l
Dimensions L x W x H	CT MINI I	470 x 320 x 455 mm
	CT MIDI I	470 x 320 x 495 mm
Weight	CT MINI I	11.2 kg
	CT MIDI I	11.5 kg
	CT MIDI I AC	11.8 kg

5 Intended use

Mobile dust extractor suitable for

- extracting dust up to 1 mg/m³ according to dust class L,
- extracting water,
- for increased loads during commercial use, according to IEC/EN 60335-2-69.



The user is liable for improper or non-intended use.

6 Commissioning



WARNING

Unauthorised voltage or frequency!

Risk of accidents

- Observe the specifications on the machine's name plate.
- Observe country-specific regulations.

6.1 Initial commissioning

- Open the locking clips **[1-16]** and remove the top section of the machine, see figure **[2]**.
- Remove the accessories from the dirt trap **[1-15]**, see figure **[2]**.

- Insert a filter bag or disposal bag in the dirt trap, see sections **10.1** and **10.2**.
- Place on the top section of the machine and close the locking clips **[1-16]**.
- Attach the cord holder to the reverse of the mobile dust extractor, see figure **[3]**.
- Connect the suction hose to the machine, see figure **[4]**.

6.2 Connecting a mobile dust extractor



WARNING

Risk of injury from power tools starting up unexpectedly

- Before switching on, ensure that the connected power tool is switched off.



WARNING

Risk of injury from electric current

- Insert the mains plug into an earthed mains socket.
- Do not reach into the electrical outlet module on the mobile dust extractor.

-  While the mobile dust extractor is connected to the mains socket, an electric current is running through electrical outlet module on the mobile dust extractor at all times.

Connecting the mobile dust extractor to a mains socket

The mobile dust extractor is switched off.

- Connect the power cable to a mains socket.
- ☑ The electrical outlet module **[1-1]** is live.

Switching the mobile dust extractor to standby mode

- Press the on/off switch **[1-9]**.
- ☑ The electrical outlet module **[1-1]** is live.

-  The green LED **[1-6]** indicates standby mode.

Starting the mobile dust extractor automatically

The mobile dust extractor is in standby mode.

- To start the mobile dust extractor automatically: Switch on the connected power tool.

Starting the mobile dust extractor manually

The mobile dust extractor is in standby mode.

- Press the MAN button **[1-8]**.



Pull the mains plug from the mains socket when you are not using the mobile dust extractor and before performing any cleaning and maintenance work.

7 Connecting a device



WARNING

Risk of injury from the mobile dust extractor starting up unexpectedly

- Before performing any work with the mobile dust extractor, check which remote control and which power tool are connected to the mobile dust extractor.
- The remote control must only be attached to the suction hose.
- A battery-powered power tool must always be connected to the mobile dust extractor via the suction hose. After finishing work, the connection to the mobile dust extractor must be disconnected.

7.1 Connecting a power tool



WARNING

Risk of injury

- Observe the maximum electrical outlet module connected load (see "Technical data" section).
- Switch off the power tool.

Connecting a mains-powered power tool to the mobile dust extractor

- Connect the power tool to the electrical outlet module **[1-1]**.
- ☑ The power tool is connected to the mobile dust extractor via the power cable.

Connecting a battery-powered power tool to the mobile dust extractor

- In standby mode, press the connection button **[1-2]**.
The connection display **[1-3]** flashes slowly. For a period of 60 seconds, the mobile dust extractor is ready for connection.
- Turn on the battery-powered power tool.
The mobile dust extractor starts up and the battery-powered power tool is connected until the mobile dust extractor is manually switched off or the mains plug is disconnected. The cordless tool must then be connected again.

Connecting a new battery-powered power tool overwrites the previous connection.

7.2 Festool app*

The mobile dust extractor can be configured with the Festool app.

- Hold down the connection button **[1-2]** on the mobile dust extractor for three seconds in standby mode.
The connection display **[1-3]** flashes rapidly.
For a period of 60 seconds, the mobile dust extractor is ready for connection.
- Follow the instructions provided in the Festool app.

* Not available in all countries.

7.3 Connecting the CT-F I remote control

Connecting the remote control and the mobile dust extractor

To be able to connect a remote control to a mobile dust extractor, the remote control must be reset (see "Resetting the remote control"). A remote control that has not been connected previously can be connected directly.

-  A connection that has been established between the remote control and the mobile dust extractor will persist even after the mobile dust extractor has been manually switched off or the mains plug has been disconnected.
- ▶ Hold down the connection button **[1-2]** on the mobile dust extractor for three seconds in standby mode.
The connection display **[1-3]** flashes rapidly.
For a period of 60 seconds, the mobile dust extractor is ready for connection.
 - ▶ Press the MAN button on the remote control.
The remote control is permanently stored in the mobile dust extractor.

Switching on/off

Once the remote control is connected to the mobile dust extractor, the mobile dust extractor can be switched on and off with the remote control.

- ▶ Press the MAN button on the remote control to switch the device on and off.

Resetting on the remote control

Resetting deletes the connection between a remote control and the mobile dust extractor.

- ▶ Hold down the connection button and the MAN button for ten seconds.
- ☑ The LED indicator lights up purple if the reset has taken place.

8 Settings

8.1 Adjusting the suction power

- ▶ Press the plus or minus button **[1-7]** while extracting.

8.2 Connecting sleeve

The bypass function of the connecting sleeve prevents strong suction from sanding machines and floor nozzles on smooth surfaces.

Open

- ▶ Turn the adjusting ring to the "OPEN" position.

Close

- ▶ Turn the adjusting ring to the "CLOSE" position.

8.3 Temperature cut-out

To prevent overheating, a temperature cut-out switches the mobile dust extractor off before it reaches a critical temperature.

The bottom LED of the status display **[1-6]** lights up red.

- ▶ Switch off the mobile dust extractor, let it cool down.
- ▶ Switch on the mobile dust extractor again after approx. five minutes.

8.4 Locking the brake [1A]

- ▶ Raise the front of the mobile dust extractor slightly.
- ▶ Push down the brake **[1-19]** until it engages into position.
- ▶ Actuate the button **[1-18]** to release it.

8.5 SYS dock



WARNING

Risk of falling

- ▶ Do not stand on the storage area of the mobile dust extractor.



CAUTION

Risk of injury

- ▶ When transporting, ensure that the T-LOC lock is closed.

A Systainer can be fastened to the storage area of the hose holder **[1-10]** with the T-LOC lock **[1-12]**.

9 Working

9.1 Extracting dry materials



CAUTION

Hazardous dust

Damage to the respiratory passage

- ▶ Always use a filter or disposal bag.



When extracting dust that exceeds the limit value, only extract from one dust source (power or compressed-air tool).

Observe the following when extracting dust generated by operating electric power tools:

If the exhaust air is discharged back into the room, the **air renewal rate L** within the room must be sufficient. The volume of air discharged back into the room must not exceed 50% of the fresh air volume flow (room volume

V_R x air renewal rate L_W). In addition, observe the national regulations.

Observe the following: A moist main filter clogs more quickly when extracting dry materials. Therefore, dry the main filter before extracting dust or replace the damp filter with a dry one.

9.2 Extracting wet materials/liquids

CAUTION! Remove the filter/disposal bag.

Use a special wet filter (NF-CT COMP).

The dust extraction stops automatically when the maximum fill level is reached.

The bottom LED **[1-6]** flashes red.

- Switch off the mobile dust extractor **[1-9]**.
- Open the locking clips **[1-16]** and remove the top section of the machine.
- Empty the dirt trap **[1-15]**.

After wet extraction, allow the wet filter to dry.

Dry the mobile dust extractor and dirt trap before extracting dry dust and before storing the extractor.



CAUTION

Hazardous dust

Damage to the respiratory passage

- After extracting wet materials, remove the wet filter and replace it with a main filter for dry materials.



CAUTION

Escaping foam and liquids

- Switch off the machine immediately and empty the dirt trap.

9.3 Exhaust-air outlet



CAUTION

Hazardous dust

Damage to the respiratory passage

- Do not stir up any dust.

The exhaust-air outlet offers the option of diverting the exhaust air outside a building using the suction hose.

- Open the grille in front of the exhaust-air outlet **[1-17]**.
- Insert the suction hose in the exhaust-air outlet, see figure **[5]**.

9.4 Dedusting the main filter – CT MINI/MIDI I

- In standby mode, press the MAN button **[1-8]**.
- Set the suction power to the maximum setting **[1-7]**.
- Close the suction hose manually while at the same time briefly pressing down the dedusting lever **[1-13]** three times.

9.5 Dedusting the main filter – CT MIDI I AC (AUTOCLEAN)

CAUTION! Only in conjunction with a disposal/filter bag (to comply with dust class L). Not for use during wet extraction.

Switching automatic dedusting on and off

- In standby mode, press the AC button **[1-4]** to switch AUTOCLEAN on or off.

❶ The AC function can be configured with the Festool app*.

Manual dedusting

- Press the AC button **[1-4]** while extracting.

Full manual dedusting

- While extracting, cover the end of the nozzle or suction hose with your hand for three seconds.
- Press and hold the AC button **[1-4]** for at least three seconds.

Do not clean the main filter too often within a short period of time.

Within 1 minute maximum:

1x full manual dedusting

3x manual dedusting

* Not available in all countries.

9.6 After finishing work

CAUTION! Only store this machine indoors.

- Switch off the mobile dust extractor and pull the mains plug out of the mains socket.
- Wind up the mains power cable on the cable holder, see figure **[3]**.
- Empty the dirt trap.
- Place the suction hose in the sealable hose holder, see figure **[6]**.
- Vacuum and wipe the inside and outside of the mobile dust extractor to clean it.
- Place the mobile dust extractor in a dry room inaccessible to unauthorised users.

❶ The cover on the hose holder **[1-10]** also serves as a storage area for tools.

10 Service and maintenance



WARNING

Risk of injury, electric shock

- Always pull the mains plug from the socket before performing any servicing and maintenance work.
- All maintenance and repair work which requires the housing to be opened should always be carried out by an authorised service workshop.

Customer service and repairs must only be carried out by the manufacturer or service workshops. You must only use **original Festool spare parts**.

Further information: www.festool.co.uk/service
Damaged safety devices and components must be properly repaired or replaced by a recognised specialist workshop, unless otherwise indicated in the operating manual.

Observe the following instructions:

- Dust-related inspection (e.g. for filter damage, tightness of the machine and function of the control devices) by the manufacturer or an instructed person at least once a year.
- Dispose of components that cannot be cleaned. Use impermeable bags to do so. Observe the applicable disposal provisions.
- Provided maintenance personnel or other persons in the vicinity are not endangered, the user must dismantle and clean the machine prior to performing maintenance work. Appropriate precautionary measures include decontaminating the machine prior to disassembly, making provisions for locally filtered forced ventilation at the location of machine disassembly, cleaning the maintenance area and appropriate personal protective equipment.

10.1 Changing the filter bag (SC-FIS-CT MINI/MIDI-2/5/CT15)

Inserting the filter bag [7]

- Open the locking clips **[1-16]** and remove the top section of the machine.
- Place a new filter bag (SC-FIS-CT MINI/MIDI-2/5/CT15) in the dirt trap and insert the flange on both sides.
- Fit the top section of the machine and close the locking clips.

Removing the filter bag [8]

- Open the locking clips **[1-16]** and remove the top section of the machine.
- **①** Pull the tab on the filter bag until the filter bag opening is fully closed.
- **②** Remove the flange from the retainer.
- ☑ **③** The filter bag is now securely closed and can be removed.
- Fit the top section of the machine and close the locking clips.

10.2 Changing the disposal bag – variants with AUTOCLEAN only (ENS-CT MIDI AC/5)

Inserting the disposal bag [9]

- **① + ②** Open the locking clips **[1-16]** and remove the top section of the machine.
- **③** Insert a new disposal bag (ENS-CT MIDI AC/5) into the dirt trap and place it over the edge of the dirt trap along the line markings.

Important:

- Ensure that the markings on the disposal bag are correctly positioned in the dirt trap.
- Make sure that the venting membrane **[9-1]** is located in the rear part of the dirt trap.
- Replace the top section of the machine.
- **④** Gather together the overhanging part of the disposal bag around the locking clips and push it into the recess above the locking clips.
- **⑤** Close the locking clips.

Removing the disposal bag [10]

- **① + ②** Open the locking clips **[1-16]** and remove the top section of the machine.
- **③** Close the disposal bag using the cable tie **[10-1]**.
- **④** Remove the disposal bag and dispose of it in accordance with statutory regulations.
- Clean the dirt trap **[1-15]**.

10.3 Changing the main filter [11]

- Remove the used main filter **[1-14]**.
- Dispose of the used main filter in accordance with statutory regulations.
- Insert a new main filter (HF-CT COMP).

- i** Refer to the Festool catalogue for the order numbers of accessories, filters and consumables or find them online at "www.festool.com".

NOTICE

Damage to the motor

- ▶ Never extract material without a main filter or with a damaged main filter, as this can damage the motor.

10.4 Cleaning the fill level sensors [12]

Clean the fill level sensors regularly after vacuuming liquids.

- ▶ Switch off the mobile dust extractor [1-9].
- ▶ Open the locking clips [1-16] and remove the top section of the machine.
- ▶ Turn the top section of the machine [12-1] and place it upside down.
- ▶ Clean the fill level sensors [12-2] with a soft cloth and inspect them for damage.

11 Transportation

Observe the following instructions:

- Always lock the T-LOC lock [1-12] on the mobile dust extractor prior to transportation.
- Only carry by the handle [1-11].
- For transportation in vehicles, secure the mobile dust extractor against slipping and tilting in accordance with the valid guidelines.

12 Environment



Do not dispose of the device in the household waste! Recycle devices, accessories and packaging. Observe applicable national regulations.

In accordance with the European Directive on waste electrical and electronic equipment and implementation in national law, used electrical devices must be collected separately and handed in for environmentally friendly recycling.

Information on the collection points can be viewed at www.festool.com/environment.

Information on critical materials:

www.festool.co.uk/reach

13 General information

Imported into the UK by

Festool UK Ltd
1 Anglo Saxon Way

Bury St Edmunds
IP30 9XH
Great Britain

13.1 Licence information

Licence information on any open source licences used in the product can be found in the Festool app* at **Information > Power tool open source licenses**.

* Not available in all countries.

13.2 Bluetooth®

The Bluetooth® word mark and the logos are registered trademarks of Bluetooth SIG, Inc.; they are used by TTS Tooltechnic Systems AG & Co. KG, and therefore by Festool, under licence.

13.3 Information on data privacy

The tool contains a chip which automatically stores machine and operating data. The data saved cannot be traced back directly to an individual.

The data can be read in a contactless manner using special devices and shall only be used by Festool for fault diagnosis, repair and warranty processing and for quality improvement or enhancement of the device. The data shall not be used in any other way without the express consent of the customer.