#### 170655.0620/a Absauggerät Originalbetriebsanleitung de Dust extractor Translation of the original operating instructions en Aspirateur Traduction de la notice d'emploi originale 26 fr Aspiratore Traduzione delle istruzioni d'uso originali 37 it Afzuigtoestel Vertaling van de originele gebruiksaanwijzing 48 nl 25 Aspirador Traducción del manual de instrucciones original 59 es fi Imurointilaite Käännös alkuperäiskäyttöohjeesta 70 Sugaggregat Översättning av originalbruksanvisningen 81 SV da Udsugningsapparat Oversættelse af den originale betjeningsvejledning 91 Аспирационное Перевод оригинальной 101 инструкции ПО ru устройство эксплуатации 113 Urządzenie odpylające Tłumaczenie oryginalnej instrukcji obsługi рl 124 Odsávací přístroj Překlad původního provozního návodu CS 135 sl Odsesovalna naprava Prevod izvirnih navodil za uporabo







MAF2050/c

MAF2049/c

5

16

### WARNUNG

Lesen Sie alle Sicherheitshinweise und Anweisungen. Versäumnisse bei der Einhaltung der Sicherheitshinweise und Anweisungen können elektrischen Schlag, Brand und/oder schwere Verletzungen verursachen. Bewahren Sie alle Sicherheitshinweise und Anweisungen für die Zukunft auf.

#### WARNING

Please read all safety instructions and directions. Failure to comply with the safety instructions and directions can cause electric shock, fire and/or serious injuries. Please retain all safety instructions and directions for future reference.

Veuillez lire toutes les consignes de sécurité et instructions. Tout non-respect des consignes de sécurité et instructions risque d'être à l'origine de décharges électriques, d'incendies et/ou de blessures graves. Conservez toutes les consignes et instructions pour pouvoir les relire à tout moment.

Leggere tutte le avvertenze di sicurezza e le istruzioni. La mancanza del rispetto delle avvertenze di sicurezza e delle istruzioni possono causare scossa elettrica, incendio e/o gravi lesioni. Conservare tutte le avvertenze di sicurezza e le istruzioni per il futuro.

Lees alle veiligheidsaanwijzingen en instructies. Nalatigheid bij het naleven van de veiligheidsinstructies en aanwijzingen kan elektrische schok, brand en/of ernstige letsels veroorzaken. Bewaar alle veiligheidsaanwijzingen en instructies voor later gebruik.

#### **ADVERTENCIA**

Lea todas las indicaciones de seguridad e instrucciones. Si no se cumplen las indicacionesde seguridad e instrucciones, se pueden producir descargas eléctricas, incendios y/o lesiones graves. Guarde todas las indicaciones de seguridad e instrucciones para el futuro.

#### VAROITUS

Lue kaikki turvaohjeet ja käyttöohjeet. Laiminlyönti turvaohjeiden ja käyttöohjeiden noudattamisessa voi aiheuttaa sähköiskun, tulipalon ja/tai vakavia vammoja. Säilytä kaikki turvaohjeet ja käyttöohjeet tulevaisuuden varalle.

#### VARNING

Läs alla säkerhetsanvisningar och anvisningar. Underlåtenhet att följa säkerhetsanvisningar och anvisningar kan orsaka elstötar, brand och/eller allvarliga personskador. Behåll alla säkerhetsanvisningar och anvisning för framtida användning.

#### **ADVADSEI**

Læs alle sikkerhedshenvisninger og instruktioner. En manglende overholdelse af sikkerhedshenvisningerne og instruktionerne kan føre til elektrisk stød, brand og/eller alvorlige kvæstelser. Opbevar alle sikkerhedshenvisninger og instruktioner til fremtidig brug.

#### ПРЕДУПРЕЖДЕНИЕ

**Прочитайте все правила и инструкции по технике безопасности.** Несоблюдение этих правил и инструкций по технике безопасности может привести к поражению электрическим током, возгоранию и/или другим серьезным травмам. **Сохраните все** правила и инструкции по технике безопасности для дальнейшего использования.

#### **OSTRZEŻENIE**


Przeczytać wszystkie przepisy bezpieczeństwa i wskazówki. Zaniedbanie przestrzegania przepisów bezpieczeństwa i wskazówek może prowadzić do porażenia prądem, pożaru i/lub ciężkich zranień. Zachować wszystkie przepisy bezpieczeństwa i wskazówki na przyszłość.


#### UPOZORNĚNÍ


Přečtěte si všechna bezpečnostní upozornění a pokyny. Zanedbání bezpečnostních upozornění a pokynů může způsobit zásah elektrickým proudem, požár a/nebo vážná zranění. Všechna bezpečnostní upozornění a pokyny si ponechejte pro pozdější použití.


#### **OPOZORILO**


Preberite vsa varnostna opozorila in napotke. Neupoštevanje varnostnih opozoril in napotkov lahko povzroči udar električnega toka, požar in/ali hude telesne poškodbe. Vsa varnostna opozorila in napotke shranite za prihodnjo uporabo.

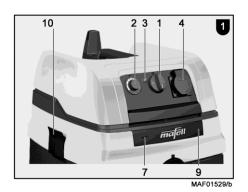


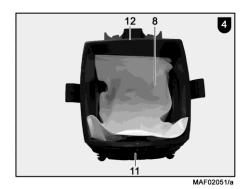

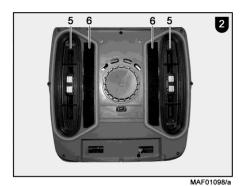

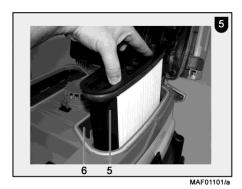

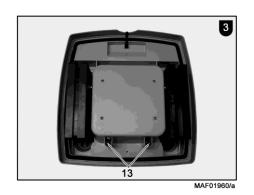

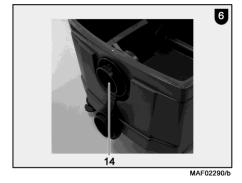

#### D - EG Konformitätserklärung

Wir bescheinigen hiermit, dass das Absauggerät S 25 M und S 25 L den angeführten EU-Richtlinien entspricht. Bei Konstruktion und Bau wurden die gelisteten Normen angewendet.Bevollmächtigter für die Zusammenstellung der technischen Unterlagen: Mafell AG

#### GB - EC Declaration of Conformity

We herewith confirm that the dust extractor S 25 M and S 25 L complies with the EU directives quoted. The standards listed were used for design and construction. Empowered person for the configuration of the technical documents: Mafell AG

#### F - Déclaration CE de conformité

Nous déclarons par la présente que l'aspirateur S 25 M et S 25 L est conforme aux directives CE applicables comme suit. Lors de la construction, les règlements suivants ont été utilisés. Plénipotentiaires pour l'assemblage des documentations techniques: Mafell AG

#### I - Dichiarazione di conformità CE

Con la presente certifichiamo che l'aspiratore S 25 M e S 25 L è conforme alle seguenti direttive CE applicabili. Nella progettazione e la costruzione sono state applicate le seguenti norme.Responsabile per la composizione della documentazione tecnica: Mafell AG

#### NL - EG conformiteitsverklaring

Wij bevestigen hiermede dat de stofafzuiger S 25 M en S 25 L aan de vermelde EU-richtlijnen beantwoord. Bij constructie en bouw werden de vermelde normen toegepast. Gemachtigde voor de samenstelling van de technische documenten: Mafell AG

#### E - Declaración de conformidad CE

Con la presente se certifica que el aspirador S 25 M y S 25 L cumple las directivas europeas mencionadas, las cuales forman la base tanto del diseño constructivo como de los procesos de fabricación. Apoderado legal para la compilación de la documentación técnica: Mafell AG

#### FIN - EY-vaatimustenmukaisuusvakuutus

Vakuutamme täten, imurointilaite S 25 M ja S 25 L vastaa mainittujen EU-direktiivien vaatimuksia. Sen suunnittelussa ja valmistuksessa on sovellettu luettelossa ilmoitettuja standardeja. Teknisten asiakirjojen laatimiseen valtuutettu henkilö: Mafell AG

#### S - EG Konformitetsförklaring

Vi intygar härmed att sugaggregat S 25 M och S 25 L uppfyller angivna EU direktiv. De angivna normerna användes vid konstruktion och tillverkning. Befullmäktigad för sammanställningen av den tekniska dokumentationen: Mafell AG

#### DK - EU overensstemmelseserklæring

Vi attesterer hermed, at udsugningsapparat S 25 M og S 25 L opfylder de angivede EU-direktiver. Konstruktion og bygning er udført iht. de angivede standarder. Person, der er befuldmægtiget til at sammenstille det tekniske materiale: Mafell AG

#### RUS - Сертификат соответствия EC

Настоящим подтверждаем, что аспирационная установкаЅ 25 M и S 25L отвечает требованиям указанных директив ЕС. При проектировании и изготовлении применялись перечисленные нормы. Уполномоченный представитель по составлению технической документации: Mafell AG

#### PL - Deklaracia zgodności UE

Niniejszym potwierdzamy, że urządzenie odpylające S 25 M i S 25 L spełnia wymagania wyszczególnionych dyrektyw UE. W trakcie konstrukcji spełniają urządzenia zastosowano przedstawione normy. Pełnomocnik odpowiedzialny za zestawienie dokumentacji technicznej: Mafell AG

#### CZ - PROHLÁŠENÍ O SHODĚ

Tímto prohlašujeme, že odsávací přístroj S 25 M a S 25 L splňuje pokyny uvedených směrnic EU. Při plánování a sestavení byly využity uvedené normy. Za sestavení technických podkladů zodpovídá: Mafell AG

### SLO - ES izjava o skladnosti

S tem izjavljamo, da odsesovalna naprava S 25 M in S 25 L ustrezata navedenim direktivam EU. Pri konstrukciji in izdelavi so uporabljeni našteti standardi. Za sestavo tehnične dokumentacije je pooblaščeno podjetje: Mafell AG



2006/42/EG 2014/30/EU 2011/65/EU EN 60335-1, EN 60335-2-69, EN 55014-1, EN 62233, EN 55014-2, EN 61000-3-2, EN 61000-3-3, EN 12100

S 25 M S 25 L Art.-Nr. 91C301, 91C321, 91C322 Art.-Nr. 91C201

#### Mafell AG

D - 78727 Oberndorf, den 25.03.2020

Dipl.-Ing. Matthias Krauss Vorstandsvorsitzender / CEO i. V. Dipl.-Ing. Harald Schmid, MBA Leitung Entwicklung und Konstruktion

# English

# **Table of Contents**

1	Signs and symbols	17
2	Product information	
2.1	Manufacturer's data	17
2.2	Device identification	17
2.3	Technical data	18
2.4	Noise emission specifications	18
2.5	Scope of supply	18
2.6	Device description	18
2.7	Safety devices	19
2.8	Use according to intended purpose	19
2.9	Residual risks	
3	Safety instructions	20
4	Setting / Adjustment	21
4.1	Assembly	21
4.2	Mains connection	21
4.3	Changing the folded filter cartridge	21
4.4	Changing the filter bags	21
4.5	Disposal of filter bags	22
4.6	Inserting the filter bag	22
4.7	Emptying the container	23
5	Operation	23
5.1	Switching on and off	23
5.2	Hints and information	23
6	Service and maintenance	24
6.1	Maintenance	24
6.2	Servicing	24
6.3	Motor protection filter	24
7	Disposal information	
8	Troubleshooting	
9	Special accessories	25
10	Exploded drawing and spare parts list	25

# 1 Signs and symbols



This symbol appears at places where you will find instructions for your own safety.

Non-compliance with these instructions may result in very serious injuries.



This symbol indicates a potentially hazardous situation.

If this situation is not avoided, the product or objects in its vicinity may get damaged.



This symbol indicates tips for the user and other useful information.

# 2 Product information

for dust extractors S 25 M with Art.-No. 91C301, 91C321, 91C322 for dust extractors S 25 L with Art.-No. 91C201

#### 2.1 Manufacturer's data

MAFELL AG, Beffendorfer Straße 4, D-78727 Oberndorf / Neckar, Phone +49 (0)7423/812-0, Fax +49 (0)7423/812-218

## 2.2 Device identification

All information required for device identification is available on the rating plate attached to the motor casing.



CE symbol to document compliance with the basic safety and health requirements according to Appendix I of the Machinery Directive.



For EU countries only

Do not dispose of electrical tools together with domestic waste!

In accordance with the European directive 2002/96/EC on waste electrical and electronic equipment and transposition into national law, obsolete electrical tools must be collected separately and recycled in an environmentally-compatible manner.



To reduce the risk of injury, please read the operating instructions.



Warning: This device contains harmful dusts. Emptying and maintenance including removal of the dust bag may only be carried out by competent persons wearing suitable personal protective clothing. Do not turn on before the entire filter system is installed and the function of the volume flow control, has been checked.

## 2.3 Technical data

		0	
Operating mode		Continuous operation	
Voltage, frequency		220-240 V~, 50/60 Hz	110-120 V~, 50/60 Hz
Power input (nominal load)		1200 max. 1400 W	1200 max. 1400 W
Current at nominal load		6,0 A	11,0 A
Nominal volume flow		270 m <sup>3</sup> /h	
Associated vacuum		280 mbar	239 mbar
Filter surface area		8600 cm <sup>2</sup>	
Dimensions	S 25 M	450 x 390 x 490 mm (17 23/32 x 15 23/64 x 19	
		19/64 in.) without MAX	bracket
		480 x 390 x 550 mm (18	3 57/64 x 15 23/64 x 21
		21/32 in.) with MAX bra	cket (without hose
		hook)	
	S 25 L	450 x 390 x 490 mm	
Weight (without accessories)	S 25 M	12,2 kg (26.9 lbs.) without MAX bracket	
		13,4 kg (29.5 lbs.) with	MAX bracket
	S 25 L	12,2 kg	
Diameter intake port connection		Ø 66 / 58 mm	

According to BGIA "H" test certificate, the dust extractors class "M" have been tested to GS-BIA-M02 (07/02), DIN EN 60335-2-69 (11/04) Annex AA, DIN 60335-2-69/A1 (11/05).

# 2.4 Noise emission specifications

Noise pressure level of the measuring surface: 69 dB (A)

Ambient conditions: < 40 °C

Noise values were measured acc. to EN 60704-1 on an open air test site at a distance of 1.5 m from the device surface.

# 2.5 Scope of supply

Dust extractor S 25 M or S 25 L complete with:

2 folded filter cartridges, polyester

- 1 filter bag, useful volume 25 l
- 4 m extraction hose, antistatic
- 1 operating manual
- 1 MAX bracket (for S25M only)

## 2.6 Device description

The dust extractor S 25 M / S 25 L is a combination device (COMB) for use as dry and wet extractor.

Wet suction cleaning should be carried out without filter bag. The filter cartridges are suitable for wet suction cleaning.

- INDUSTRIAL VACUUM CLEANER (IV) exclusively for vacuuming deposited dust.
- DEDUSTER (DED) exclusively for extracting airborne dust from individual sources of dust, such as it arises for instance during machining and processing on machines and hand-operated equipment.

The dust extractor S 25 M / S 25 L, used as deduster, is suitable for the extraction of dry wood dust and dry shavings at individual sources of dust. If the deduster is duly connected to a hand-operated wood working machine with a dust source (for instance circular saw, planing machine, belt sander) and operated according to the instructions, the required extraction performance and separation quality are always guaranteed.

# 2.7 Safety devices



### Danger

These devices are required for the machine's safe operation and may not be removed or rendered inoperative.

- All mobile machine parts driven by electric motors are covered by stationary, securely fastened protective enclosures that can only be removed with the aid of tools.
- Testing according to EN 60335-1 and EN 60335-2-69 showed that the safety requirements with regard to the electrical safety are also met when a water-air-mixture is vacuumed.
- The dust extractor is suitable for increased loads in case of commercial use. According to EN 60335-1 and EN 60335-2-69.

# 2.8 Use according to intended purpose



# Danger

In general, it is not permitted to vacuum any combustible or explosive solvents, liquids such as petrol, oil, alcohol, thinners or materials with a temperature in excess of 60 °C. Otherwise there will be danger of explosion and fire! The dust extractor is not suitable for extracting dusts that are hazardous to health.

Dust extractors class M are suitable for vacuuming/extracting dry, non-combustible dusts, non-combustible liquids, wood dusts and hazardous dusts with STELs  $>0.1 \text{mg/m}^3$ .

Dust extractors class L are not suitable for vacuuming/extracting harmful dusts.

The dust extractor S 25 M / S 25 L is particularly suited for vacuuming off electrical tools. Further applications are at the construction site where large amounts of moist and dry fine dust arise, for inside cleaning of motor vehicles and everywhere moist and dry materials have to be disposed of, mopping water has to be vacuumed, clogged water basins and drains have to be emptied, "flooding" in bath, kitchen or basement has to be removed or the bothersome puddle in front of the front door has to disappear.

Any other use than described above is not permissible. The manufacturer cannot be held liable for any damage arising from such other use.

To use the device as intended, observe the operating, maintenance and repair conditions prescribed by Mafell.

This device is also not suitable for operation outdoors in the rain or in rooms with potentially explosive atmospheres.

The dust extractor S 25 M / S 25 L may only be used, set up and serviced by persons who are acquainted with the device and have been instructed about the hazards involved. Corrective maintenance work must be carried out by MAFELL authorised dealers or MAFELL customer service stations.

The safety instructions applicable in the respective country of use as well as other generally recognised rules pertaining to safety and occupational health must be observed.

#### 2.9 Residual risks



# Danger

Even if used in accordance with its intended purpose and despite conforming with the safety instructions, residual risks caused by the intended use will always remain.

- Touching live parts with the housing open and the mains plug not removed.
- Emission of dusts in case of operation over a longer period of time with damaged folded filter 5 (fig. 2), filter bag 8 (fig. 4) or motor protection filter (fig. 2) in closed rooms without adequate ventilation.

- While exchanging a filter bag or emptying the container, the inhalation of dust cannot be ruled out (respiratory protection).
- Unauthorised changes to the device exclude the manufacturer's liability for any damages resulting thereof.

# 3 Safety instructions



### Danger

Always observe the following safety instructions and the safety regulations applicable in the respective country of use!



### Caution

It is vital to avoid sucking in ignition sources in order to avoid explosions



Caution: The dust extractor/vacuum cleaner must be emptied after work, at the latest at the end of the shift.

- The voltage on the device rating plate must agree with the mains voltage.
- The socket outlet must be protected by means of a domestic fuse of suitable amperage (16 A).
- Do not put device including accessories into operation, if:
  - the device exhibits visible damage (cracks/fissures),
  - the mains connection is defective or exhibits fissuring or ageing,
  - an invisible defect is suspected (after a drop).
- Do not use any damaged extension cables.
- Do not point nozzle, hose or tube at people or animals.
- Particular care should be exercised when vacuuming stairs. Pay attention to safe footing.
- The socket outlet on the device may only be used for the purposes defined in the operating instructions.

- Never work without the protection devices prescribed for the respective operating sequence and do not make any changes to the device that could impair safety.
- When operating the device outdoors, the use of an earth-leakage circuit-breaker is recommended.
- Damaged cables or plugs must be immediately replaced. Replacement may only be carried out by Mafell or an authorised MAFELL service workshop in order to avoid safety hazards.
- Children and adolescents may not operate this device. This rule does not apply to young persons receiving training and being supervised by an expert.
- Switch off the device before carrying out maintenance and after every use and unplug the power plug.
- Always check before starting any work whether the suction hoses are safely attached and undamaged.
- Do not pull the plug by its cable out of the socket outlet.
- Pull out the power plug prior to cleaning or emptying and prior to eliminating any malfunctions.
- Pay attention that the cable is protected against oil and heat and cannot be damaged by being driven over, crushed or pulled.
- Consider environmental influences. Do not expose the device to rain and avoid working near combustible liquids or gases.
- Store the device in a dry, locked place outside the reach of children.
- Regular cleaning of the device is an important safety factor. Pull the plug before starting this work.
- The device must be set up on level ground such that it can neither tilt over nor roll away (lock steering rollers).
- To be able to safely operate and maintain the device, the place of installation should be chosen such that lateral clearances of 0.3 m and a clear height of 2 m can be maintained.

- The cleaned air may only be recirculated to those workspaces from where it was extracted; i.e. the electronic tool and the dust extractor may only be operated in the same workspace.
- In case of leaking foam or water, immediately switch off the device. Empty container and where necessary folded filter.
- Acid, acetone and solvents may corrode device components.
- Do not leave the device unattended. Pull the power plug in case of longer work interruptions.
- If the device's connecting cable is damaged, it must be replaced by a special connecting cable that is available from the manufacturer or his aftersales service.
- Have repairs only carried out by skilled workers, e.g. by the after-sales service. If not professionally repaired, devices will constitute a danger for the user.
- Only use original MAFELL spare parts, accessories or special accessories. Otherwise, the manufacturer will not accept any warranty claims and cannot be held liable.
- No work other than described in this document may be carried out.
- The manufacturer will not accept any liability for possible damages arising from misuse, inappropriate operation or unprofessional repair.

# 4 Setting / Adjustment

# 4.1 Assembly

- Pay attention that the container's two snap locks have safely engaged in the recesses on the motor hood.
- Push the suction hose fitting over the container's suction opening and turn it until the hose fitting engages.

#### 4.2 Mains connection

The dust extractor S 25 M / S 25 L is equipped with protective earthing acc. to class I and may therefore only be connected to sockets with protective earth conductor.

Prior to commissioning make sure that the mains voltage agrees with the operating voltage stated on the machine's rating plate.

# 4.3 Changing the folded filter cartridge

- Shake off the folded filter cartridges before changing the filter.
- Using a coin or similar object, turn the catch 7 (fig. 1) on locking bolt 9 anticlockwise by 90° and push the locking bolt 9 to the rear.
- Swing open the hood and remove the filter cartridge 5 (fig. 5) towards the top.
- Immediately seal the removed folded filter cartridges in a dust-tight plastic bag and dispose of in accordance with the instructions.
- Insert the new filter cartridges and pay attention to a neat and tight fit of the filters.
- Fold down the hood and return to its initial position by slightly pressing on the locking bolt 9 (fig. 1). The device is now once more closed.

# 4.3.1 Changing the motor protection filter

The folded filter cartridges are located next to the motor protection filter 6 (fig. 2). If they are heavily soiled, rinse out and reinsert in dry condition. Damaged motor protection filters must be replaced.

# 4.4 Changing the filter bags



### Danger

This device may contain hazardous dust. Emptying and maintenance operations including the disposal of dust collection containers may only be carried out with appropriate protective equipment.

The filter bag must be changed if the control display blinks during operation and an additional acoustic signal is sounded.

# 4.4.1 Changing the non-woven filter bag

- Switch off the device to change the non-woven filter bag.
- Pull the dust extractor's plug.
- Open the snap locks 10 (fig. 1).

- Detach the upper part of the dust extractor from the container 12 (fig. 4).
- Pull the filter bag carefully from the intake port.
- Close the flange of the filter bag by turning down the cover.

# 4.4.2 Changing the PE-discharge and disposal bag

- PE-discharge and disposal bag: Switch on dust extractor, shake off folded filter cartridges. Switch on dust extractor.
- Wear mouth guard.
- Remove suction hose, close intake port with cap 14 (fig. 6).
- Open lateral locks, remove top part. Before putting down the top part, switch on at switch position >IR< so that possibly released airborne particles are extracted.
- Carefully seal PE-discharge and disposal bag with the enclosed sealing tape.
- Pull flange carefully off the intake port and close.
- Carefully remove PE-discharge and disposal bag from the container.
- Dispose of extracted material in accordance with the legal provisions.

# 4.5 Disposal of filter bags

Dispose of the filter bag in an impervious bag in compliance with the valid regulations for the disposal of such wastes.

- Filter bags, filled with normal domestic dirt are disposed of with the normal domestic waste.
- PE-discharge and disposal bag, filled with hazardous waste: Enquire at your municipality or at the responsible authority.

# 4.6 Inserting the filter bag

# 4.6.1 Inserting the non-woven filter bag

• Pull the flange completely over the intake port.



Operation of the rotary valve

Set the red rotary valve\*
 inside to CLOSE and turn
 until it reaches the stop at the
 mark \uldet



Put top part onto container and close lateral locks.

# 4.6.2 Inserting the PE-discharge and disposal bag



Only dust extractors class S25L/S25M with special container and rotary valve in the intake port of types S25L/S25M are suitable for use with PE-discharge and disposal bags.



Operation of the rotary valve

- Set the red rotary valve\* inside to OPEN and turn until it reaches the stop at the mark ▲.
- Push flange completely over intake port, place top opening of bag across rim of container.



 Put top part onto container and close lateral locks.

# 4.7 Emptying the container



Only permissible for dusts with STELs > 1mg/m3

Switch off suction device, pull power plug.

- Open locks.
- Remove cover and suction hose from container.
- Tip out container.

# 5 Operation



# Danger

The dust extractor is not suitable for extracting dusts that are hazardous to health.

## 5.1 Switching on and off

Switch positions for IV operation (industrial vacuum cleaner) (fig. 1)

0 = Off

I = On (manual operation)

The volume flow display is switched over to a fixed value which causes the signal lamp to blink if the air speed drops below 20 m/s.

A = Stand-by mode for automatic switch on/off function (dust extractor is switched on and off by the electrical tool).

# Switch positions for DED operation (deduster) Fig. 1

RA = Device models with "RA" equipment can be operated as under "A". Filters are cleaned automatically on reaching the set minimum flow rate during the next work break (switch position RA).

The dust extractor S 25 M / S 25 L is equipped with an electronic suction force regulator. The turning knob 2 can be used to adapt the suction power to the material to be vacuumed.

The socket outlet 4 is provided for the connection of an electrical tool (A/RA mode).



# Danger

The electrical tool must be switched off when it is connected. When the power plug is plugged in, the socket outlet is always live, irrespective of the switch position. In switch position "0", the socket outlet can be used as extension cord (e.g. for lamp).

Connected load: Dust extractor and connected device max. 16 A.

To avoid excessive start-up peaks, the dust extractor is equipped with a starting current limit (soft start).



# Danger

While the dust extractor motor is coasting down, the operating mode selection switch may not be turned until the dust extractor has come to a standstill, otherwise the device must afterwards be switched via the 0-position to guarantee the perfect functioning of the electronic system.

# 5.2 Hints and information

- When vacuuming dry materials, the folded filter 5 (fig. 2) must be completely dry.
- During wet vacuuming, the built-in sensor prevents the maximum filling level in the container from being exceeded. The device no longer vacuums when the container is full. Switch off motor. Pull the dust extractor plug and empty the container.
- If the sensor responds when vacuuming larger amounts of liquid (more than one container filling), switch off the device and empty the container.
- If the volume flow display 3 (fig. 1) lights up on restart, this may have the following reasons:
  - Container, filter bag 8 (fig. 4) full.
  - Extraction hose clogged.
  - Air cross sections of the dust generator too small.

On completion of work, but especially if you do not intend to use the device for a longer period of time, you should:

- Discharge any dirt and liquids.
- Store the extraction hose such that there are no kinks.
- Neatly reel up the mains cable and protect it against damage.

# 6 Service and maintenance



# Danger

Pull the power plug during all service work.



After longer periods of operation, MAFELL recommends to take the device to an authorised MAFELL customer service shop for inspection.

The storage place must be dry and frost-protected. If the device fails despite diligent manufacturing and test procedures, the repair must be carried out by an authorised customer service station for MAFELL products.



# Danger

Only use MAFELL accessories and spare parts. Have components, the replacement of which has not been described in this document, replaced at a MAFELL customer service station.

#### 6.1 Maintenance

For maintenance by the user, the device must be disassembled, cleaned and serviced as far as this is feasible without causing any danger for the maintenance personnel and other persons. Suitable precautions include cleaning before disassembly, providing for locally filtered forced venting at the place where the device is disassembled, cleaning the maintenance area and suitable personal protective clothing.

On machines class M, the outside of the machine should be cleaned by means of dust extraction methods and wiped clean or should be treated with sealant before they are removed from the hazardous area.

All machine parts must be considered contaminated if they are removed from the hazardous area and suitable action must be taken to avoid the dust from being dispersed. Such objects must be disposed of in impervious bags in compliance with the valid regulations for the disposal of such waste.

When carrying out maintenance or repair work, all soiled objects which cannot be cleaned in a satisfactory manner must be disposed of. Such objects must be disposed of in impervious bags in compliance with the valid regulations for the disposal of such waste.

# 6.2 Servicing

If the dust extractor's suction performance decreases, and even cleaning the filters 5 (fig. 2) after replacement of the filter bag 8 (fig. 4) does not increase the suction performance any more, the folded filter cartridges 5 (fig. 2) must be renewed.

Usually it is sufficient to clean the folded filter cartridges 5 from time to time, using a soft brush and water. Allow to dry before reinserting, to prevent the dust from clinging to the moist filter.

To avoid heavy soiling of container and filter, remove dry material from the container before vacuuming liquids. Dry suction cleaning only with completely dried-out device. Do not clean container and accessories with abrasive commercial detergents.

Regularly clean the water sensors 13 (fig. 3) and check them for possible damages.

# 6.3 Motor protection filter

The folded filter cartridges are located next to the motor protection filter 6 (fig. 2). If they are heavily soiled, rinse out and reinsert in dry condition. Damaged motor protection filters must be replaced.

# 7 Disposal information

- **Filter bags**, filled with normal domestic dirt are disposed of with the normal domestic waste.
- Filter bags, filled with hazardous waste:
   Enquire at your municipality or at the responsible authority.
- The folded filter cartridge is disposed of as hazardous waste in a plastic bag, if necessary.

# 8 Troubleshooting



# Danger

Determining the causes for existing defects and eliminating these always requires increased attention and caution. Pull the mains plug beforehand!

Some of the most frequent defects and their causes are listed in the following chart. In case of other defects, contact your dealer or the MAFELL customer service.

Defect	Cause	Elimination
Decreasing extraction performance	Filter soiled	Clean.
	Non-woven filter full	Change.
	Container full	Empty.
	Nozzle, tube or hose clogged	Clean.
Dust extractor does not start	Power plug in socket outlet?	
	Mains de-energised?	
	Mains cable ok?	
	Cover closed properly?	
	Water sensor switched off?	
	Dust extractor in standby mode "AR"?	Set to "I" or "IR"
Dust extractor does not start when the tool is switched on in >AR< mode	Power plug of tool in device socket outlet?	Put power plug in dust extractor socket outlet
PE-discharge and disposal bag is sucked against the filters	Wrong position rotary valve	Check/change position of rotary slide valve
Dust extractors class M or H: dust in container despite fitted non-woven filter	Wrong position rotary valve	Check/change position of rotary slide valve

# 9 Special accessories

- Set of filter bags 5 pcs. (25-l	non-woven material)	Order No. 093719
- Set of disposal bags 5 pcs. (2	25-I-PE)	Order No. 093721
- 1 pair pleated filter cartridge	(cellulose, glass fibre fleece, polyester)	Order No. 093739
- 1 pair pleated filter cartridge	(polyester nano-coated)	Order No. 093720
- 1 pair pleated filter cartridge	(polyester fleece)	Order No. 093674
- 4 m extraction hose LW27 ma	achine connection Ø 35 mm antistatic	Order No. 093684
- 5 m extraction hose LW35 ma	achine connection Ø 35 mm antistatic	Order No. 093681
- 5 m extraction hose machine	connection Ø 49 mm static	Order No. 093730
- Manual extraction set		Order No. 093718
- Reducing adapter Ø 58 / 35		Order No. 203602

# 10 Exploded drawing and spare parts list

The corresponding information in respect of spare parts can be found on our homepage: www.mafell.com