



The Robert Sorby Wobble Chuck is a unique and exciting addition to the Patriot Chuck range. The base of the wobble chuck fits precisely and securely into the dovetail of the Patriot Chuck 2" jaws.


With the bottom section held securely in the chuck jaws the top section can be rotated to create the 'wobble'. This allows the woodturner to experiment quickly and easily with off-centre turning and provides opportunity to create a multitude of creative projects. Overleaf is a step guide to making one such project: An ornamental spoon.

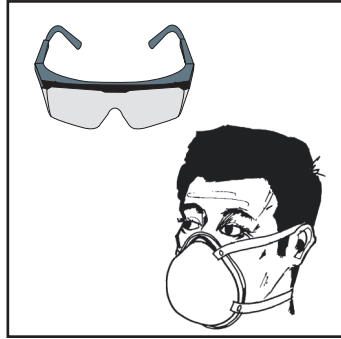


Always use eye protection and a form of dust mask as well as an air cleaner and dust extractor when doing any form of woodworking.

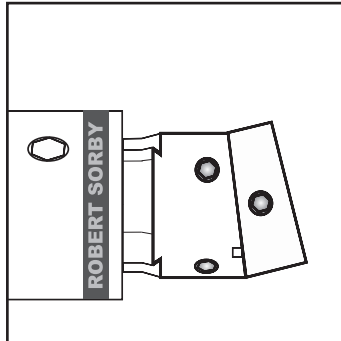


When the grooves are not in-line the chuck is off-centre and the further apart they are, the more wobble or off-set will be induced.

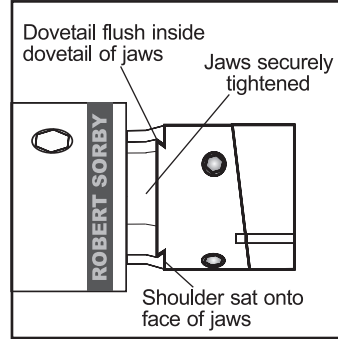


Always ensure that all faces are clean prior to fitting. Check the dovetail of the Wobble Chuck is flush inside the dovetail of the jaws and the shoulder is seated onto the face of the jaws. Then close the jaws tightly to secure the Wobble Chuck in place.

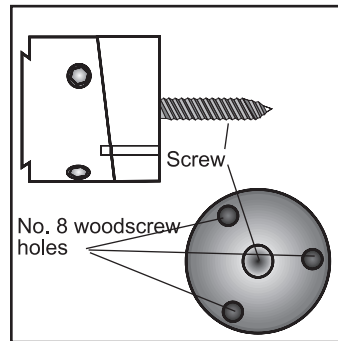

There are two ways of securing a workpiece with the Wobble Chuck. Firstly there is a screw which is ideal for quick and easy fixing. Alternatively there are three holes which enable fixing by No.8 woodscrews for larger projects.

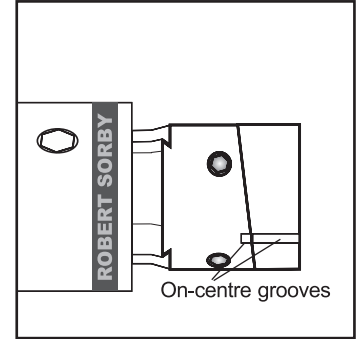

When the grooves of the Wobble Chuck are in-line the chuck is on-centre. To adjust the position of the grooves slacken the two screws in the bottom section turn the top section to the required position and then re-tighten the screws.

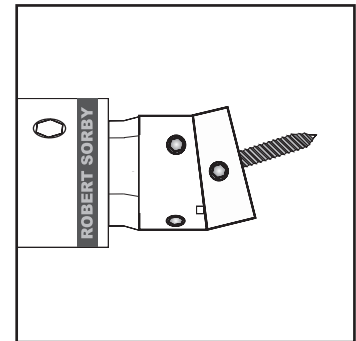

When using the screw ensure the grub screw is tightened into position. If using No.8 woodscrews without the screw, always remove the grub screw to prevent loss.