


AUTO EXTRACT (CONTACTOR CONTROLLER) WIRING GUIDE FOR UB 2100 & 3100

STAGE 1 ORIGINAL WIRING

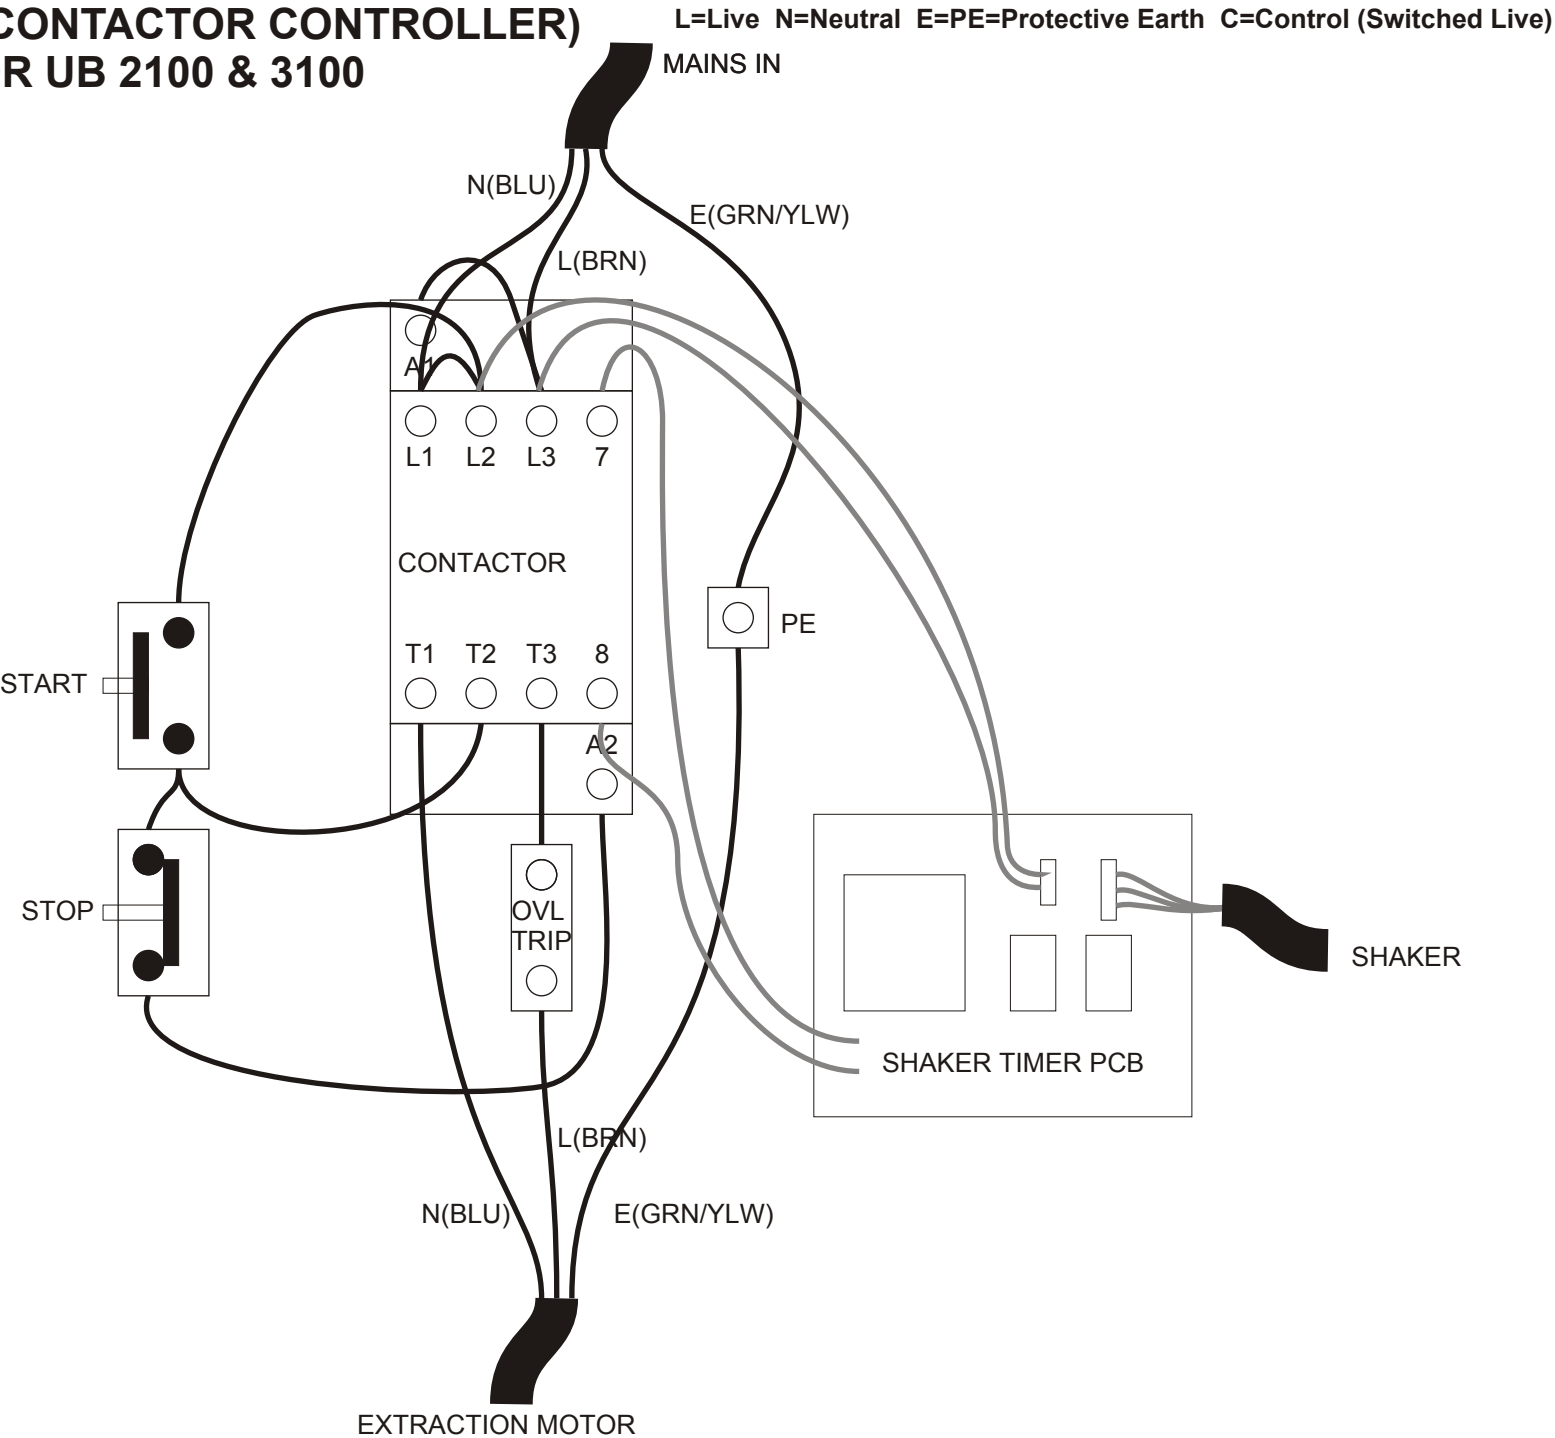


AUTO EXTRACT (CONTACTOR CONTROLLER)

WIRING GUIDE FOR UB 2100 & 3100

L=Live N=Neutral E=PE=Protective Earth C=Control (Switched Live)
MAINS IN

STAGE 2

- Remove Dashed Wires -----
- A1 to L3
- L2 to Start switch
- T2 to Start Switch
- Start switch to Stop Switch

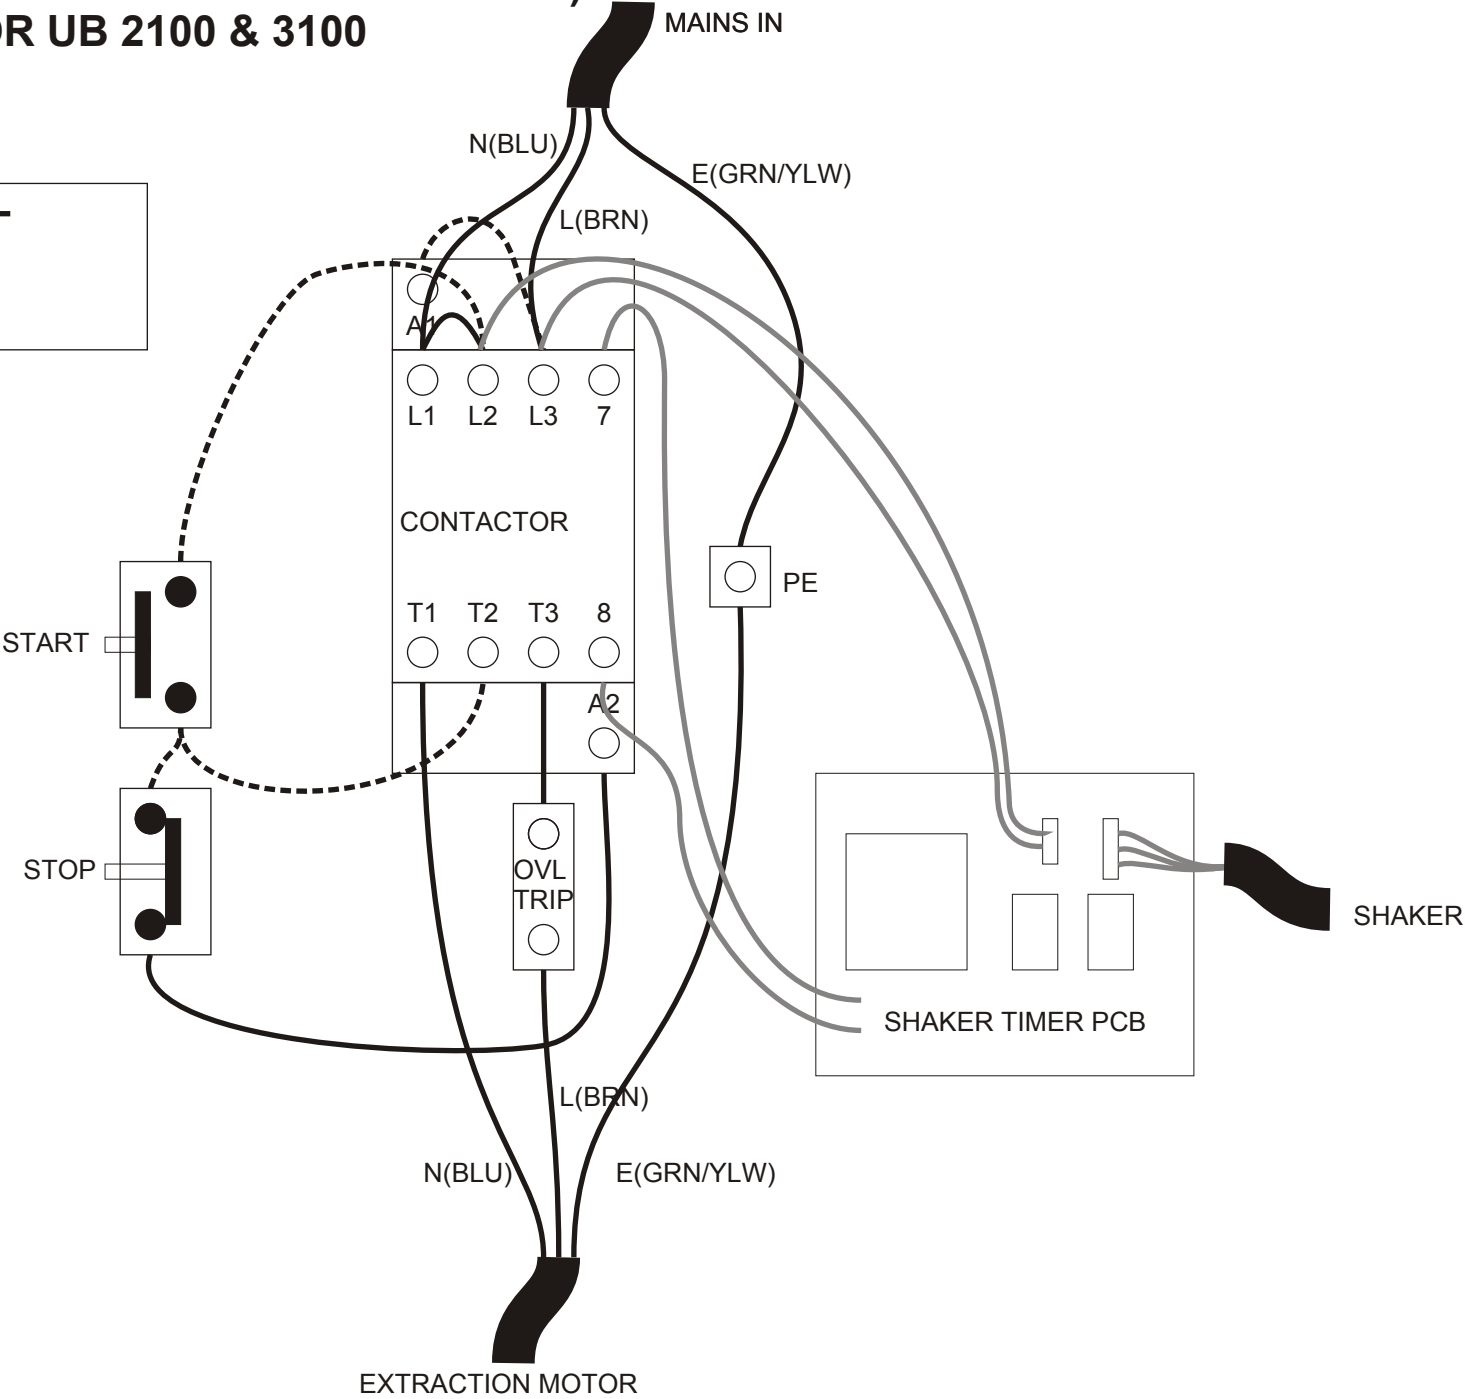

AUTO EXTRACT (CONTACTOR CONTROLLER)

WIRING GUIDE FOR UB 2100 & 3100

L=Live N=Neutral E=PE=Protective Earth C=Control (Switched Live)
MAINS IN

STAGE 3

Add Brown From Controller to L3
Add Black From Controller to A1
Add Blue From Controller to L2 or L1
Add Green / Yellow From Controller to PE
Add Link wire from L1 or L2 to Stop switch

