



PROfessional

AP6110BS Belt Sander



The packaging is suitable for recycling.
Please dispose of it in a responsible manner.



EU Countries Only
Do not dispose of electric tools together with household waste material. By law they must be collected and recycled separately.



Fully read manual and safety instructions before use.
Save this manual for future reference.



Eye protection should be worn



Ear protection should be worn



Dust mask should be worn



Hazard

The symbols above advise the correct safety procedures when using this machine.

Original Instructions	
Code	113349
Version	1
Published Date	15/12/2025

TABLE OF CONTENTS

IMPORTANT SAFETY RULES -----	2~3
ADDINTINAL SAFETY RULES FOR OSCILLATING EDGE BELT SPINDLE/DRUM SANDER-----	4~5
GROUNDING INSTRUCTION-----	6
OPERATING INSTRUCTION-----	7~12
WARNING-----	13
TROUBLE SHOOTING-----	14
EXPLODED DIAGRAM-PART 1 -----	15
EXPLODED DIAGRAM-PART 2 -----	16
PART LIST AND WIRING DIAGRAM-----	17~19

Object of the Declaration: Axminster Professional AP6110BS Bobbin Belt Sander 230V		
UK: Supply of Machinery (Safety) Regulations 2008 as amended Electromagnetic Compatibility Regulations 2016 as amended Directive 2011/65/EU (RoHS 2) Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012	EU: Machinery Directive 2006/42/EC EMC Directive 2014/35/EU Directive 2011/65/EU (RoHS 2) Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012	UK Address: Newhow Limited. Trading as Axminster Tools Weycroft Avenue Axminster, Devon EX13 5PH
Standards used or references to the other technical specifications in relation to which conformity is declared: ISO 19085-8:2018, EN 60204-1:2018+A1:2025 IEC 55014-1:2021, IEC 55014-2:2021, IEC 61000-3-2:2019+A1:2021, 61000-3-3:2013+A1:2019+A2:2021		European Address: Newhow Limited. Trading as Axminster Tools A-201, Haagsche Hof Parkstraat 83 The Hague 2514 JG Netherlands
Date: 7/4/2025 Place: Axminster	 Charlie Cross Operations Director	

IMPORTANT SAFETY RULES

Woodworking can be dangerous if safe and proper operating are not followed. As with all machinery, there are certain hazards involved with the operation of the product. Using the machine with respect and caution will considerably lessen the possibility of personal injury. However, informal safety precautions are overlooked or ignored personal injury to the operator may result.

Safety equipment such as guards, push sticks, hold-downs, feather-boards, goggles, dust masks and hearing protection can reduce your potential for injury. But even the best guard won't make up for poor judgment, carelessness or inattention. Always use common sense and exercise caution in the workshop. If a procedure feels dangerous, don't try it. Figure out an alternative procedure that feels safer. REMEMBER: Your personal safety is your responsibility.

WARNING: FAILURE TO FOLLOW THESE RULES

MAY RESULT IN SERIOUS PERSONAL INJURY

1. FOR YOUR OWN SAFETY, READ INSTRUCTION MANUAL BEFORE OPERATING THE TOOL. Learn the tool's application and limitations as well as the specific hazards peculiar to it.
2. KEEP GUARDS IN PLACE and in working order.
3. ALWAYS WEAR EYE PROTECTION.
4. USE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersize cord will cause a drop in line voltage resulting in loss of power and overheating. Refer to table 1
5. REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it "on".
6. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
7. DON'T USE IN DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well-lighted.
8. KEEP CHILDREN AND VISITORS AWAY. All children and visitors should be kept a safe distance from work areas.
9. MAKE WORKSHOP CHILDPROOF – with padlocks, master switches, or by removing starter keys.
10. DON'T FORCE TOOL. It will do the job better and be safer at the rate for which it was designed.
11. USE TIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
12. WEAR PROPER APPAREL. No loose clothing, gloves, neckties, rings, bracelets, or other jewelry to get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
13. ALWAYS USE SAFETY GLASSES. Wear safety glasses. Every day eyeglasses

-
- only have impact resistant lenses; they are not safety glasses. Also use face or dust mask if cutting operation is dusty.
14. SECURE WORK. Use clamps or a vise to hold work when practical. It's safer than using your hand and frees both hands to operate tool.
 15. DON'T OVERREACH. Keep proper footing and balance at all times.
 16. MAINTAIN TOOLS IN TOP CONDITION. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
 17. DISCONNECT TOOLS before servicing and when changing accessories such as blades, bits, cutters, etc.
 18. USE RECOMMENDED ACCESSORIES. The use of accessories and attachments not recommended by us may cause hazards or risk of injury to persons.
 19. REDUCE THE RISK OF UNINTENTIONAL STARTING. Make sure switch is in "OFF" position before plugging in power cord.
 20. NEVER STAND ON TOOL. Serious injury could occur if the tool is tipped or if the cutting tool is accidentally contacted.
 21. CHECK DAMAGED PARTS. Before further use of the tool. A guard or other part that is damaged should be carefully checked to ensure that it will operate properly and perform its intended function-check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
 22. DIRECTION OF FEED. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
 23. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.
 24. DRUGS, ALCOHOL, MEDICATION. Don't operate tool while under the influence of drugs, alcohol or any medication.
 25. MAKE SURE TOOL IS DISCONNECTED FROM POWER SUPPLY while motor is being mounted, connected or reconnected.
 26. WARNING: The dust generated by certain woods and wood products can be injurious to your health. Always operate machinery in well ventilated areas and provide for proper dust removal. Use wood dust collection systems when ever possible.

ADDITIONAL SAFETY RULES FOR

Oscillating Edge Belt Spindle/Drum Sander

1. **WARNING.** Do not operate your machine until it is completely assembled and installed according to the instructions.
2. **IF YOU ARE NOT** thoroughly familiar with the operation of Abrasive Finishing Machines, obtain advice from your supervisor, instruction or other qualified person.
3. **CAUTION:** This machine is designed to sand wood or wood-like products only. Sanding or grinding other materials could result in fire, instructor or other qualified position.
4. **ALWAYS** wear eye protection.
5. **THIS MACHINE** is intended for indoor use only.
6. **IMPORTANT:** Mount and use this machine on horizontal surfaces only. Use when mounted on non-horizontal surfaces might result in motor damage.
7. **IF THERE IS ANY TENDENCY** for the machine to tip over or move during certain operations such as when sanding long or heavy boards, the machine must be securely fastened to a supporting surface.
8. **MAKE SURE** the sanding belt runs in the proper direction. See directional arrow on back side of belt.
9. **MAKE SURE** the sanding belt is tracking correctly in order that it does not run off the pulleys.
10. **MAKE SURE** the sanding belt is not torn or loose.
11. **HOLD** the work firmly when sanding.
12. **ALWAYS** use the backstop when the Belt Sander is in the horizontal position.
13. **ALWAYS** hold the work firmly on the table when sanding on the disc.
14. **ALWAYS** sand on downward side of disc when using the disc portion of the machine, so that the work is held securely on the table. Sanding on the upward side of the disc could cause the work-piece to fly up which could be hazardous.
15. **ALWAYS** maintain 1/16" maximum clearance between the table or back stop and the sanding belt or disc.
16. **NEVER** wear gloves or hold the work with a rag when sanding.
17. **SAND** with the grain of the wood.
18. **DO NOT** sand pieces of material that are too small to be safely supported.
19. **AVOID** awkward hand positions where a sudden slip could cause a hand to move into the sanding belt or disc.
20. **WHEN** sanding a large work-piece, provide additional support at table height.
21. **DO NOT** sand with the work-piece unsupported. Support the workpiece with the miter gage, backstop or worktable, the only exception is curved work performed on the outer sanding drum.
22. **ALWAYS** remove scrap pieces and other objects from the table, backstop or belt before turning the machine "ON".
23. **NEVER** perform layout, assembly or set-up work on the table while the sander is operating.
24. **ALWAYS** turn the machine "OFF" and disconnect the cord from the power source before installing or removing accessories.

-
25. **NEVER** leave the machine work area when the power is “ON” or before the machine has come to a complete stop.
 26. **WORTABLE:** The surface on which the work-piece rests while performing a sanding operation.
 27. ON-OFF SWITCH PADLOCK-TO safeguard the sander from unauthorized operation and to avoid accidental starting by children, the use of padlock is requested. To lock out the on-off switch, open the padlock. Place the key in location that is inaccessible to children and others not qualified to use the tool.

GROUNDING INSTRUCTION

In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided-if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.

Use only –wire extension cords that have 3-prong grounding plugs and 3-pole receptacles that accept the tool's plug.

Repair or replace damaged or worn cord immediately.

This tool is intended for use on a circuit that has an outlet that looks like the one illustrated below. The tool has a grounding plug that looks like the plug illustrated below. Make sure the tool is connected to an outlet having the same configuration as the plug. No adapter is available or should be used with this tool. If the tool must be reconnected for use on a different type of electric circuit, the reconnection should be made by a qualified service personnel; and after reconnection, the tool should comply with all local codes and ordinances.

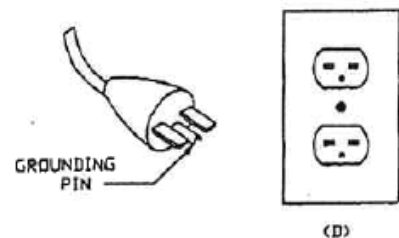


Table 1

Minimum page for Cord

Ampere Rating		Volt	Total length of cord in feet			
		240V	500ft	100ft	200ft	300ft
More than	Not more than	AWG				
6	10		18	16	14	12
10	12		16	16	14	12

OPERATING INSTRUCTION

1. Height adjustment of the main table

Step 1:


Loosen the two adjusting knobs(A) and (B) at right and left hand side.

Step 2:

Turn the handle up in front of the main table and swivel it as your request height.


Step 3:

Lock the two adjusting knobs (A) and (B) again for insure the main table stability.

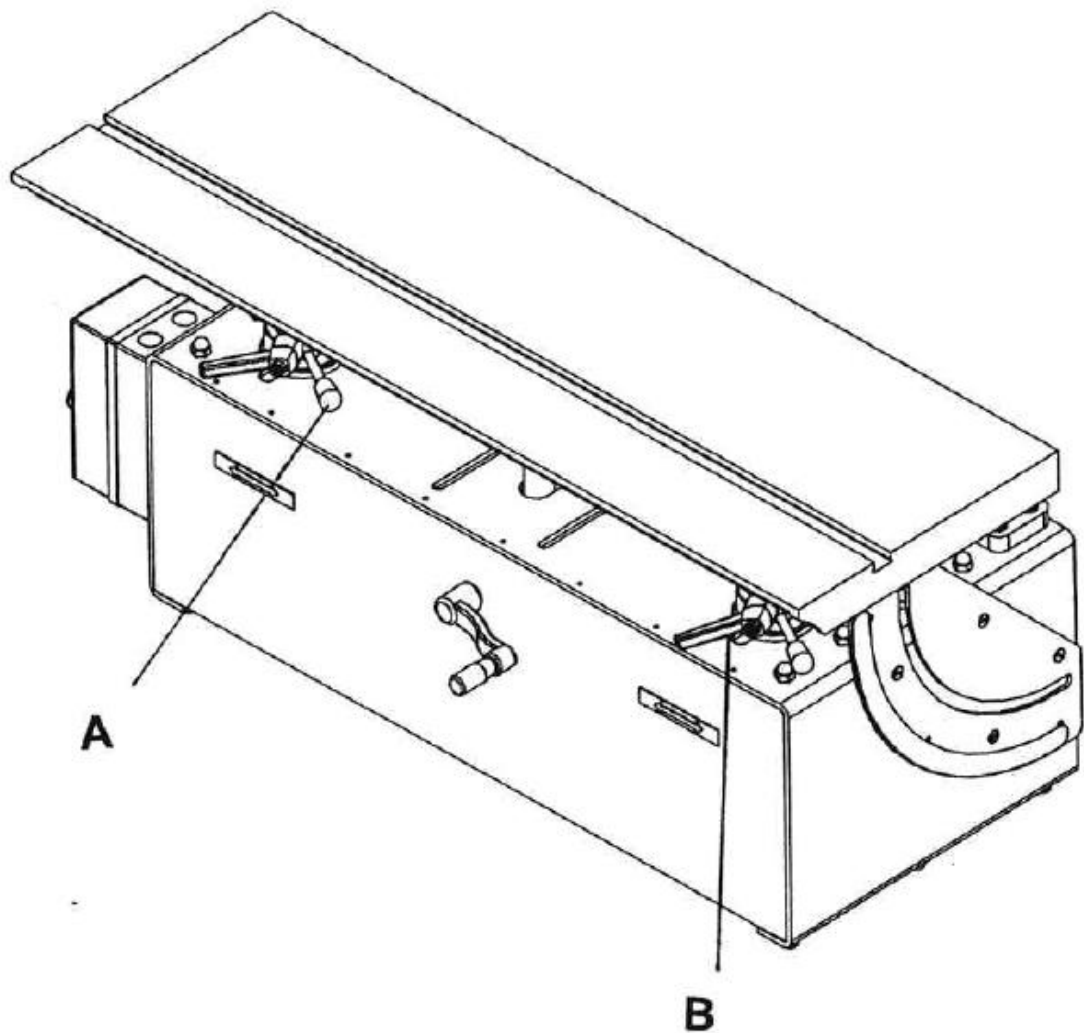

2. How to change the sanding belt

Open the platen cover (C) by losing the two bolts on the top of the platen cover. Rise up the handle bar (D) for releasing the sanding belt (E). Next, take off the sanding belt and change a new one then put it back by pushing back the handle bar (D) for tighten up the sanding belt.

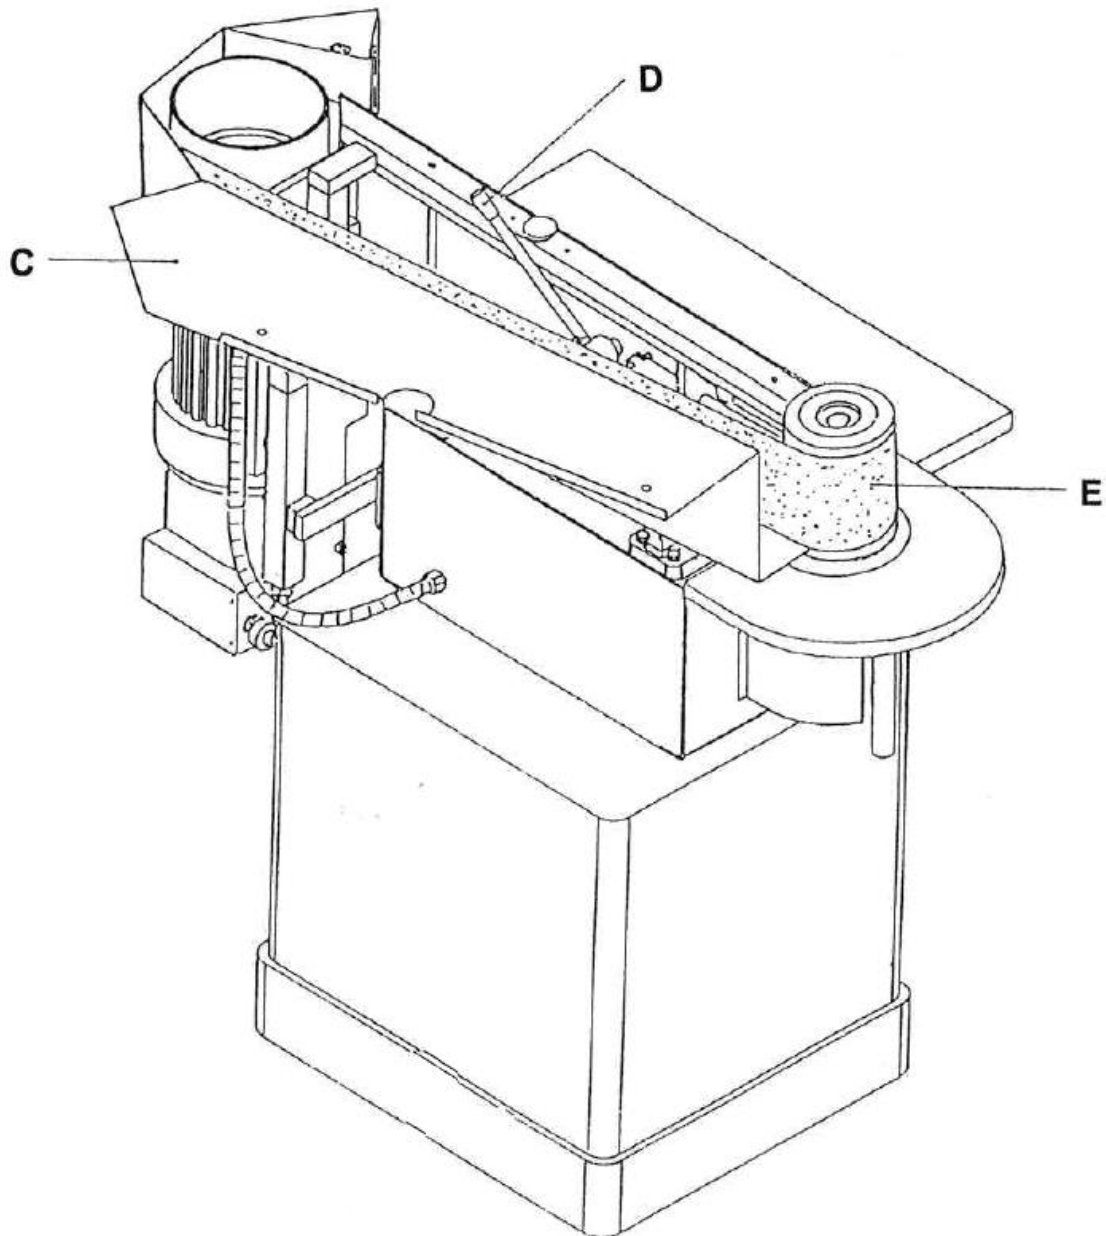

3. When the sanding belt is not running at the central position of the platen. How to do the micron adjustment for sanding belt alignment adjustment?

Step 1:


Loosen nut (F)

Step 2:

Rotate nut (G) clockwise or counter clockwise to adjust belt tracking.

Step 3:

When belt is tracking properly, retighten nut (F) again.

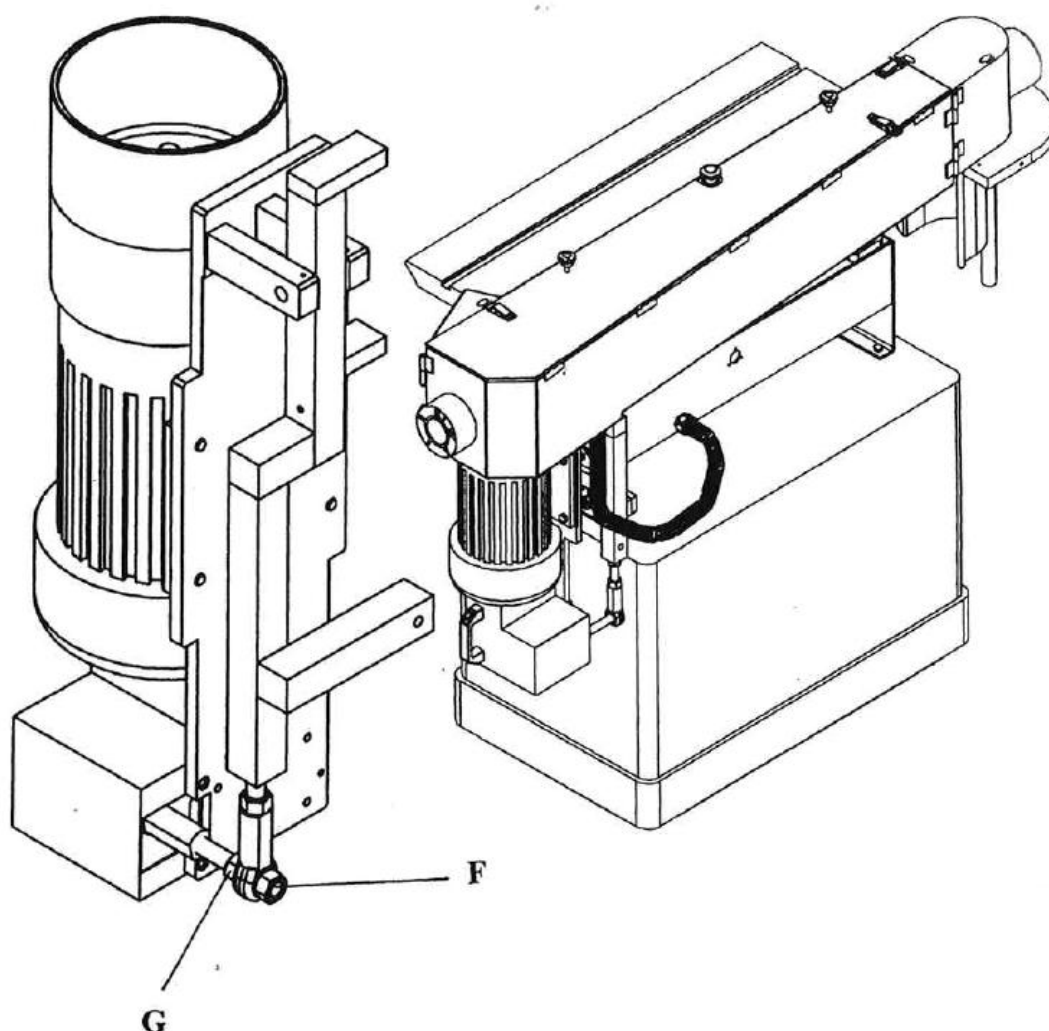

4. How to do the vertical and horizontal sanding

Step 1:

First loose the two knobs(A) and (B) under the main table and pull the table backward position.


Step 2:

Loosen the adjusting knob (H) at the scale and set up the angle as your request by moving the plate (I). Lock the adjust knob(H) again while the angle is set up already.

Step 3:

Moving the main table forward to close to the platen and tighten up the two knobs

(A)&(B) again for insure the table stability.

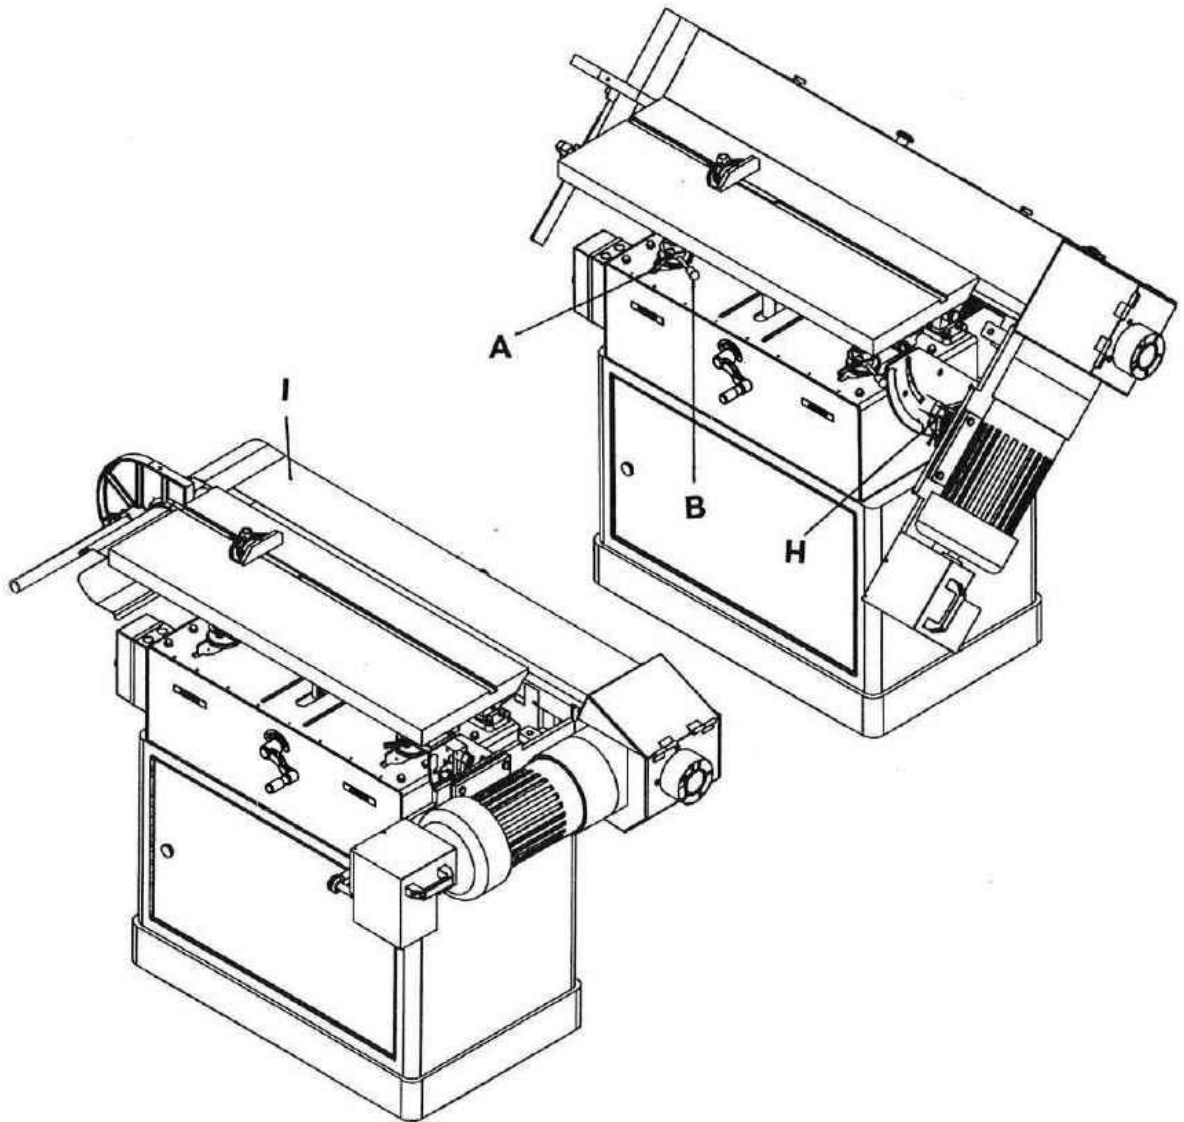

5. When doing the curve sanding, please do the following steps as below:

Step 1:


Open the platen cover (J), and fasten it at the clamp position.

Step 2:


Loosen the three socket screws. Take the idler roller cover (K) off and mount the sanding drum spindle (L) by tighten 3 pieces of M5 x 15L soc. Screw.


Step 3:

Insert the rubber drum (M) by using one piece of washer and one piece of 1/4" x 1/2" hex. Head. Screw. Then you can start to do the curving sander.

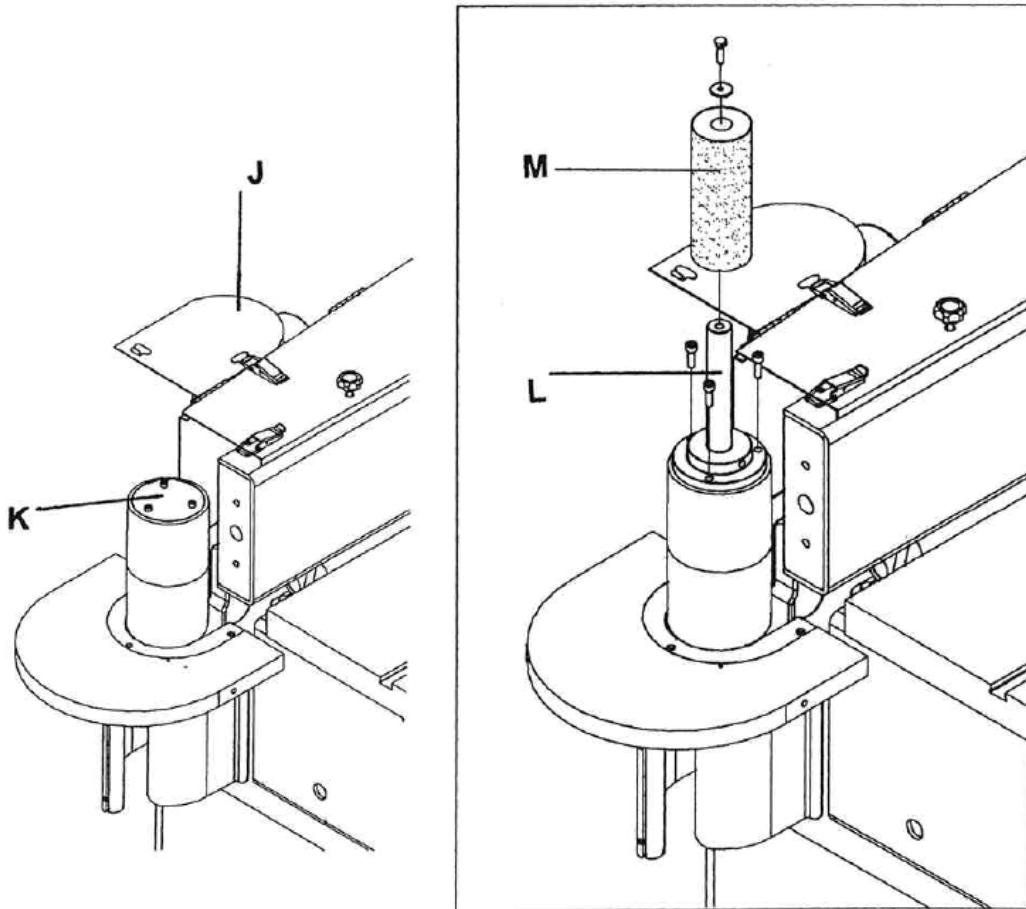**6. Mounting the dust port before operating;**

Mounting the dust port by using four pieces of 1/4" x 1/4" round lead screw tightly. Please see below instruction.

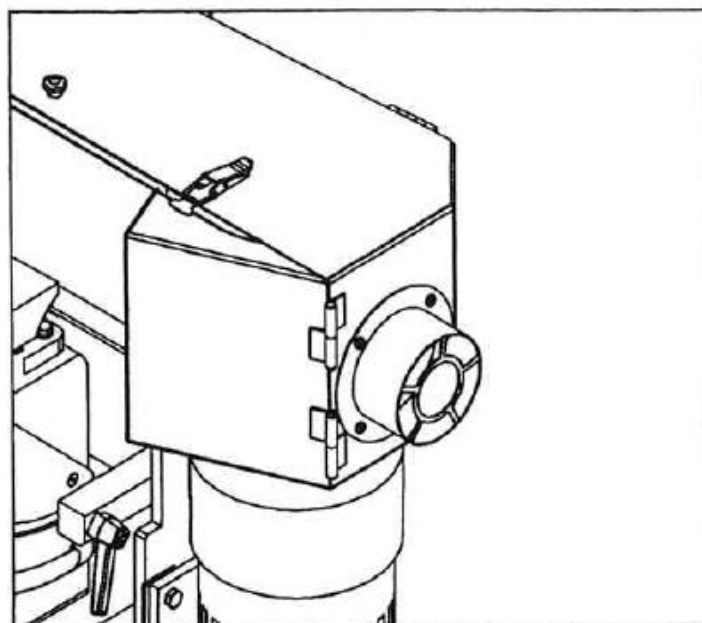

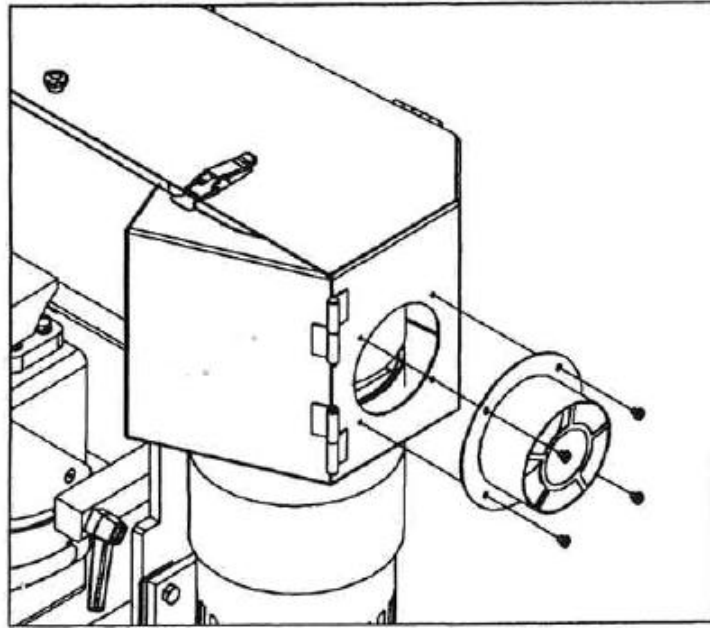

CONNECTION MACHINE TO POWER SOURCE

POWER CONNECTION

A separate electrical circuit should be used for your tools. This circuit should not be less than and should be protected with a 10 amp, time lag fuse. Have a certified electrician repair or replace damaged or worn cord immediately. Before connecting the motor to the power line, make certain the switch is in the “OFF” position and be sure that the electric current is of the same characteristics as stamped on the motor nameplate. All line connections should make good contact. Running on low voltage will damaged the motor.

WARNING: DO NOT EXPOSE THE DUST COLLECTOR TO RAIN OR OPERATE THE MACHINE IN DAMP LOCATIONS.

GROUNDING INSTRUCTIONS

WARNING: THIS TOOL MUST BE GROUNDED WHILE IN USE TO PROTECT THE OPERATOR FROM ELECTRIC SHOCK.

This belt sander must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This belt sander is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the belt sander. If it will not fit the outlet, have a proper outlet install by a qualified electrician.

TROUBLE SHOOTING

WARNING Turn switch “OFF” and always remove plug from power source before trouble shooting.


PROBLEM	PROBABLE CAUSE	REMEDY
Motor will not run.	1. Defective or broken “ON-OFF” switch. 2. Defective or damaged switch cord. 3. defective or damaged switch relay. 4. Burned out motor. 5. Blown house fuse.	1-3. Replace all broken or defective parts before using sander. 4. Consult your local authorized service station. Any attempt ot repair this motor may create a hazard unless repair is done by a qualified technician.
Machine slows down while sanding.	1. Operator applying too much pressure to workpiece.	1. Use less pressure in applying work-piece to sanding surface.
Sanding belt runs off pulleys.	1. Not tracking properly.	1. Adjust tracking. See “Replacing the sanding belt, Tensioning and Tracking”.
Wood burns while sanding	1. Sanding disc or belt glazed with sap. 2. Excessive pressure being applied to work-piece.	1. Replace belt or disc. 2. Reduce pressure applied to work-piece.

ORDERING REPLACEMENT PARTS


Replacement parts may be ordered from your local distributor. When ordering replacement parts, please always provide the following information:

1. The model number and serial number of the belt sander.
2. The part number.
3. The part name.
4. The desired quantity of the part.

EXPLODED DIAGRAM-PART 1

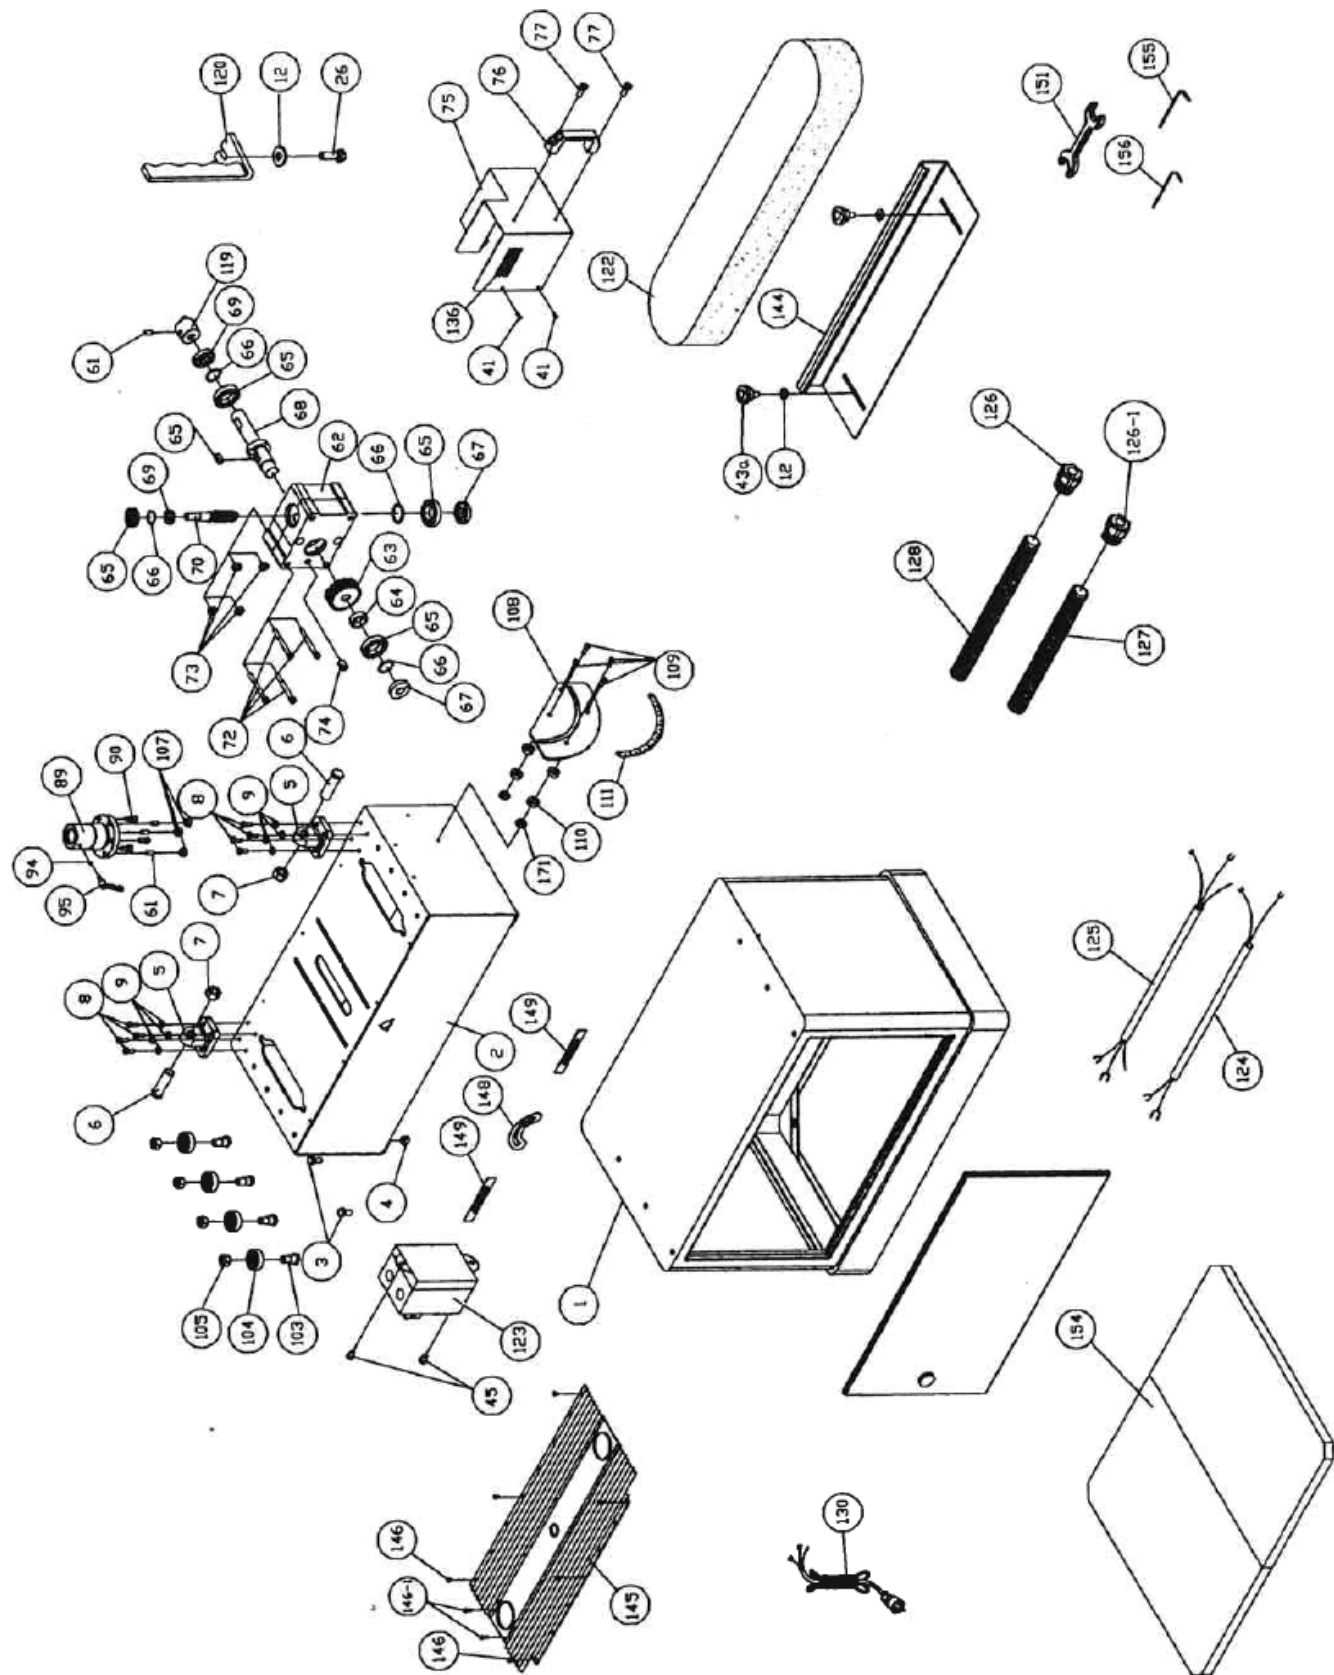

EXPLODED DIAGRAM-PART 2

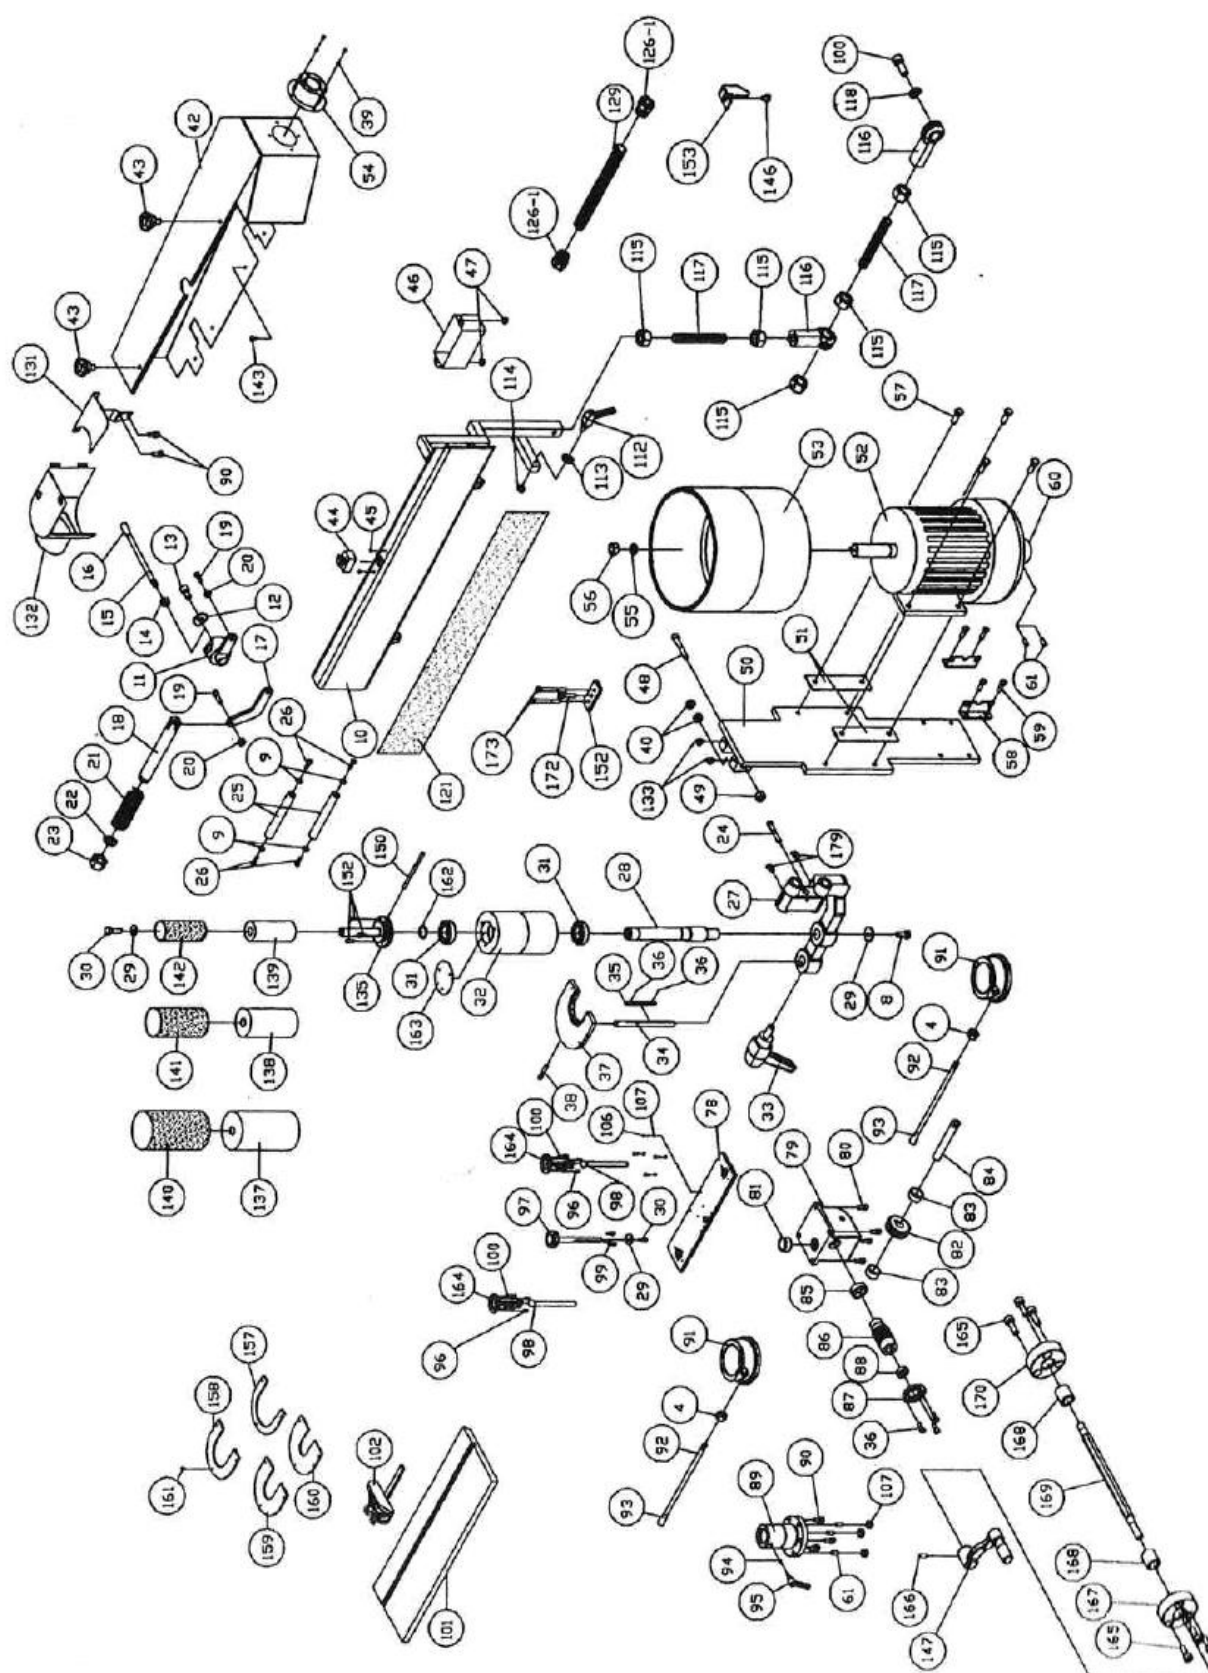

PART LIST

NO	Description	Q'TY	NO	Description	Q'TY
1	base	1	42	platen cover	1
2	adjusting bracket	1	43	knob	2
3	hex. Head screw	6	44	emergency stop switch	1
4	nut	8	45	round head screw	2
5	swivel bracket	2	46	switch cover	1
6	swivel spindle	2	47	nut	2
7	nut	2	48	soc. Bolt	1
8	hex. Head screw	6	49	nut	1
9	spring washer	12	50	motor bracket	1
10	platen	1	51	motor plate	2
11	top push bolt	1	52	motor	1
12	washer	6	53	drive roller	1
13	soc. Bolt	1	54	dust port	1
14	nut	1	55	impeeler washer	1
15	handle bar	1	56	nut	1
16	knob	1	57	hex screw	4
17	handle bracket	1	58	gear box fixing plate	2
18	spindle	1	59	hex. Screw	4
19	soc. Bolt	1	60	gear box fixing plate	1
20	nut	2	61	hex screw	16
21	condensed spring	1	62	gear box	1
22	washer	1	63	gear	1
23	nut	2	64	aluminum ring	1
24	soc. Bolt	1	65	ball baring	4
25	fixing spindle	2	66	ring	4
26	hex head screw	6	67	oil sealed without hole	2
27	idler roller bracket	1	68	turbine spindle	1
28	idler roller spindle	1	69	oil sealed with hole	2
29	washer	4	70	turbine rod(A)	1
30	hex screw	2	71	key	1
31	ball baring	2	72	socket. Screw	2
32	idler roller	1	73	nut	4
33	knob	1	74	set screw	1
34	U-type table spindle	1	75	gear box cover belt	1
35	key	1	76	handle	1
36	soc. Bolt	5	77	phillip head screw	2
37	U-type cast iron table	1	78	adjusting plate	1
38	soc. Bolt	1	79	turbine box	1
39	round head screw	4	80	soc screw	4
40	thrust ball bearing	2	81	tooth row copper ring	1
41	phillip head screw	8	82	turbine	1

NO	Description	Q'TY	NO	Description	Q'TY
83	packing	1	124	emergency stop power cord	1
84	turbing spindle	2	125	motor power cord	1
85	copper ring	1	126	connector	2
86	turbine rod(B)	1	126-1	connector	4
87	Packing	1	127	hose connector	1
88	thrust ball bearing	1	128	hose connector	1
89	orientating spindle packing	2	129	hose connector	1
90	soc.screw	9	130	power cord	1
91	locked nut	2	131	packing washer	1
92	handle bar	2	132	packing washer	1
93	knob	2	133	hex. Head screw	1
94	copper plate	2	134	hex screw	4
95	handle	2	135	sanding drum spindle	1
96	set screw	6	136	sanding paper adjusting label	1
97	adjusting screw spindle	1	137	rubber drum	1
98	orientating spindle	2	138	rubber drum	1
99	soc. Screw	8	139	rubber drum	1
100	soc. Screw	6	140	drum sanding paper	1
101	table	1	141	drum sanding paper	1
102	miter gauge	1	142	drum sanding paper	1
103	bias spindle	8	143	hex. Head screw	5
104	ball baring	8	144	fence	1
105	nut with cap	8	145	extendable cover	1
106	carriage screw	4	146	round head screw	26
107	nut	4	146-1	round head screw	4
108	scale plate	1	147	handle wheel	1
109	screw	4	148	label	1
110	miter gauge packing	4	149	label	2
111	label	1	150	hex. Rod	1
112	handle	1	151	open end wrench	1
113	washer	1	152	plate	1
114	swivel packing	1	153	pointer	1
115	nut	5	154	wooden board	2
116	ball baring	2	155	hex wrench	1
117	adjusting thread	2	156	hex wrench	1
118	washer	1	157	U-type packing	1
119	bias packing	1	158	U-type packing	1
120	platen table	1	159	U-type packing	1
121	graphite paper	1	160	U-type packing	1
122	sanding belt paper	1	161	Pan head screw	3
123	switch	1	162	ring	1

NO	Description	Q'TY		NO	Description	Q'TY
163	idler roller cover	1		170	nut	4
164	socket screw	3		171	nut	4
165	set screw	4		172	socket screw	1
166	hex spindle front cover	1		173	socket	2
167	thrust ball bearing	2		174	spring	1
168	hex spindle	1				
169	hex spindle back cover	1				

WIRING DIAGRAM: (3 PHASE)

