



Woodworking machinery at its best!

SPINDLE MOULDER OWNERS MANUAL

MODEL: W030



Charnwood, Cedar Court, Walker Road,
Hilltop Industrial Estate, Bardon Hill, Leicestershire, LE67 1TU

Tel. 01530 516 926 Fax. 01530 516 929
email: sales@charnwood.net website: www.charnwood.net

Forward

These instructions are important, the information contained herein is essential for the correct build and operation of the machine and the safety of its operator.

The machine is equipped with various safety devices to protect itself and the operator. However, these devices cannot cover all eventualities and a thorough understanding of spindle moulding techniques, good workshop practice plus the controls and operation of this machine are essential for your safety.

Do not operate the machine until you have read and understood all the instructions in this manual and are familiar with both the machine and spindle moulding techniques.

Use of the Machine

Purpose

This machine is designed for moulding along and across the grain of prepared timber, using cutters and limiters, correctly mounted in a standard Euro type cutter block.

It is designed for use by one operator.

Operator Qualifications/Training

Operators of this machine should have a suitable qualification in the use of woodworking machinery, including spindle moulders or should have been trained by someone holding such qualifications.

GENERAL SAFETY RULES



WARNING: Do not attempt to operate the machine until you have read thoroughly and understood completely all instructions, rules, etc. contained in this manual. Failure to comply may result in accidents involving fire, electric shock, or serious personal injury. Keep this owner's manual and review it frequently for continuous safe operation.

1. Know your machine. For your own safety, read the owner's manual carefully. Learn its application and limitations, as well as specific potential hazards pertinent to this machine.
2. Make sure all tools are properly earthed.
3. Keep guards in place and in working order. If a guard must be removed for maintenance or cleaning, make sure it is properly replaced before using the machine again.

4. Remove adjusting keys and spanners. Form a habit of checking to see that the keys and adjusting spanners are removed from the machine before switched it on.
5. Keep your work area clean. Cluttered areas and workbenches increase the chance of an accident.'
6. Do not use in dangerous environments. Do not use power tools in damp or wet locations, or expose them to rain. Keep work areas well illuminated.
7. Keep children away. All visitors should be kept a safe distance from the work area.
8. Make workshop childproof. Use padlocks, master switches and remove starter keys.
9. Do not force the machine. It will do the job better and be safer, at the rate for which it is designed.
10. Use the right tools. Do not force the machine or attachments to do a job for which they are not designed. Contact the manufacturer or distributor if there is any question about the machine's suitability for a particular job.
11. Wear proper apparel. Avoid loose clothing, gloves, ties, rings, bracelets, and jewellery which could get caught in moving parts. Non-slip footwear is recommended. Wear protective hair covering to contain long hair.
12. Always use safety glasses. Normal spectacles only have impact resistant lenses. They are not safety glasses.
13. Do not over-reach. Keep proper footing and balance at all times.
14. Maintain machine in good condition. Keep machine clean for best and safest performance. Follow instructions for lubrication and changing accessories.
15. Disconnect the machine from its power source before servicing and when changing accessories.
16. To avoid accidental starting, make sure the switch is in the OFF position before plugging in the mains cable.
17. Never leave the machine running unattended. Turn the power off. Do not leave the machine until it comes to a complete stop.
18. Do not use any power tools while under the effects of drugs, alcohol or medication.
19. Always wear a face or dust mask if operation creates a lot of dust and/or chips. Always operate the tool in a well ventilated area and provide for proper dust removal. Use a suitable dust extractor.

EXTRA RULES FOR SPINDLE MOULDERS

1. A spindle moulder should never be used by an untrained operator. Proper training is essential for the operator's safety.
2. The machine must be properly maintained and the correct fitting of all guards checked.
3. Guards should be of such a design and fitted in such a way that they keep fingers out of an area of 50 mm (2 inches) beyond the sweep of any cutter that might be used.
4. Always ensure that you use safe working procedures and that you understand what you are doing.
5. Wear appropriate clothing. Long loose sleeves, long hair or anything else that could get caught in the machine should be tied back or otherwise secured.
6. Never use this spindle moulder for curved work, without a Ring Fence fitted.
7. **NEVER** use a cutter block without limiters.
8. Feed the workpiece to the cutter block or router bit against the direction of rotation.
9. Never draw the workpiece back during cutting. Wait until the block stops rotating before pulling the workpiece back.



Risk of injury!
Never reach into
moving tooling.



Wear Eye
Protection



Wear Ear
Protection

Specification

Main table surface	600 x 400mm
Sliding table size	400 x 180mm
Sliding carriage stroke	400mm
Table height	870mm
Weight Net/Gross	95kg/120kg
Spindle diameter	30mm
Maximum Tooling Diameter	150mm
Rotation speeds	4(1400/4000/6000/9000) rpm
Spindle length available for tooling	105mm
Spindle rise and fall	110mm
Table aperture (with inserts)	160mm (110/75mm)
Table aperture depth	50mm
Motor (induction)	240V, 1500W 2hp single phase
Extractor outlet	100mm
Rating	Light trade
Warranty	1 year


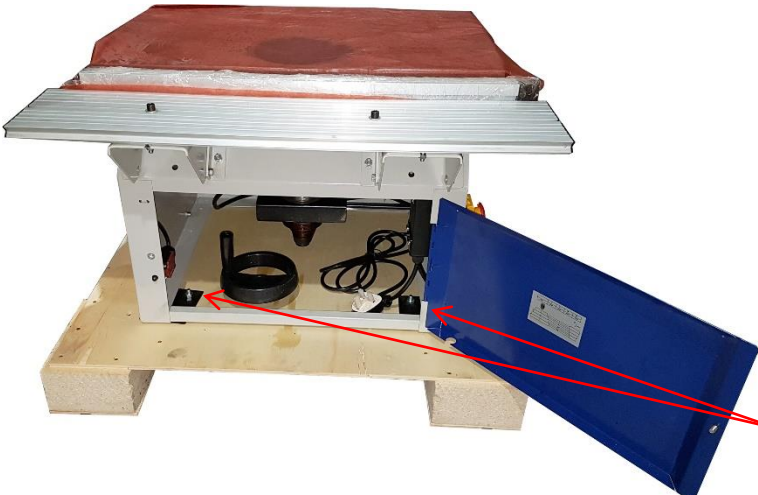
Rating

Light Trade: Suitable for professional woodworkers where the machine will not be in daily use.

Mid-range machines with a heavier build and more power. Typically used by 2 or 3 people within a small business and also for the dedicated hobbyist with a larger budget. It is expected to be used up to the machines maximum limit with occasional long work periods. Suitable for income generation.


Expected maximum use of 300 hours annually.

Unpacking



	<p>This product is shipped in 3 Pieces: 1 wooden crate and 2 cartons.</p> <p>To open the wooden crate cut the strapping and lift the lid of the crate from the base.</p>
	<p>Remove the loose items surrounding the machine.</p> <p>Open the blue door situated on the front of the machine.</p> <p>Remove the handwheel which is packed inside.</p> <p>The machine is fixed to the base with two bolts.</p> <p>Use a 13mm spanner to undo the 2 securing nuts.</p>


Please Note: Do not dispose of any packaging until the machine has been fully assembled and tested. In the unlikely event of a problem which requires the product to be returned, the packaging will need to be re-used.

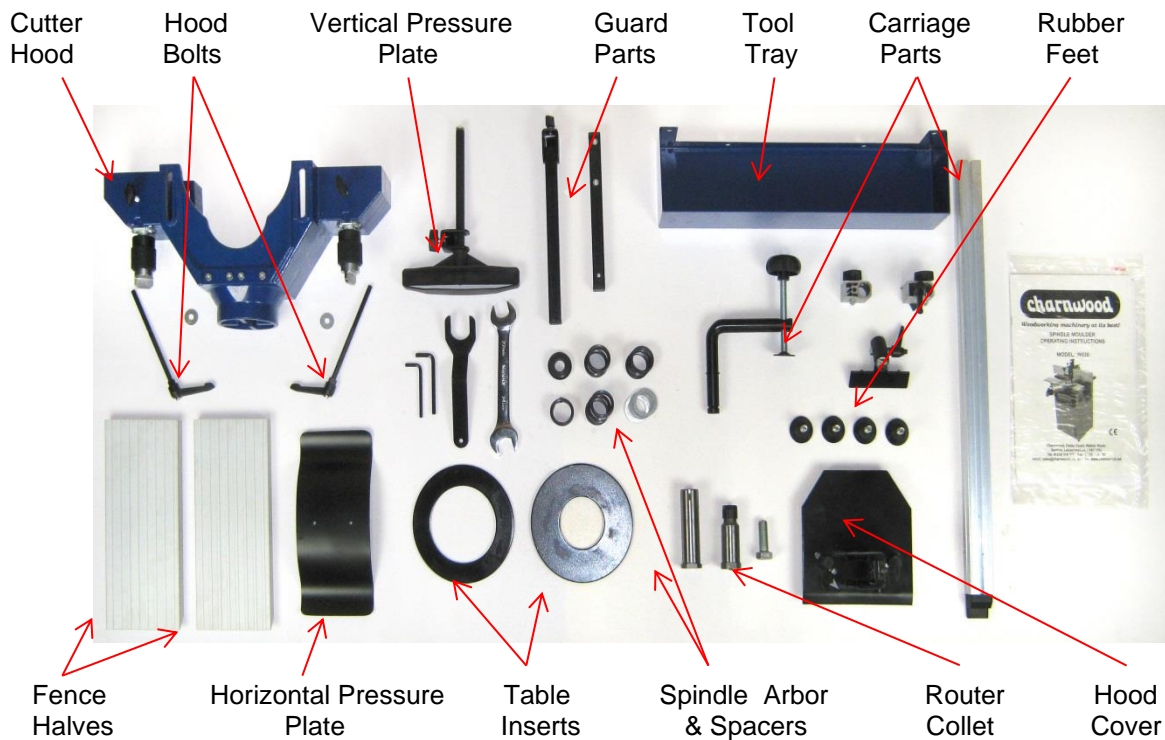Open the remaining cartons, unpack all the components and check everything is present.



Assembly

	<p>To assemble the base.</p> <p>Locate: 4 Panels 4 Feet 12 x M6 Bolt, Washer and nut</p>
	<p>Screw the 4 feet into the threaded holes in the 2 side panels of the base.</p> <p>Use a 17mm spanner to tighten them.</p> <p>After full assembly of the machine, the feet can be adjusted to level up the machine.</p>

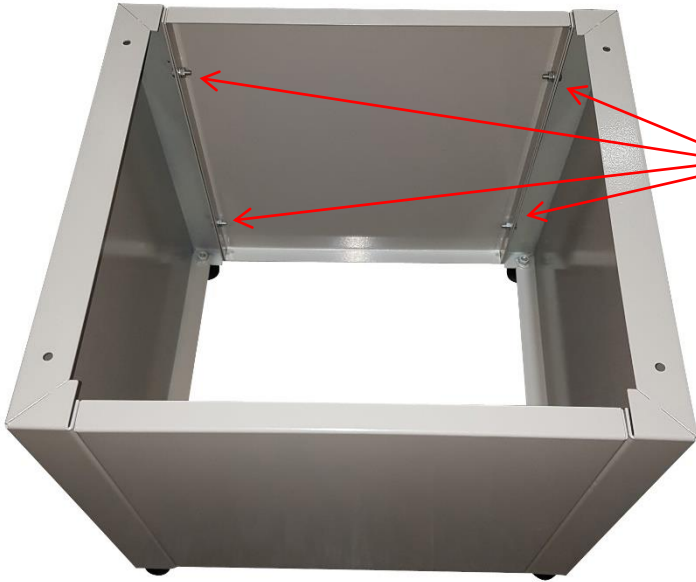


Use 8 of the bolts, washers and nuts to join the 4 panels together.

Fit all 8 bolts finger tight before tightening with a 10mm spanner.



Having unbolted the machine from the pallet and removed any loose items which are packed around and inside it.

Turn the body of the machine upside down and sit the assembled base onto it.

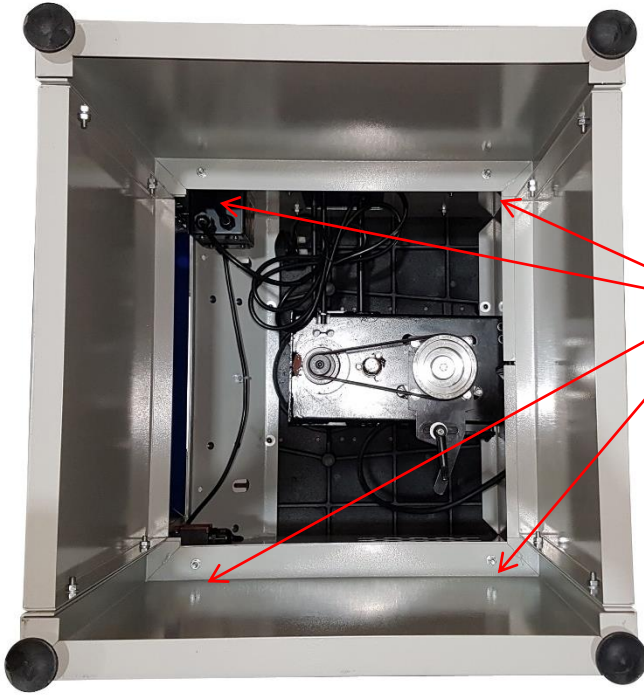

Use the remaining 4 bolts, washers and nuts to attach the base to the machine.

Once all of the nuts and bolts are tight. Turn the machine the correct way up and stand it on the feet.


Adjust the feet to level up if necessary.




Fit the hand wheel to the rise and fall control shaft and tighten the grub screw.



Remove one of the stop screws from the sliding carriage rail.

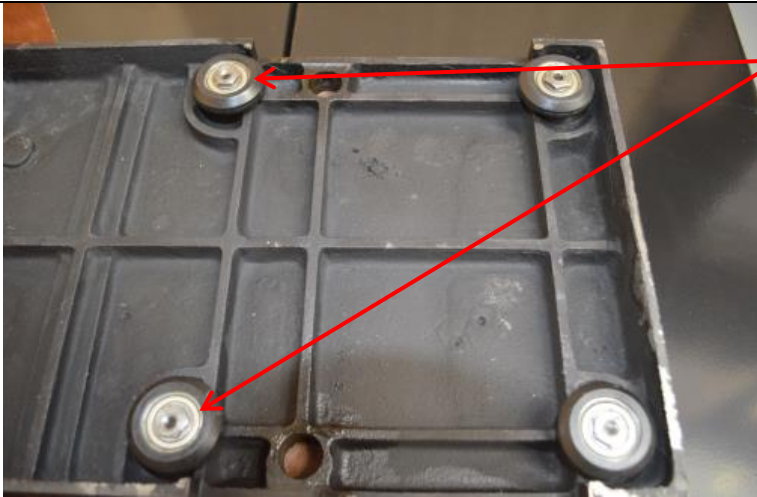


Before fitting the sliding carriage it should be noted that the two outboard bearing wheels are mounted on eccentrics.

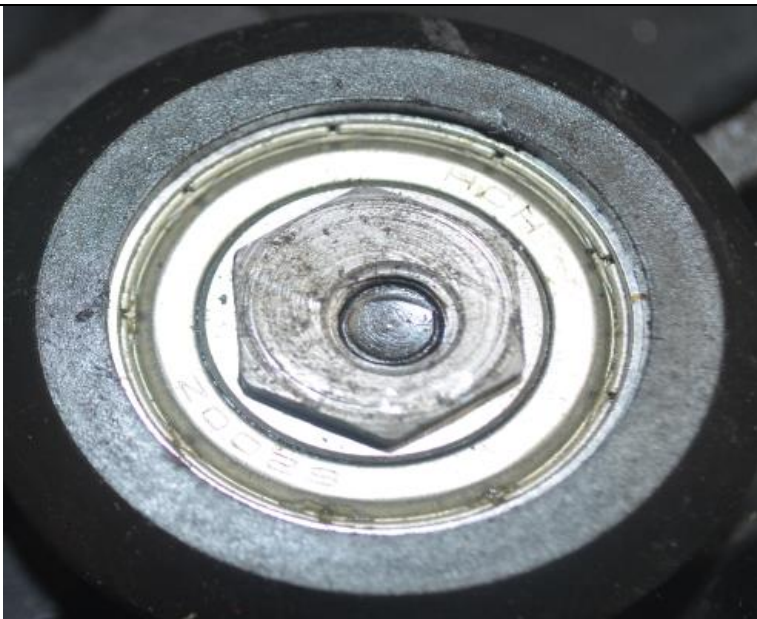

Should it ever be necessary their position can be adjusted with the aid of a 14 mm spanner.



Slide the sliding table on to the guide rail, ensuring the guide rollers engage with the channels running either side of the rail.

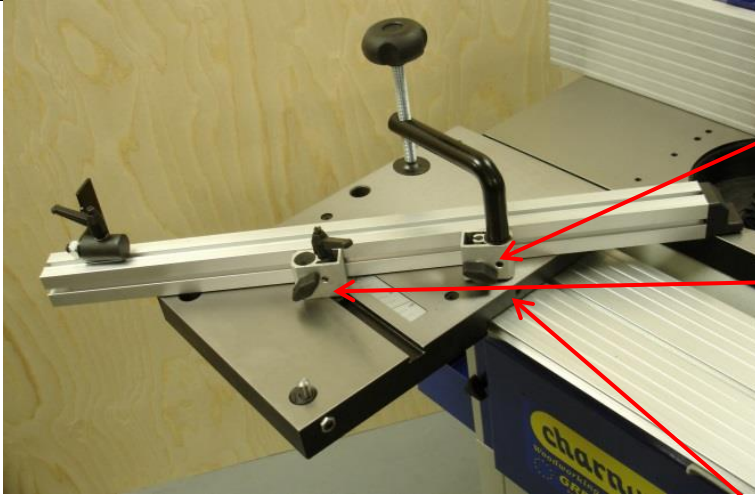

Place the crosscut fence with the open side face down and the plastic tip to the right.
Slide the pivot block and the locking block onto the back side of the fence with the head of the bolt in the T-slot.
The Locking block has a T-shaped foot plate, slide it into the slot in the table.
The Work clamp passes through the pivot block and locates in the large hole at the front of the carriage.
The work clamp should be locked in place using the small grub screw in the front edge of the carriage.



Fit the flip-over length stop by feeding the head of the bolt into the T-shaped slot on the top side of the fence.
The ratchet handle locks the stop in place.
The stop plate can be flipped over to engage or disengage it.



From underneath the carriage, push up the locating stop pin.

Use a square to check the crosscut fence is set at 90 degrees to the blade when it is pressed against the stop pin.

If necessary, adjust the stop by loosening the locking ring and grub screw. Put a screwdriver into the slot to rotate the stop to set the angle.



Here you can see the tapered end of the spindle.




Locate the spindle lock on the right hand side of the machine.

Rotate the tapered spindle slowly whilst pushing the locking bar inwards.

When the lock engages the bar will slide in around 10mm and the spindle will be locked.

Pull the bar out to unlock the spindle.

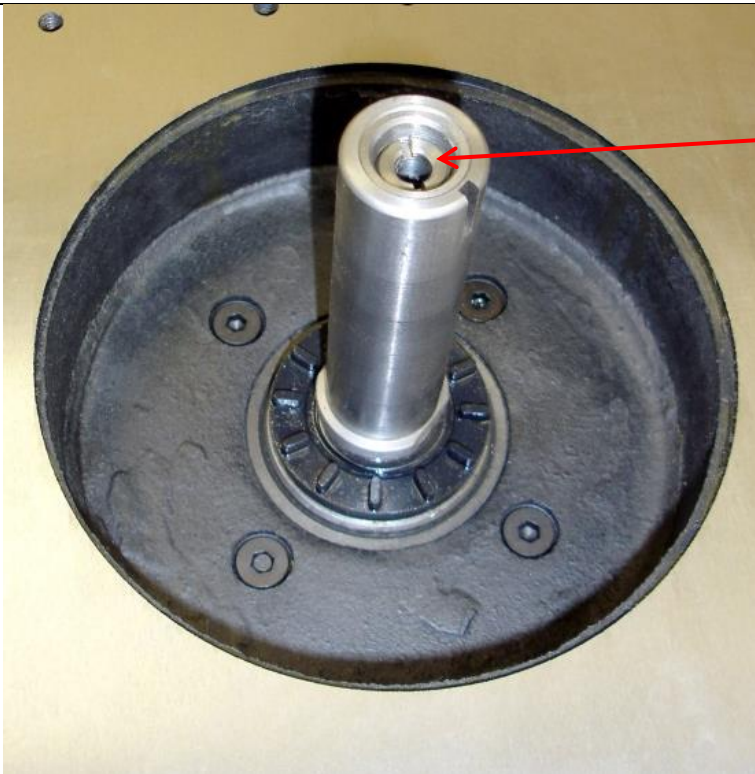

With the tapered spindle locked, fit the upper spindle.

Use a flat screwdriver to unscrew the locking ring in the centre of the upper spindle. Place the upper spindle over the taper and tighten the retaining screw by passing a 6mm Allen key into the centre of the spindle.

Next use the flat screwdriver to tighten the locking ring down onto the head of the retaining screw.

Warning: Failure to tighten the locking ring may result in the arbor and cutter block coming loose.




If the bolt holding the upper and tapered spindle together ever comes loose, it will be necessary to use the special spanner provided to hold the upper spindle in place whilst unlocking the top bolt.



The router collet is mounted onto the tapered spindle in the same way.

When changing the router cutter, take the precaution of checking the centre retaining bolt is tight.

Assemble the Fence

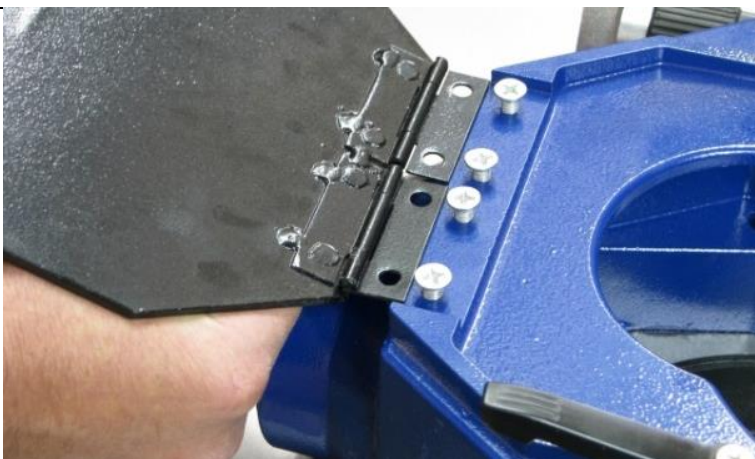

On top of the hood, you will find four screws.

Remove the screws and attach the hinged top cover as shown below.


At the rear of the cutter hood is the connection for a 100mm diameter dust extraction hose to be fitted.



Fit the 2 long bolts through the slots in the hood and then screw them into a pair of holes in the table.

The hood can be fixed in different positions depending on the size of the work piece.


The cover is hinged to provide quick access to the spindle to change the tooling.

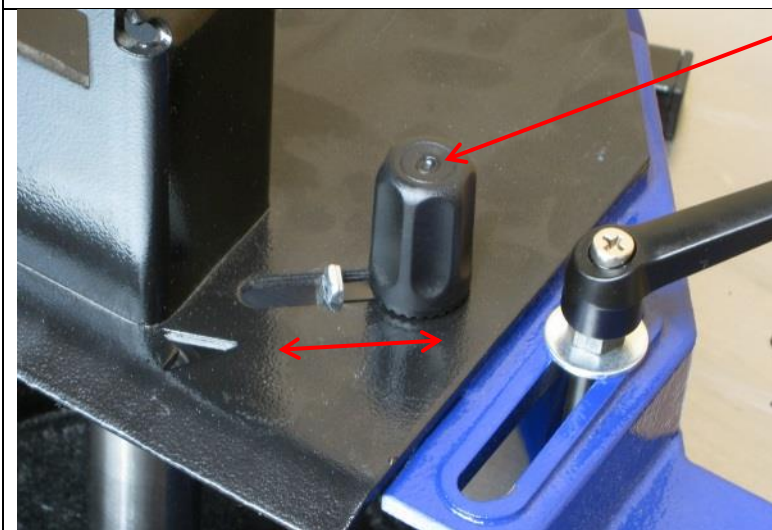

To lock the cover down, unscrew the locking knob, slide the clamp away from the centre of the hood so that the tongue fits under the hood, tighten the locking knob. Do the same on the other side.

This cover MUST be closed and locked when the machine is in operation.

Fence depth Adjust screw Fence depth lock knob

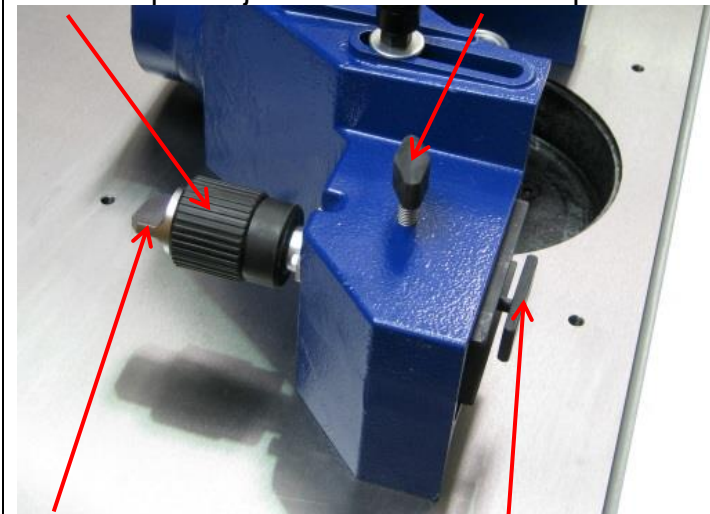


Fence width lock

Fence fixing plate


Loosen the fence depth locking knob and the silver fence width lock.

Slide the fence over the fixing plate so that the mitred end of the fence is closest to the spindle.

Wind the fence depth adjusting screw, so that the fence sits back against the hood, then lock it in place with the depth locking knob and the fence width lock.

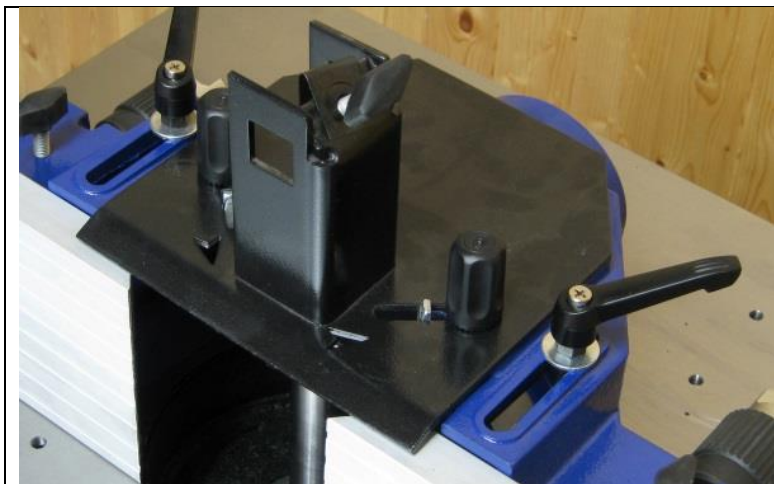

Assemble the front guard and clamp.

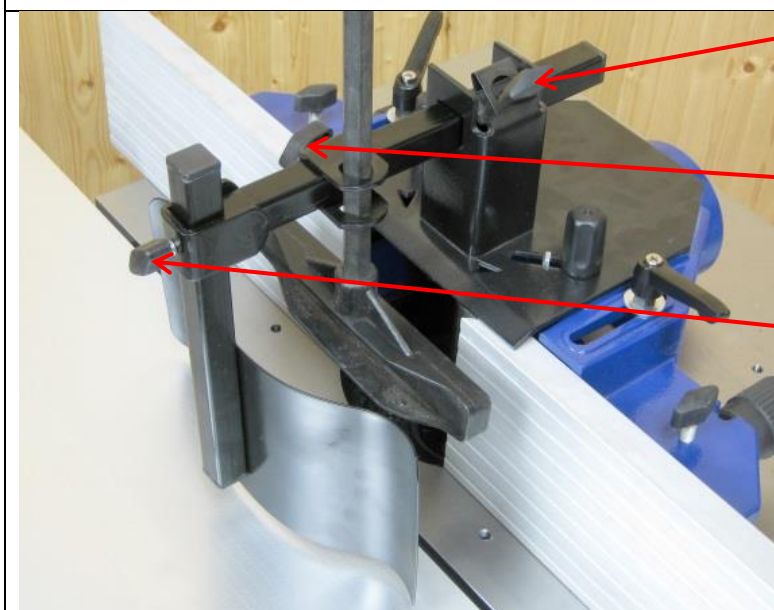

Fit the square bar into the hood cover and lock it with the thumbscrew.

Slide the vertical hold down onto the square bar and lock it with the thumb screw.

Fit the front spring guard into the end of the square bar and lock it with the thumb screw.

With these correctly set, the work piece is held firmly against both the table and the fence.

Never operate the spindle moulder without them.

Fitting a Cutter block



A cutter block (not included as standard) is shown here correctly assembled.

The larger of the two table inserts is fitted into the table aperture. Always fit the smallest table insert which the tooling allows.


A large selection of spacers, in varying widths are provided so that the cutter block can be located at any height on the spindle.



When stacking the spacers, ensure that the one with the roll pin is at the top of the stack.
The pin engages with the slot in the top of the spindle.

Not all of the spacers will be used at the same time.


Before fitting the cutter block onto the spindle, engage the spindle lock.

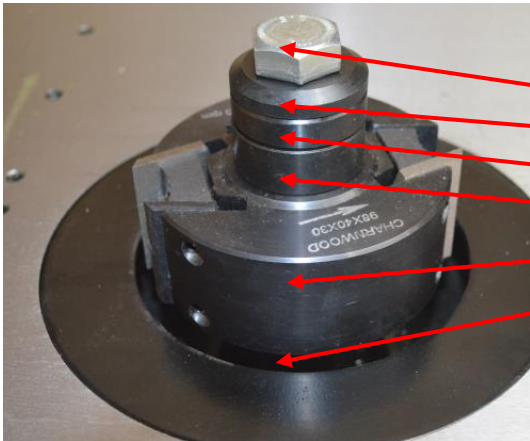

Now fit, (in reverse order):
Locking bolt
Top cap
Locking spacer with the roll pin
Spacers
Cutter block
Spacers

The locking bolt must be firmly tightened.

Once the stack on the spindle is tight, release the spindle rotation lock, before starting the machine.

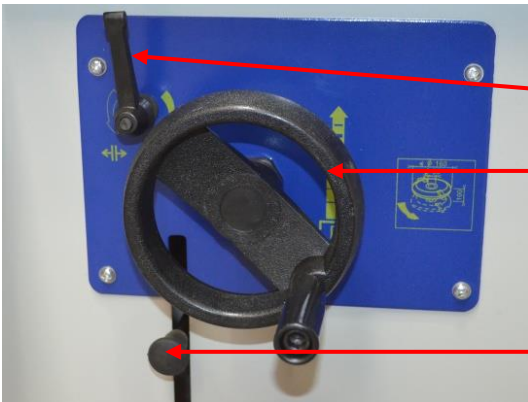

The Spindle Controls

Spindle Height Locking Lever

Rise and fall hand wheel.
One complete turn raises or lowers the arbor by 2 mm (0.08").

Spindle Rotation Lock



The power supply cable will be found inside the base cabinet.

The cable gland should be fitted to the cut out in the door lower flange and the locking nuts tightened

Changing Speeds




The spindle moulder has 4 speeds.

To change speed:

Unscrew the knob and open this access door.

(The machine is fitted with a micro switch and will not run when this door is open)

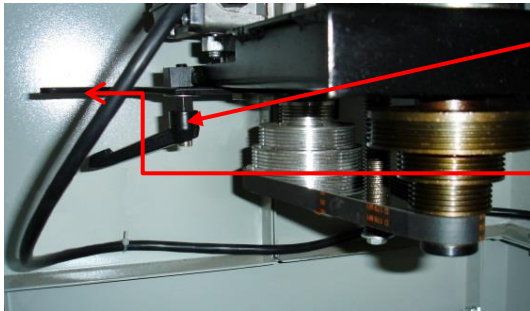

Slacken off the locking lever

Reduce the tension on the drive belt by moving this lever.

Move the drive belt to the pair of pulleys which give the required speed, re-tension the belt and then tighten the locking lever.

Operating the Spindle Moulder

It is assumed that anyone purchasing a spindle moulder has been trained to operate this type of machine competently. Such training is beyond the scope of this manual.

Spindle rotation speeds:

- 1500rpm - Drum Sanding *
- 4500rpm - Moulding Hardwoods
- 6500rpm - Moulding Softwoods
- 8500rpm - Routing *

* It should be noted that sanding and routing accessories are optional extras.

Limiters: Never use a cutter block without limiters fitted.

Fences: Close the two fences together so the edges are just missing the cutter. This improves the support for the work piece and is best practise for safety reasons. Always adjust the fences so that the work is fully supported. If the cut removes the whole edge of the work piece, step the out-feed fence forward as appropriate.

Set the vertical hold down to contact the top of the work piece.
Set the front guard spring to hold the work piece up against the fences.
Use a push stick to feed small work pieces through the cutter block.

Always feed the work against the direction of rotation (from right to left).

Declaration of Conformity


Charnwood Declare that Woodworking Vertical Spindle Moulder, Model W030

Conforms with the following EU Directives: Machinery Directive 2006/42/EC
Low Voltage Directive 2006/95/EC

Conforms with the following UK Regulations: Supply of Machinery (Safety) Regulations 2008
Electrical Equipment (Safety) Regulations 2016

And further conforms to the machinery example for which the type examination Certificate No. BM 50205859 and AN 50205827, have been issued by TUV Rheinland LGA Products GmbH, Tillystrasse 2, 90431, Nurnberg.

I hereby declare that equipment named above has been tested and found to comply with the relevant sections of the above referenced specifications. The machinery complies with all essential requirements of the directives and regulations.

Signed:  Dated: 01/10/2020 Location: Leicestershire

Richard Cook, Director



Please dispose of packaging for the product in a responsible manner. It is suitable for recycling. Help to protect the environment, take the packaging to the local amenity tip and place into the appropriate recycling bin.

Only for EU countries




Do not dispose of electric tools together with household waste material! In observance of European Directive 2002/96/EC on waste electrical and electronic equipment (EEE) and its implementation in accordance with national law, electric tools that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.



Your local refuse amenity will have a separate collection area for EEE goods.


DRAWING A

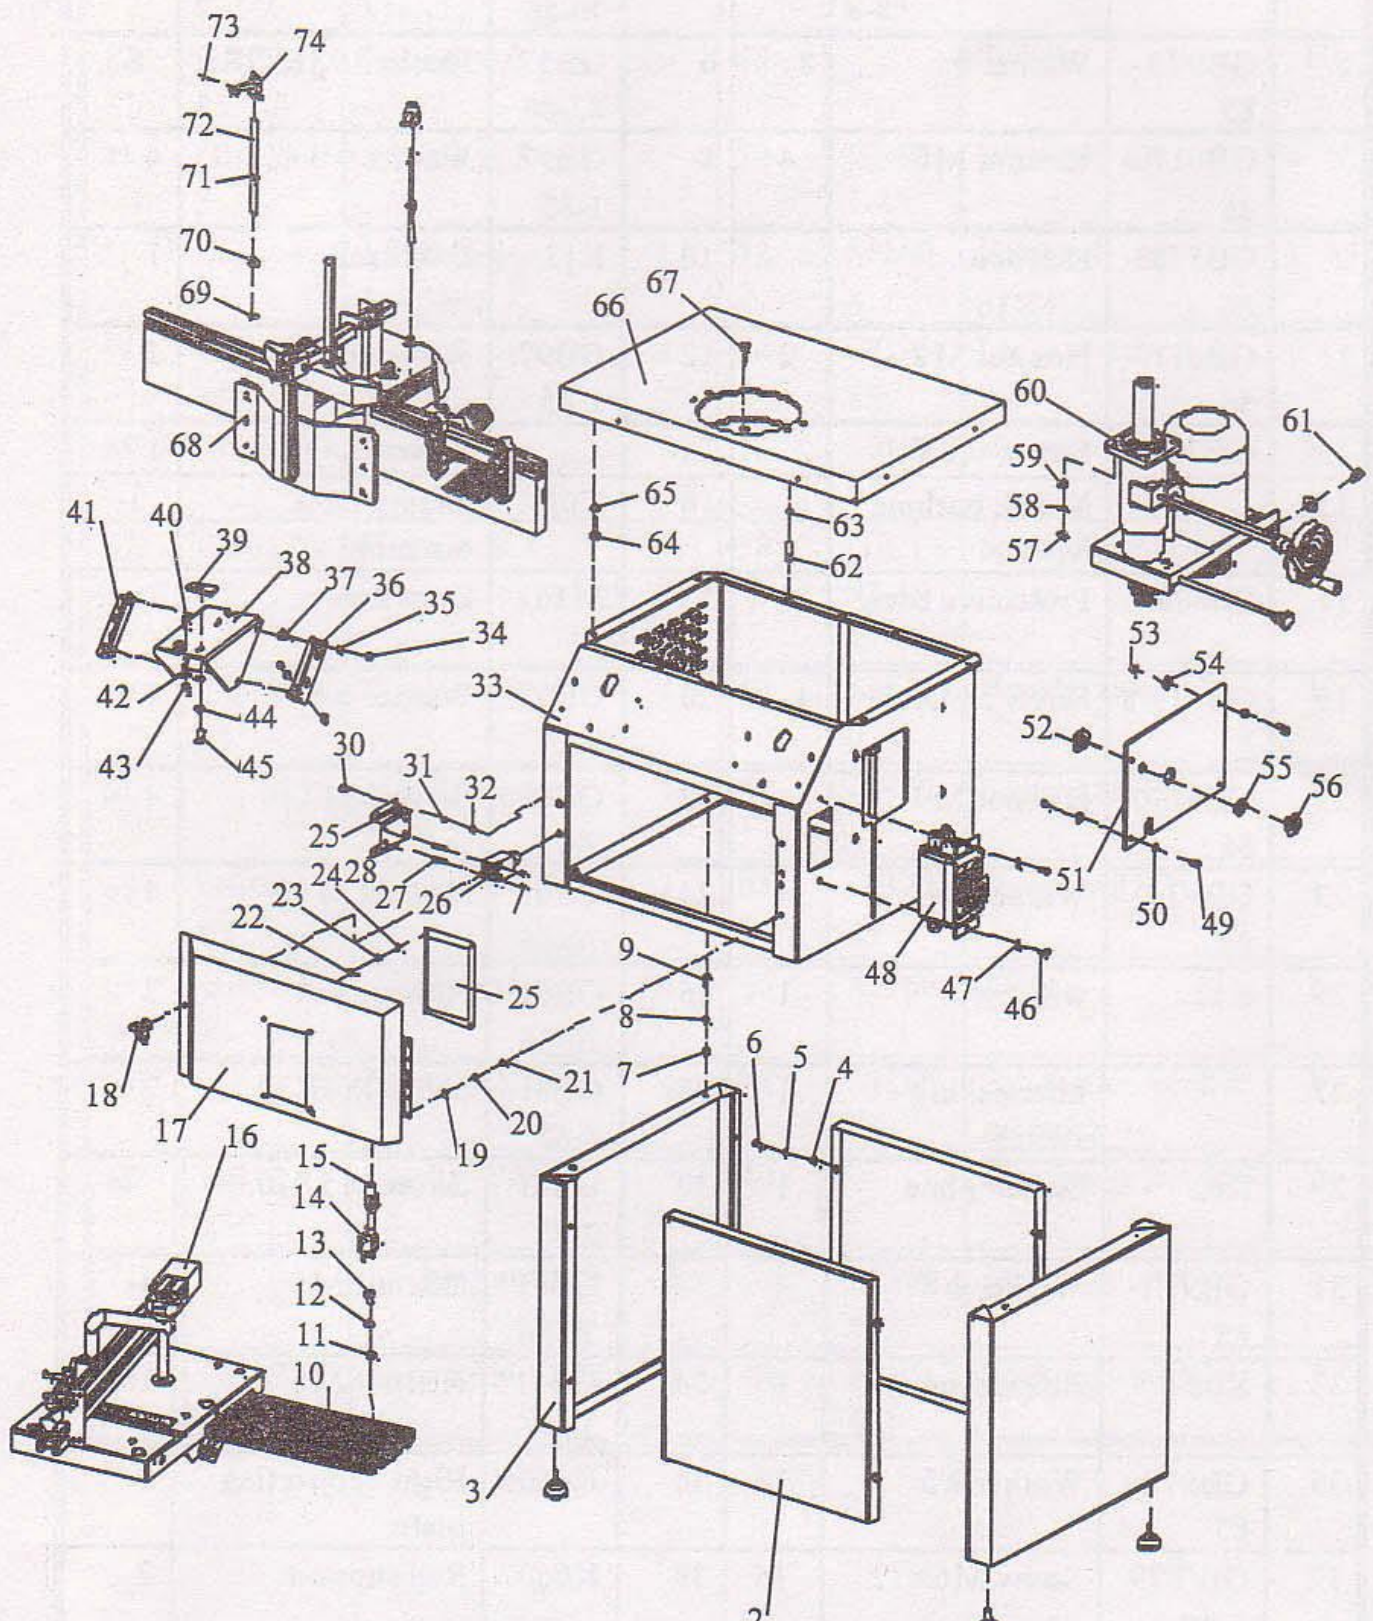

Parts List A

Part No.	Description	Part No.	Description
A01	Underprop	A02	Linking Plate
A03	Supporting Plate	A04	Hex Nut M6
A05	Washer M6	A06	Hex Bolt M6 x 16mm
A07	Hex Nut M6	A08	Washer M6
A09	Hex Bolt M6 x 16mm	A10	Guide Rail
A11	Hex Nut M8	A12	Washer M8
A13	Screw M8 x 10mm	A14	Power Plug
A15	Metric Bushing M16	A16	Sliding Table Assembly
A17	Protective Cover	A18	Door knob
A19	Screw M4 x 10mm	A20	Washer M4
A21	Hex Nut M4	A22	Screw M4 x 10mm
A23	Washer M4	A24	Hex Nut M4
A25	Window	A26	Hex Nut M4
A27	Interlocking Switch	A28	Screw M4 x 30mm
A29	Switch Plate	A30	Screw M5 x 10mm
A31	Washer M5	A32	Hex Nut M5
A33	Box Assembly	A34	Hex Nut M6
A35	Washer M5	A36	Right Supporting Plate
A37	Screw M6 x 12mm	A38	Rail Support
A39	Locating Block	A40	Hex Bolt M6 x 16mm
A41	Left Supporting Plate	A42	Large Washer M6
A43	Hex Nut M6	A44	Washer M8
A45	Hex Bolt M8 x 10mm	A46	Screw M6 x 16mm
A47	Washer M6	A48	Switch KJD18/5T
A49	Screw M6 x 16mm	A50	Washer M6
A51	Moulding Faceplate	A52	Hex Bush
A53	Hex Nut M6	A54	Large Washer M6
A55	Bush	A56	Hex Nut
A57	Hex Nut M8	A58	Spring Washer M8
A59	Washer M8	A60	Moulder Assembly
A61	Hex Flange Bolt	A62	Screw M6 x 25mm
A63	Washer M6	A64	Screw M8 x 25mm
A65	Washer M8	A66	Table
A67	Screw M8 x 30mm	A68	Exhaustion Socket Assembly
A69	Washer M8	A70	Hex Flange Nut M8
A71	Locking Nut M8	A72	Locking Pole
A73	Spring Pin 3 x 16mm	A74	Locking Handle


PARTS DIAGRAM B

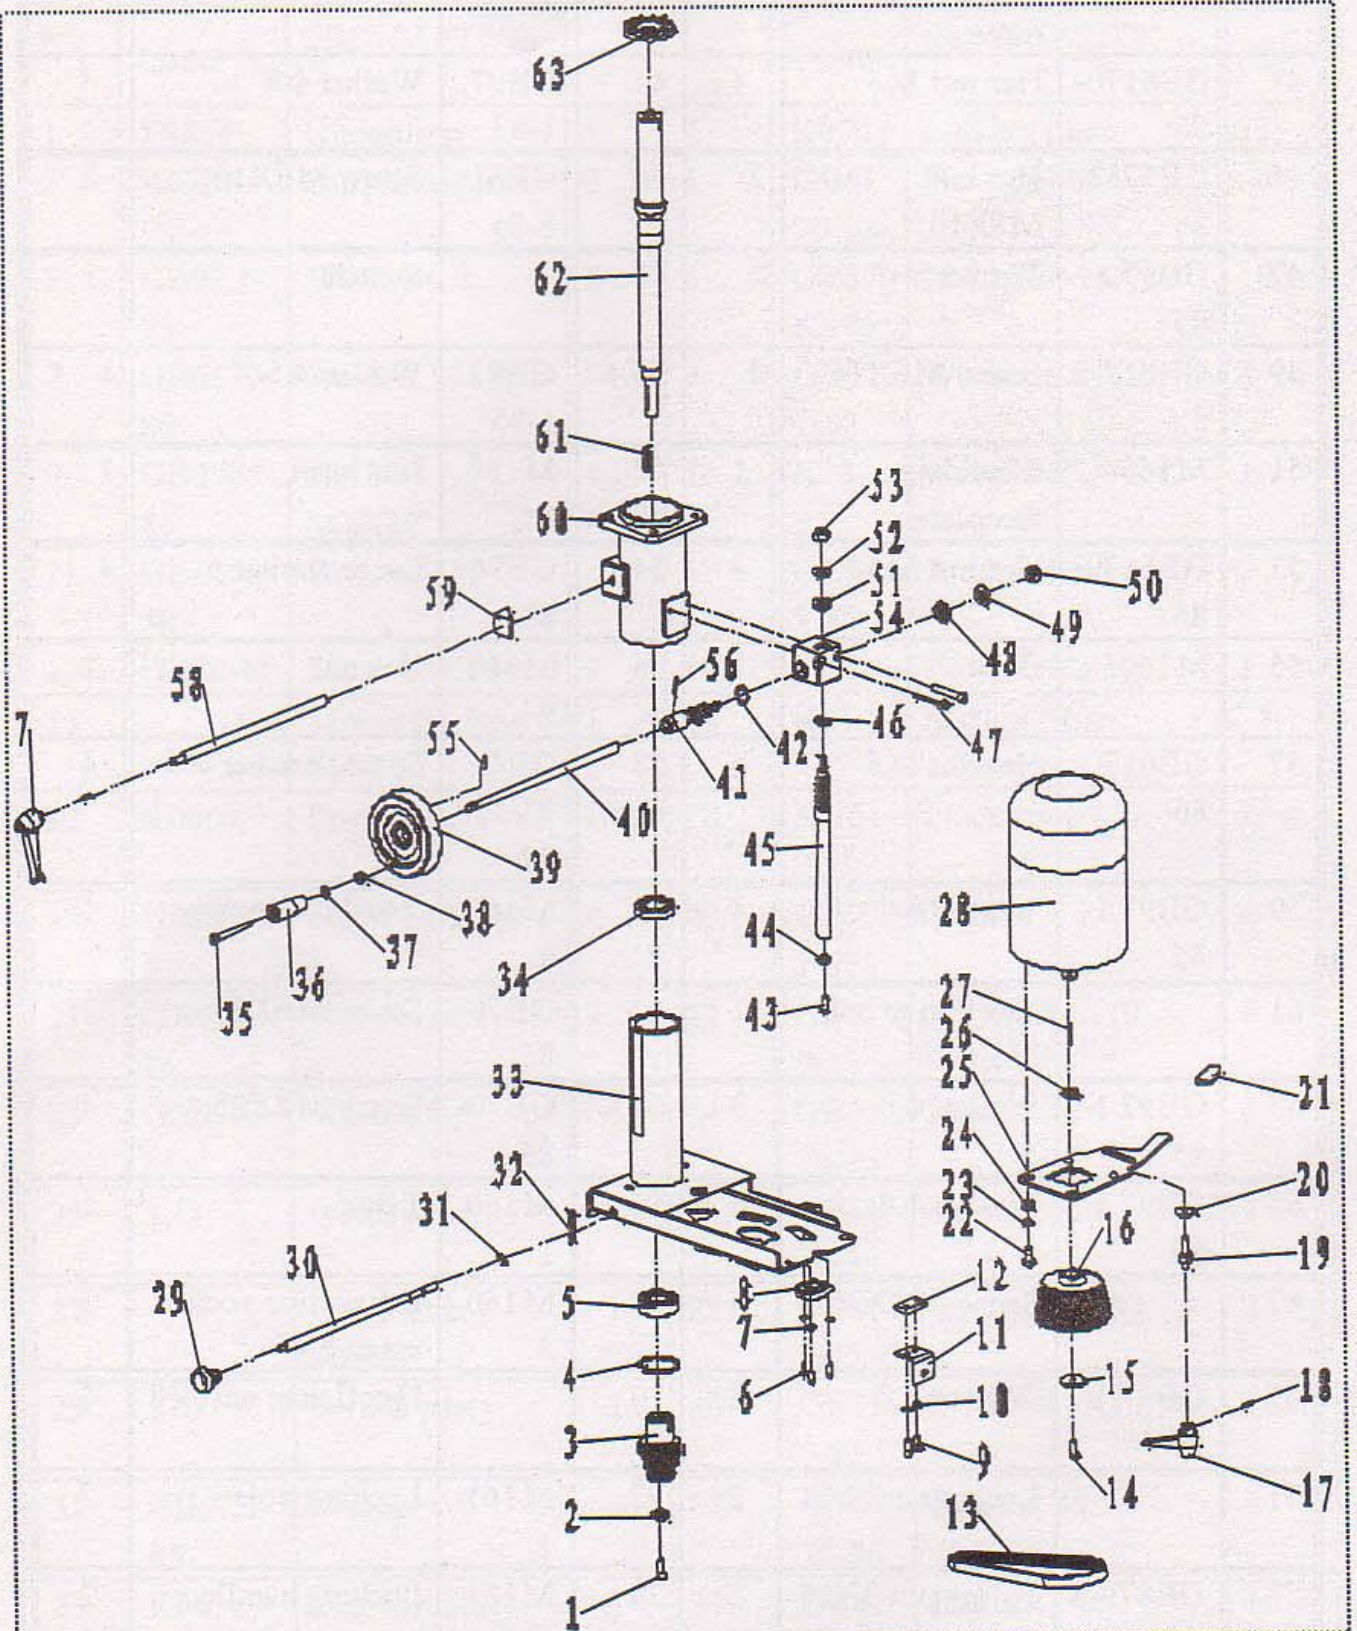


Parts List B

Part No.	Description	Part No.	Description
B01	Screw M6 x 16mm	B02	Circular Washer
B03	Driven Pulley	B04	C' Ring 47mm
B05	Bearing 6204	B06	Hex Bolt M5 x 12mm
B07	Washer M5	B08	Nut Bush
B09	Screw M6 x 14mm	B10	Washer M6
B11	Angle Plate	B12	Plate
B13	Cuneal Belt	B14	Screw M6 x 16mm
B15	Large Washer	B16	Motor Pulley
B17	Locking Handle	B18	Spring Pin 3 x 16mm
B19	Locking Bolt	B20	Large Washer M8
B21	Handle Coat	B22	Hex Bolt M8 x 16mm
B23	Washer M8	B24	Space bush
B25	Rotation Plate	B26	C Ring 19mm
B27	Key 6 x 25mm	B28	Motor
B29	Handgrip	B30	Locking Pole
B31	E' Ring 6mm	B32	Spring Clip
B33	Motor Rack	B34	Bearing 6005
B35	Screw M6 x 60mm	B36	Handle Bush
B37	Washer M6	B38	Hex Nut M6
B39	Hand Wheel	B40	Rotation Pole
B41	Gear Shaft	B42	C Ring 18mm
B43	Hex Bolt M6 x 16mm	B44	Large Washer M6
B45	Gear Shaft	B46	C Ring 18mm
B47	Screw M6 x 45mm	B48	Gear Bush
B49	Bearing	B50	Hex Locking Nut M10
B51	Gear Bush	B52	Bearing
B53	Hex Locking Nut M10	B54	Gear Box
B55	Set Screw M6 x 12mm	B56	Spring Pin 3 x 20mm
B57	Locking Handle	B60	Oriented Stand
B61	Key 5 x 30mm	B62	Spindle
B63	Fan Cap	B62C	Top Spindle
B62D	Routing Collet 1/2" Diameter	WASH	Set of Spacers & Locking Bolt

PARTS DRAWING C

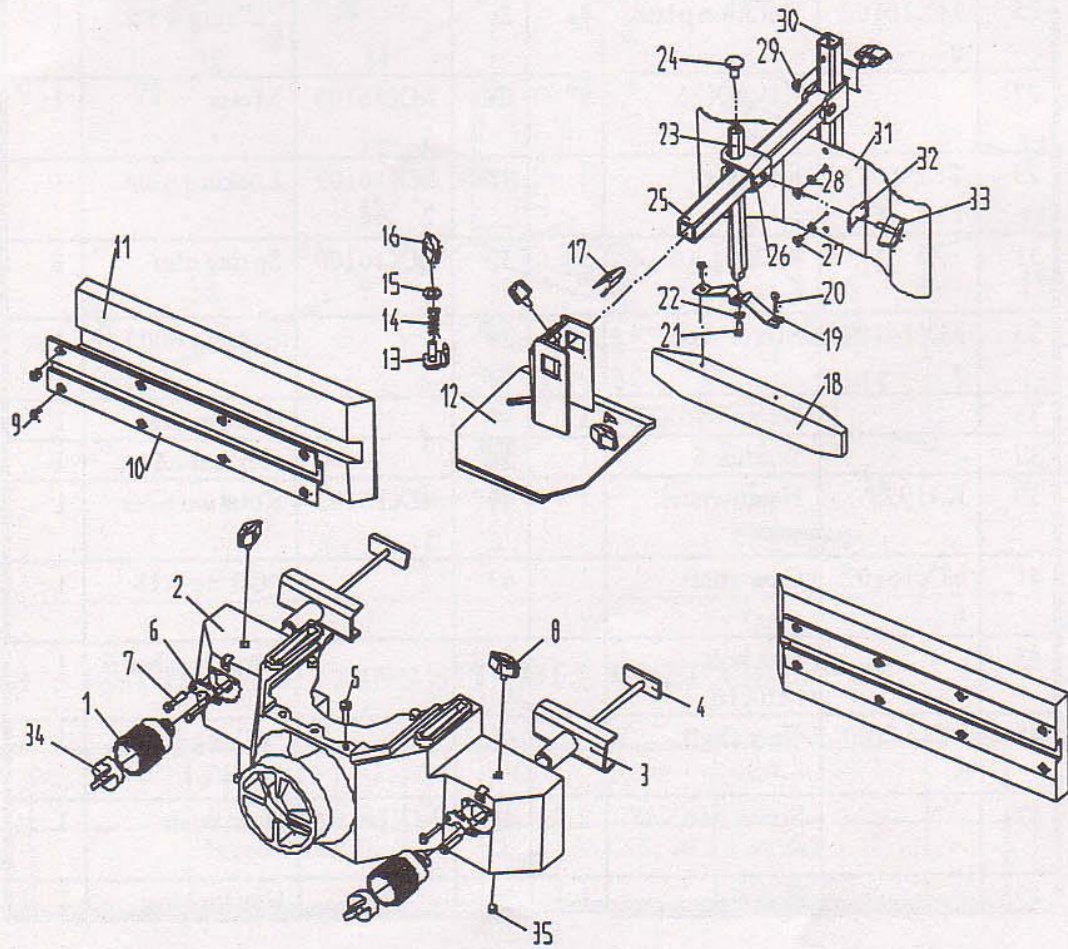

PARTS DIAGRAM D

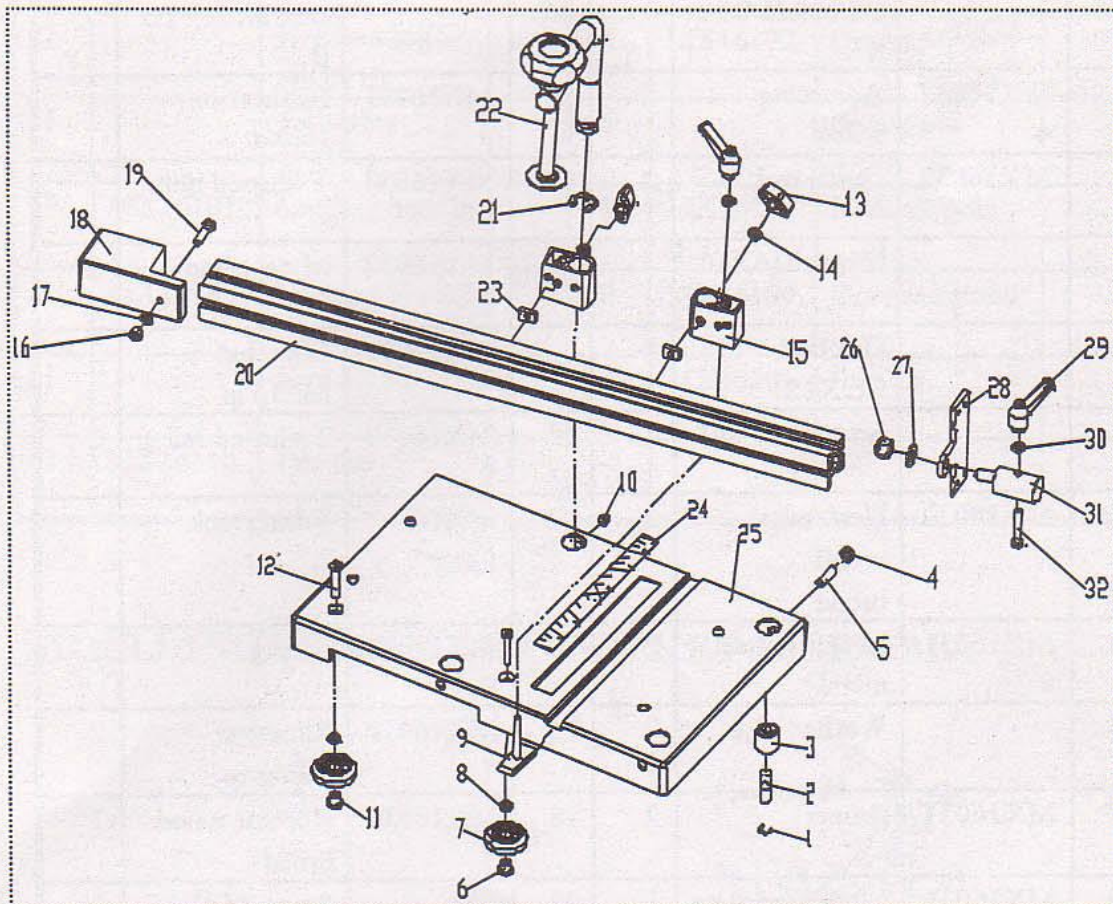

Parts List C

Part No.	Description	Part No.	Description
C01	Adjusting Wheel	C02	Exhaustion Socket
C03	Guide Rack	C04	T-Shaped Bolt
C05	Screw M6 x 10mm	C06	Metal Plate
C07	Hex Bolt M5 x 12mm	C08	Rhombic Handgrip
C11	Aluminium Fence	C12	Turing Rack
C13	Locking Sheet Metal	C14	Spring
C15	Washer M8	C16	Rhombic Handgrip
C17	Saucer	C18A	Vertical Hold Down
		C24	Bolt M8 x 10mm
C25	Square Leader Assembly	C26	Capstan
C27	Screw M4 x 6mm	C28	Washer M4
C29	Screw M4 x 6mm	C30	Standpipe
C31	Spring Protective Broad	C32	Locking Patch
C33	Rhombic Handgrip	C34	Locking Knob
C35	Set Screw M8 x 10mm		

Parts List D

Part No.	Description	Part No.	Description
D01	C-Shaped Ring	D02	Sliding Axle
D03	Eccentric Bush	D04	Hex Thin Nut M8
D05	Set Screw M8 x 25mm	D06	Eccentric Nut
D07	Trolley	D08	Washer M6
D09	T-Shaped Bolt	D10	Set Screw M8 x 10mm
D11	Homocentric Nut	D12	Socket Countersunk Screw M6 x 35mm
D13	Rhombic Handgrip	D14	Washer M6
D15	Connecting Block	D16	Hex Nut M6
D17	Washer M6	D18	Wood Block
D19	Hex Bolt M6 x 25mm	D20	Angle Fence
D21	E-Ring 12mm	D22	Press Handle



Woodworking machinery at its best!

Updated October 2020

**Charnwood, Cedar Court, Walker Road,
Hilltop Industrial Estate, Bardon Hill, Leicestershire, LE67 1TU**

Tel. 01530 516 926 Fax. 01530 516 929
email: sales@charnwood.net website: www.charnwood.net